



VS70_0321 Sauna Cube M 234x234

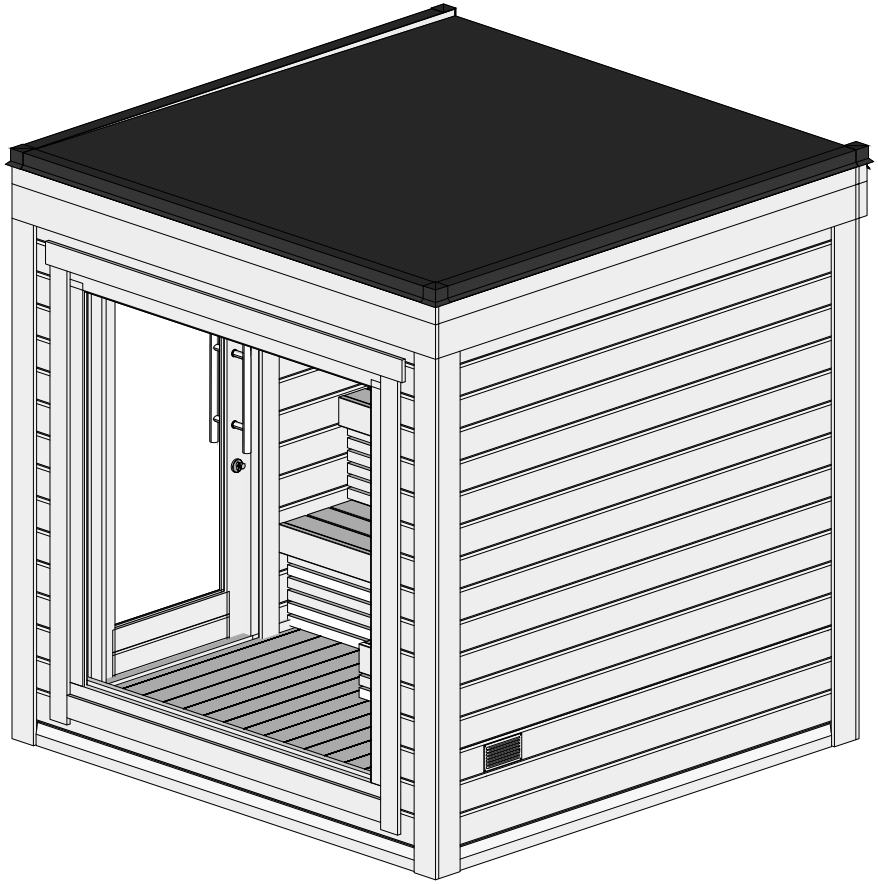

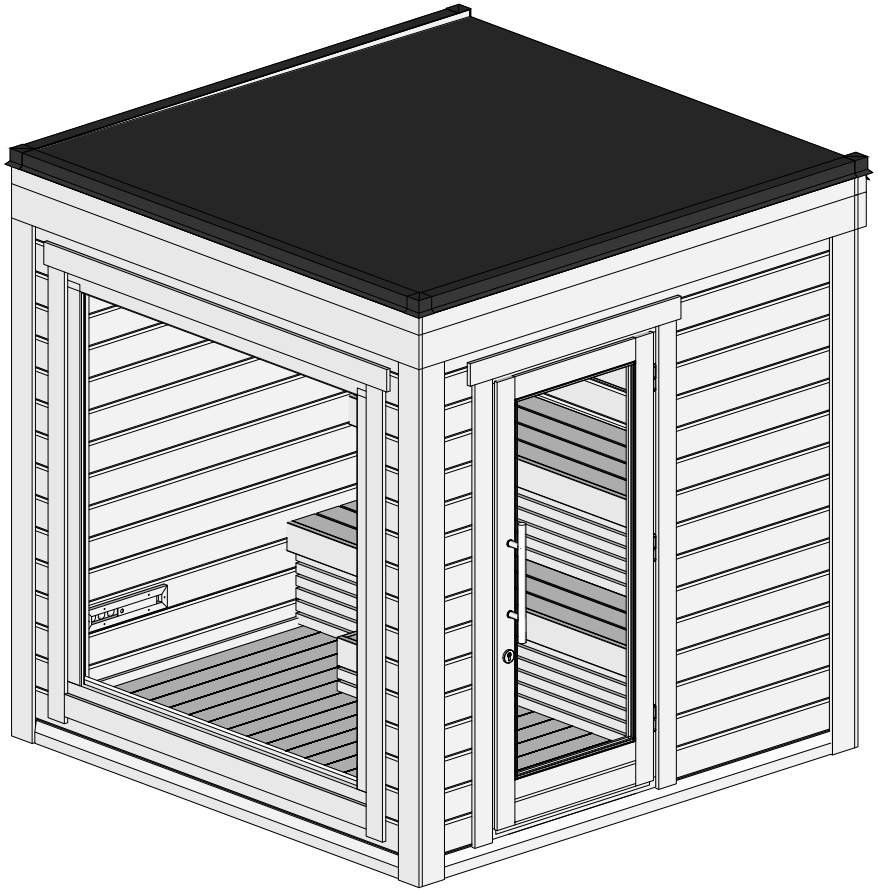


*This sauna can be built mirrored.

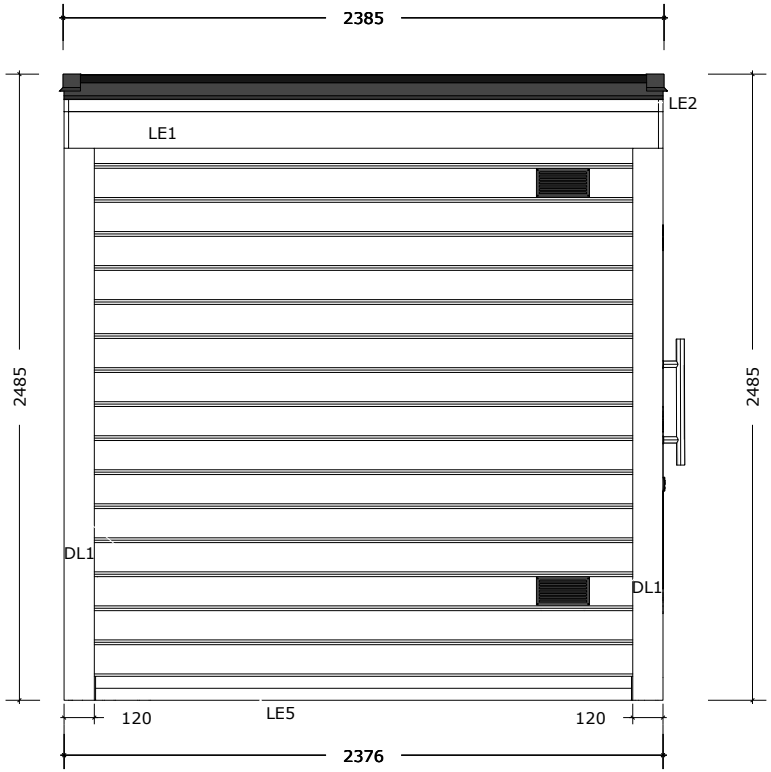


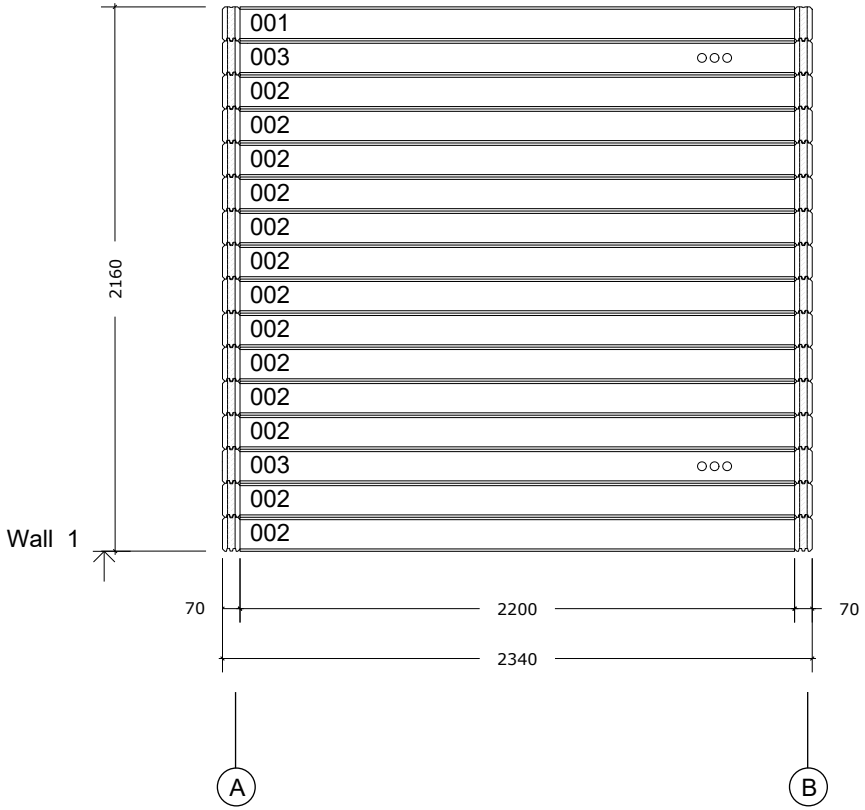


Logs with ventilation holes can be placed higher or lower. Please make sure it doesnt get covered with sauna bench!


Name	VS70_0321 Sauna Cube M 234x234						
Drawing	WALL 1				VS70_0321		
Profile	7.0x13.5	Scale	1:30	Print on	A4	Date	02.06.2026

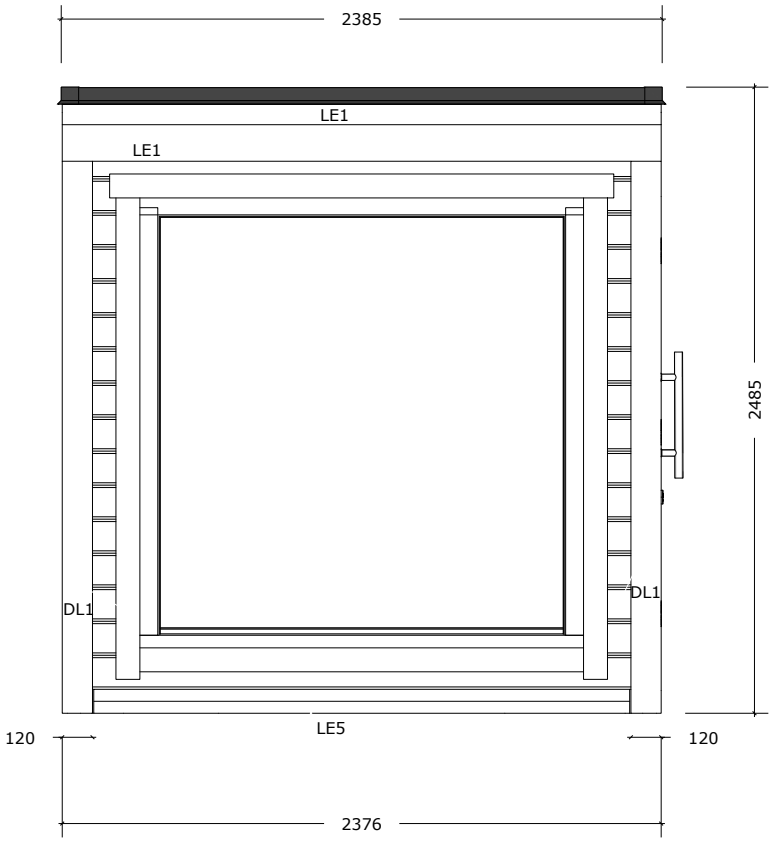

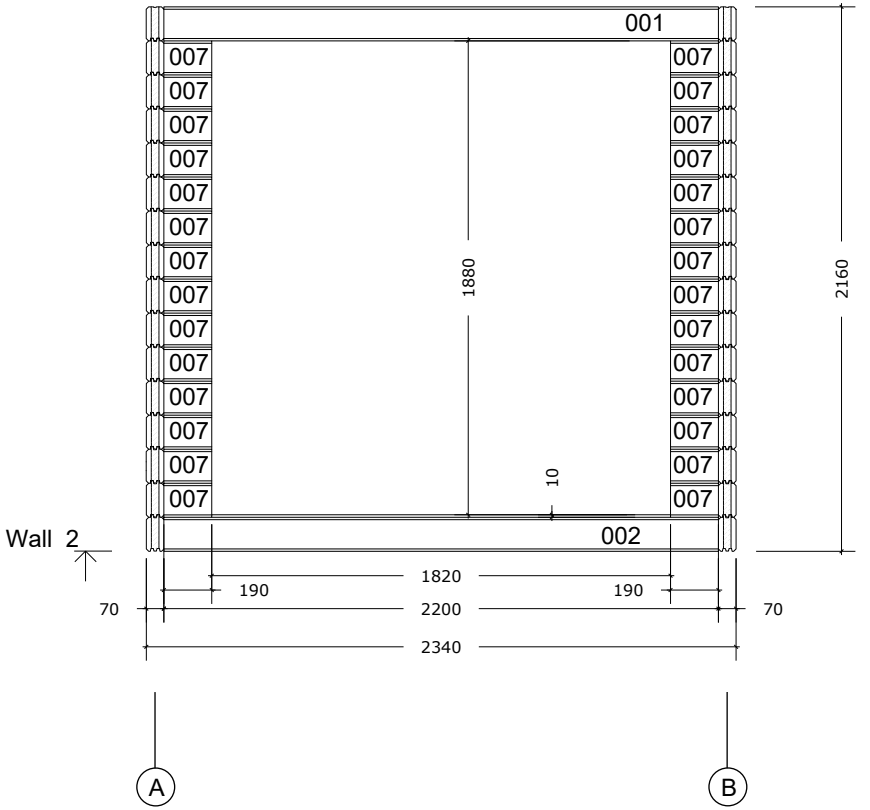


Name	VS70_0321 Sauna Cube M 234x234			
Drawing	WALL 2			VS70_0321
Profile	7.0x13.5	Scale 1:30	Print on A4	Date 02.06.2026

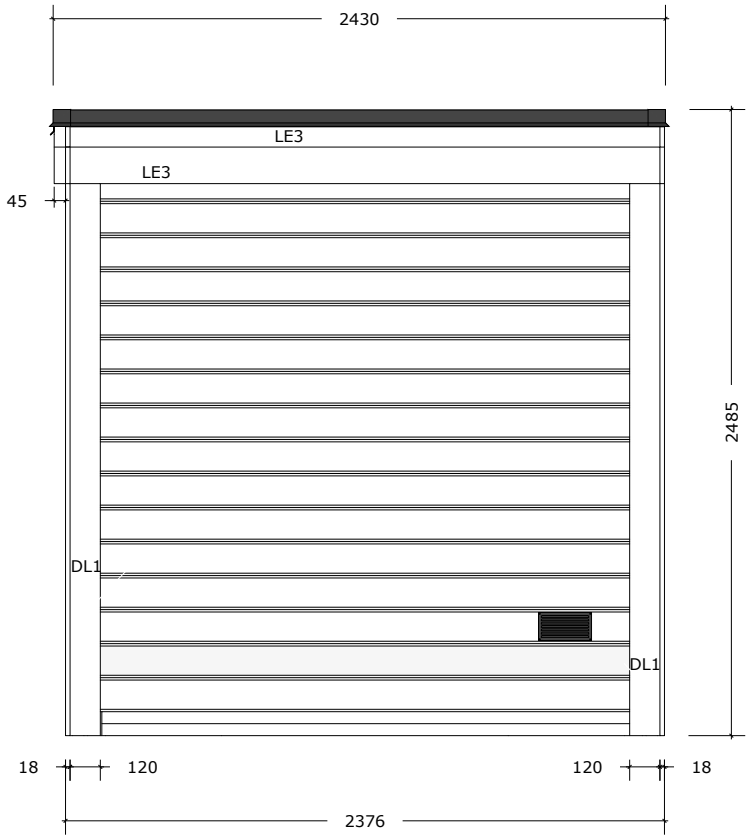


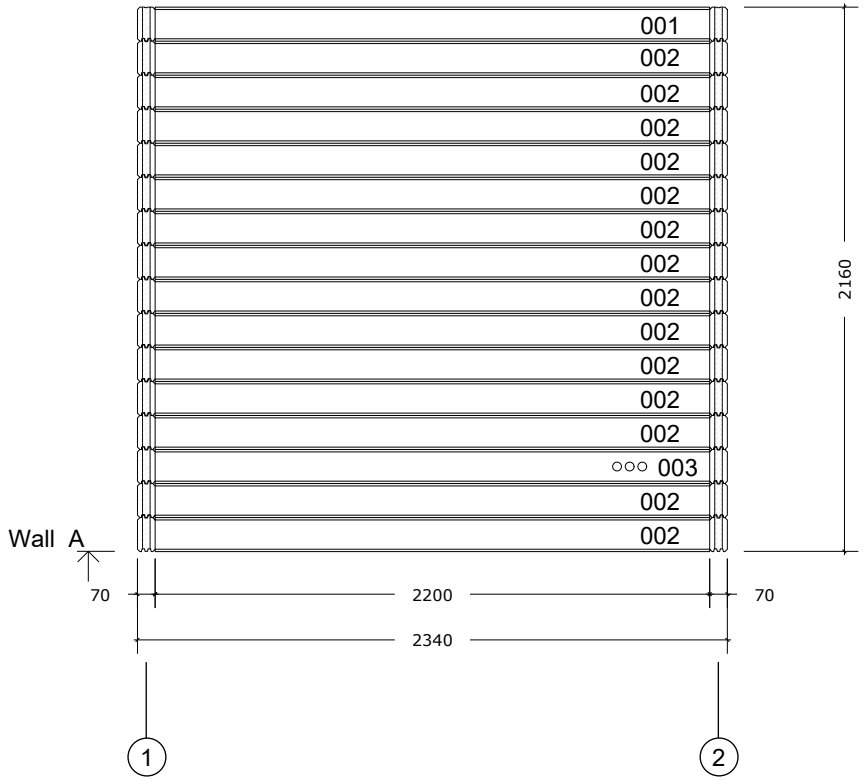


Logs with ventilation holes can be placed higher or lower. Please make sure it doesnt get covered with sauna bench!

Name	VS70_0321 Sauna Cube M 234x234			
Drawing	WALL A			VS70_0321
Profile	7.0x13.5	Scale 1:30	Print on A4	Date 02.06.2026

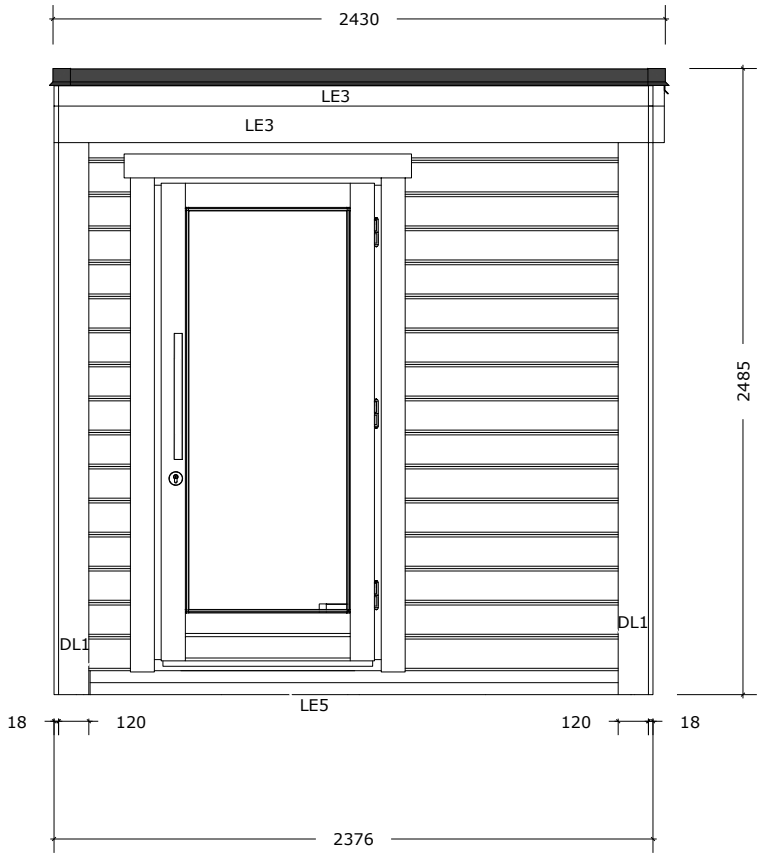


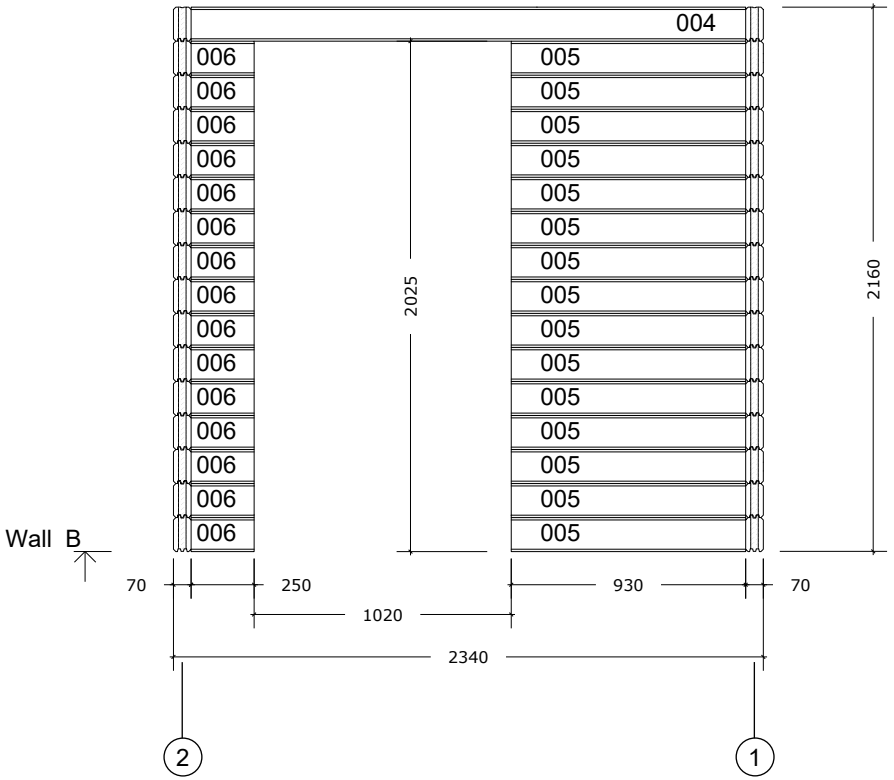


Name	VS70_0321 Sauna Cube M 234x234			
Drawing	WALL B			VS70_0321
Profile	7.0x13.5	Scale 1:30	Print on A4	Date 02.06.2026

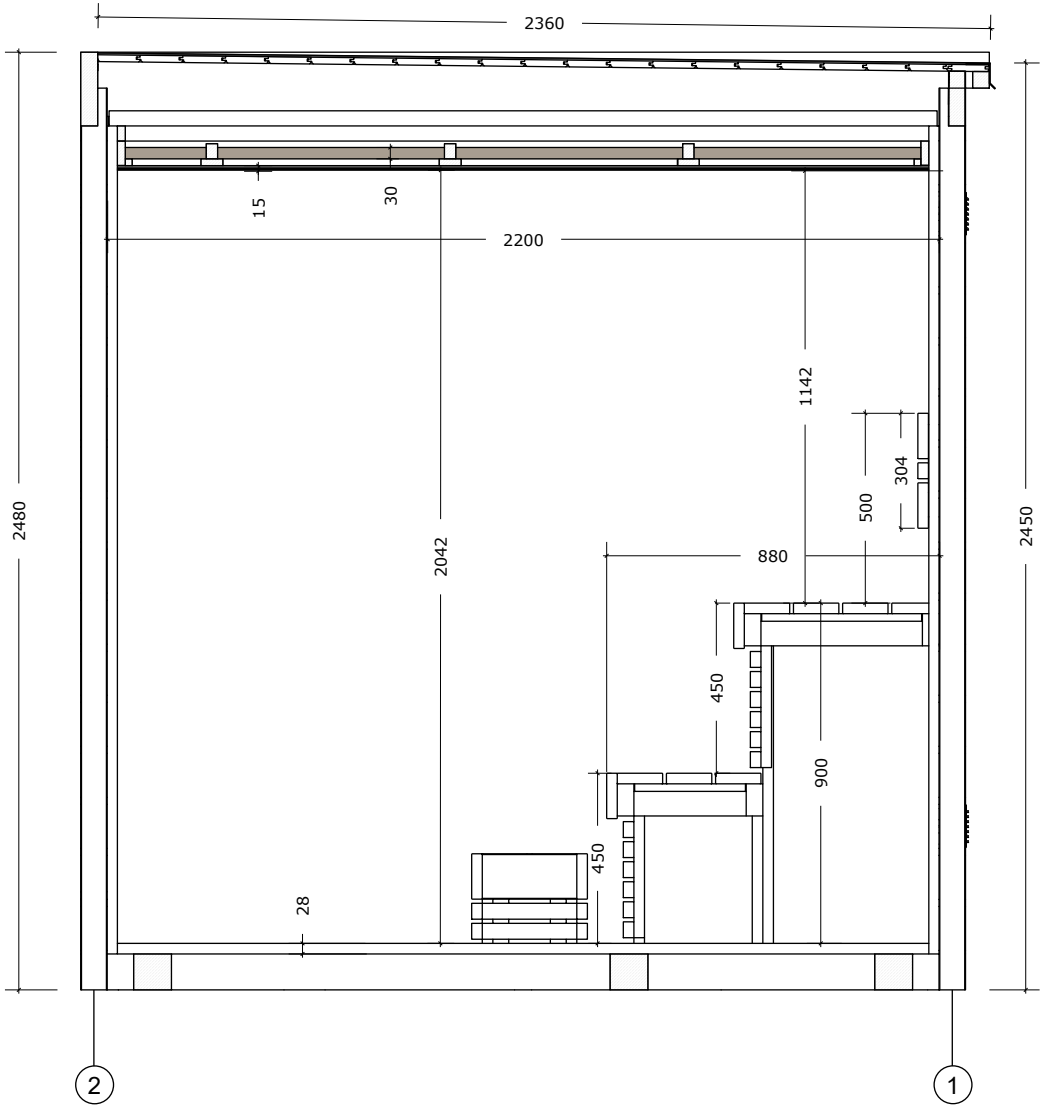


Name	VS70_0321 Sauna Cube M 234x234			
Drawing	Sauna			VS70_0321
Profile	7.0x13.5	Scale	1:20	Print on A4	Date 02.06.2026

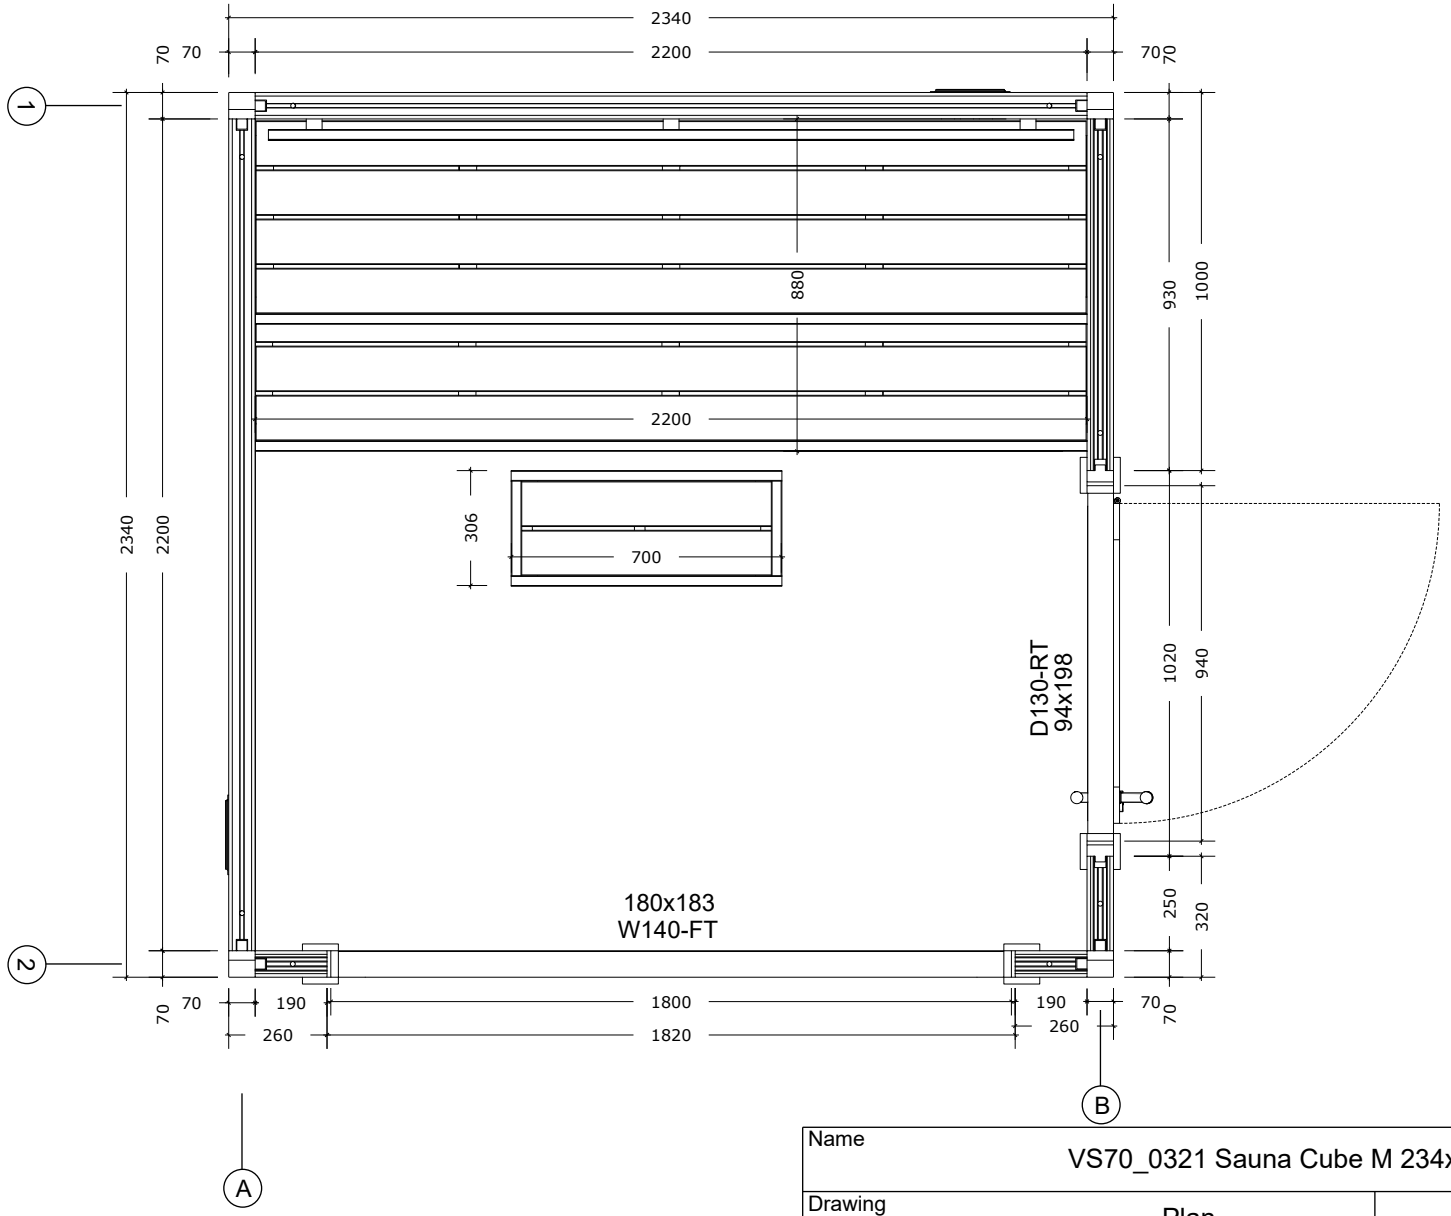


Name	VS70_0321 Sauna Cube M 234x234		
Drawing	Plan		VS70_0321
Profile 7.0x13.5	Scale 1:20	Print on A4	Date 02.06.2026

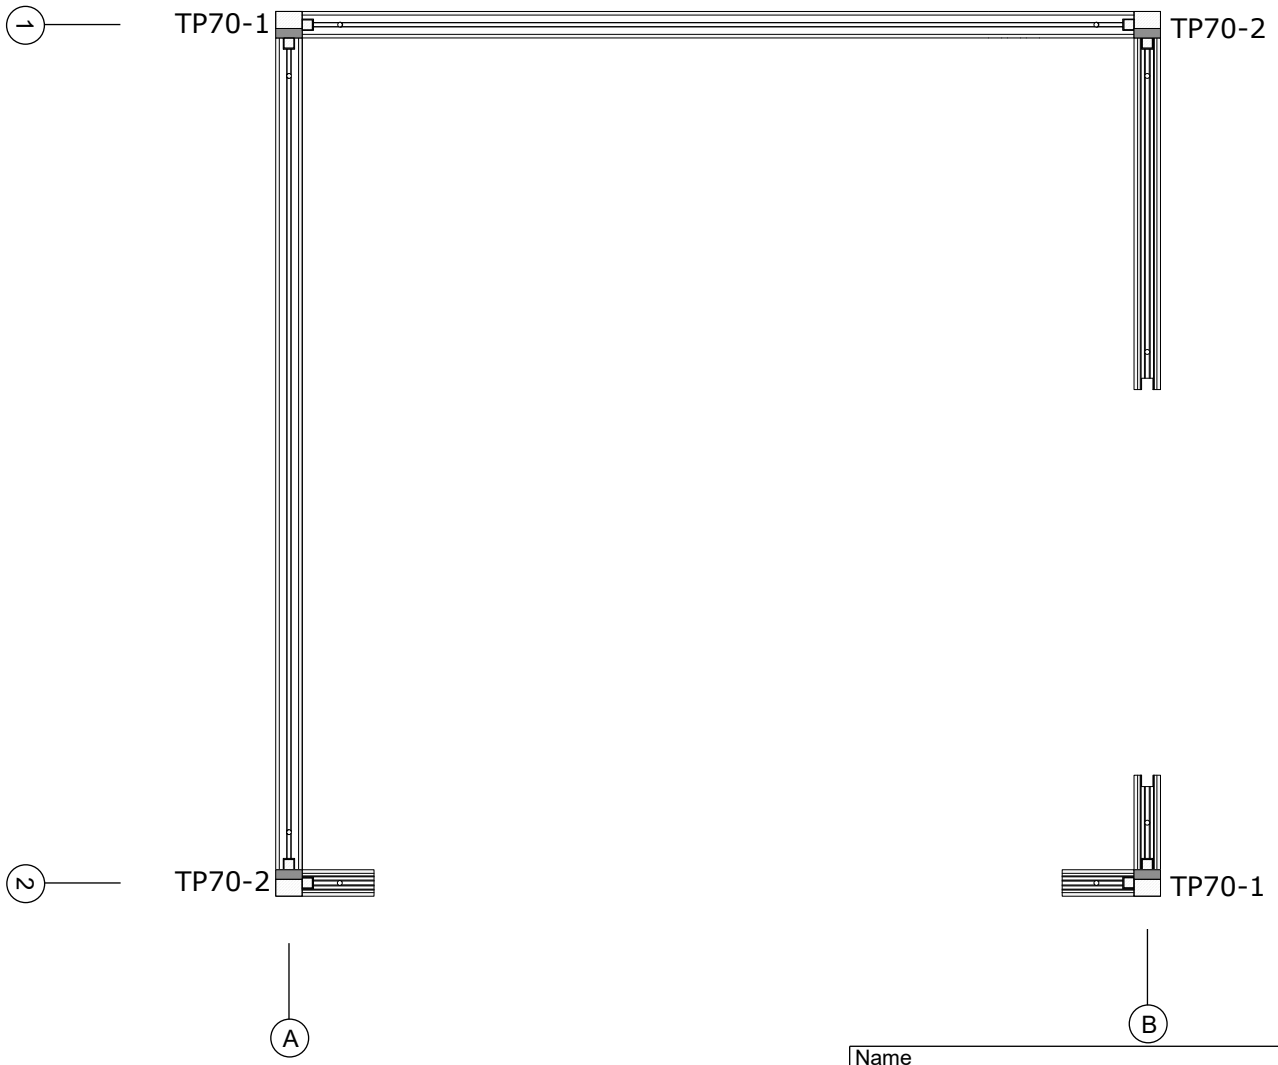


Name	VS70_0321 Sauna Cube M 234x234			
Drawing	SUPPORT POSTS		VS70_0321	
Profile 7.0x13.5	Scale 1:20	Print on A4	Date 02.06.2026	

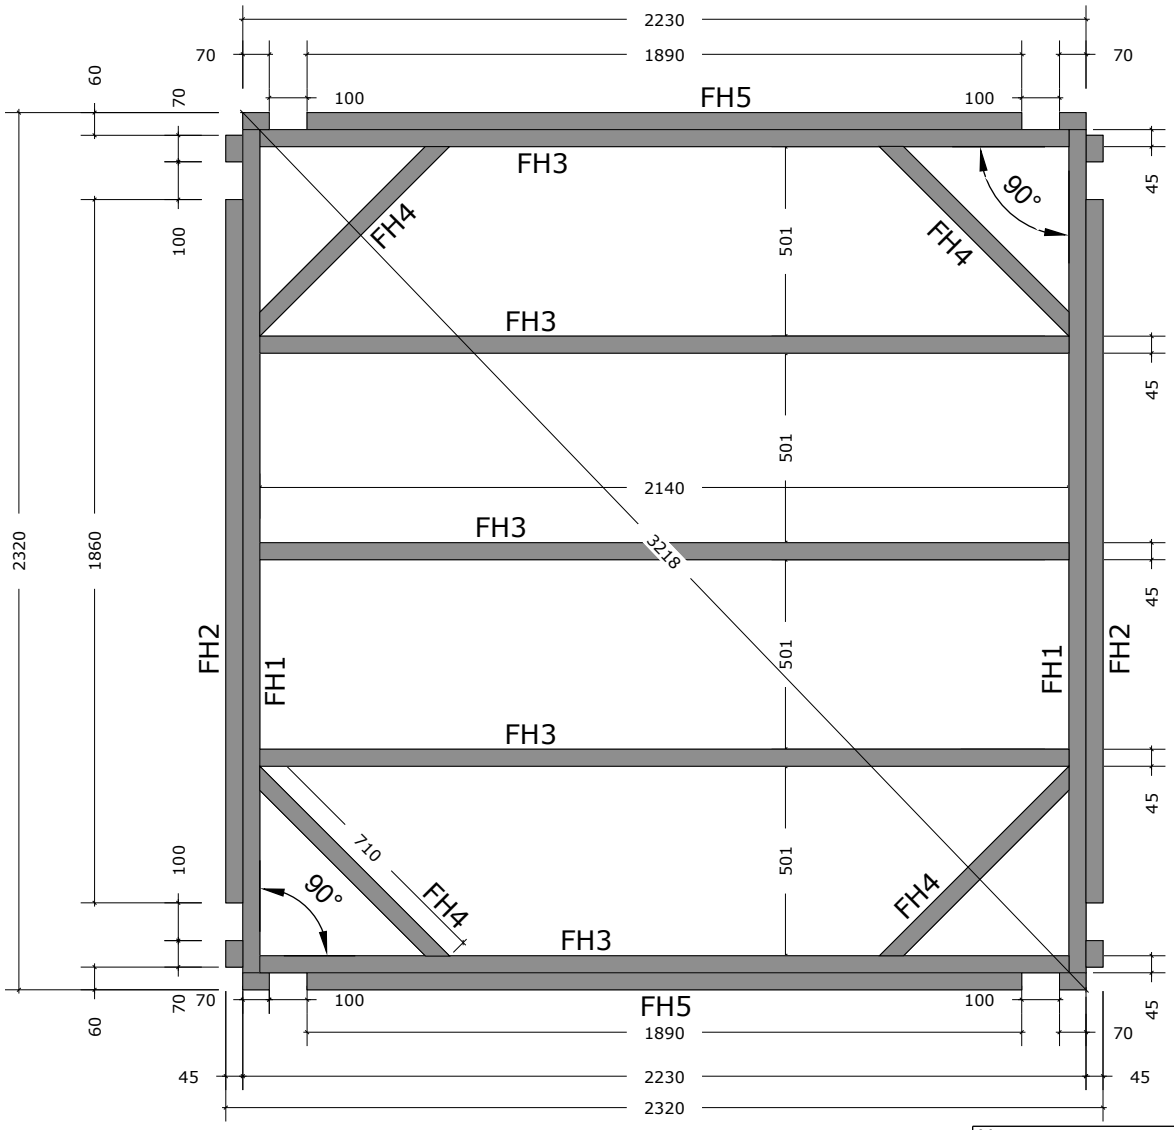


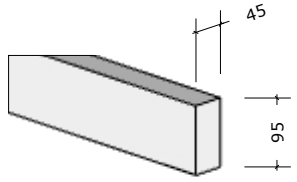


FH6 70 45

Name	VS70_0321 Sauna Cube M 234x234			
Drawing	Foundation Plan			VS70_0321
Profile 7.0x13.5	Scale 1:20	Print on A4	Date 02.06.2026	

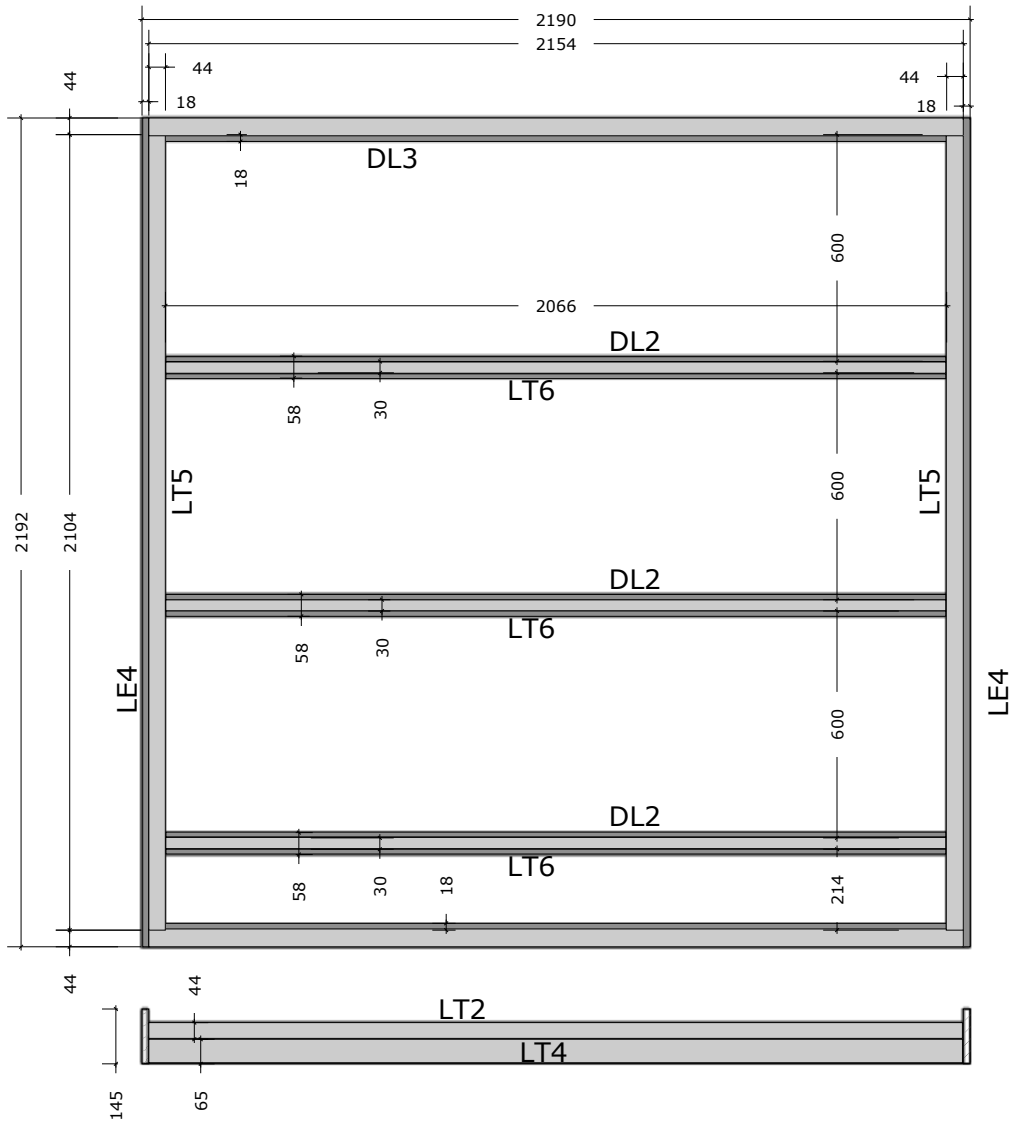



























Name	VS70_0321 Sauna Cube M 234x234			
Drawing	Ceiling Beams		VS70_0321	
Profile	7.0x13.5	Scale 1:20	Print on A4	Date 02.06.2026




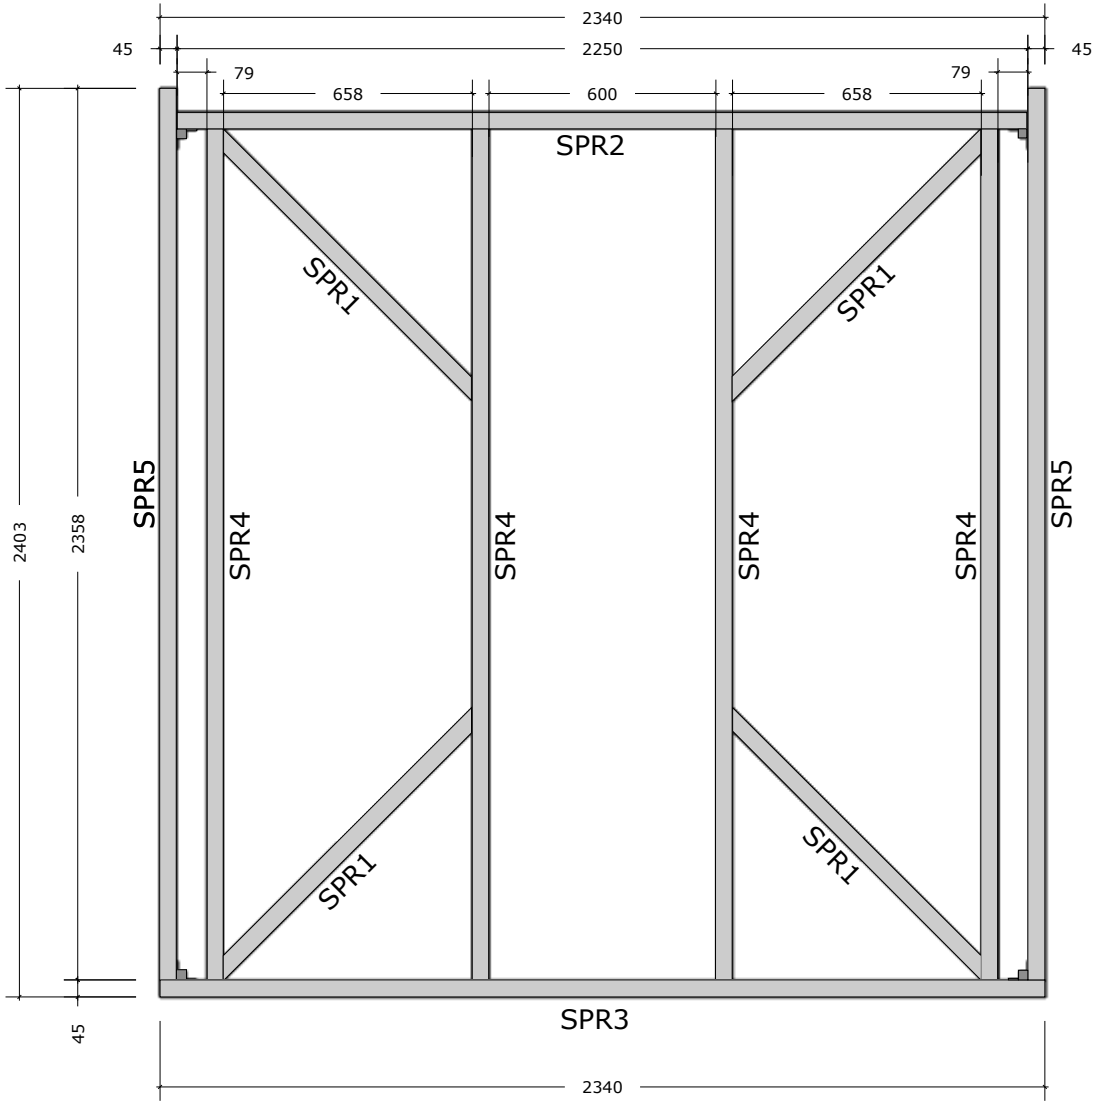





Name	VS70_0321 Sauna Cube M 234x234			
Drawing	Roof Beams		VS70_0321	
Profile	7.0x13.5	Scale 1:20	Print on A4	Date 02.06.2026






Pos	Specification VS70_0321 Sauna Cube M 234x234	Pcs.	Profile (mm)	Length (mm)
001		3	70 x 135	2200
002		28	70 x 145	2200
003		3	70 x 145	2200
004		1	70 x 135	2200
005		15	70 x 145	930
006		15	70 x 145	250
007		28	70 x 145	190
FH1	FOUNDATION BEAM (impregnated) 	2	45 x 95	2230
FH2	FOUNDATION BEAM (impregnated)  √	2	45 x 95	1860
FH3	FOUNDATION BEAM (impregnated) 	5	45 x 95	2140
FH4	FOUNDATION BEAM (impregnated) 45° 45°	4	45 x 95	710
FH5	FOUNDATION BEAM (impregnated) 	2	45 x 95	1890
FH6	FOUNDATION BEAM (impregnated) 	8	45 x 95	70
SPR1	Sparren - Rafter 45° 45°	4	44 x 120	975
SPR2	Sparren - Rafter 	1	44 x 145	2340
SPR4	Sparren - Rafter 	4	44 x 145	2250
SPR5	Sparren - Rafter 	2	45 x 195	2358
SPR3	Sparren - Rafter 	1	45 x 195	2340
TP70-1	SUPPORT POST 70x70 	2	97 x 97	2385
TP70-2	SUPPORT POST 70x70 	2	97 x 97	2385
DL1	Leiste - Lath 	8	18 x 120	2190
DL2	Leiste - Lath 	3	18 x 58	2065
DL3	Leiste - Lath 	2	18 x 18	2065
LT2	Balken - Joist 	1	44 x 44	2154

Pos	Specification VS70_0321 Sauna Cube M 234x234	Pcs.	Profile (mm)	Length (mm)
LT3	Balken - Joist	2	30 x 40	2190
LT4	Balken - Joist	2	44 x 65	2154
LT5	Balken - Joist	2	44 x 65	2104
LT6	Balken - Joist	3	30 x 40	2065
LE1	Leiste - Lath √	3	18 x 145	2390
LE2	Leiste - Lath √	1	18 x 95	2390
LE3	Leiste - Lath √	4	18 x 145	2420
LE4	Leiste - Lath √	2	18 x 145	2200
LE5	Leiste - Lath √	4	18 x 95	2140
DPL	Deckenleisten - Ceiling strips √	4	15 x 28	2200
	Fussbodenleisten - Floor strips √	4	18 x 40	2200
	Deckenbretter - Ceiling boards √	28+1	15 x 80	2190
	DACHBRETTER - ROOF BOARDS √	21+1	18 x 113	2250
	FUSSBODENBRETTER - FLOOR BOARDS √	20+1	28 x 113	2190
TL70-1	T-LEISTEN - T-STRIPS 70	2	45 x 70	1980
SA06-1	SAUNA PRM- Saunabank - Sauna bench	1	120x413	2198
SA05-1	SAUNA PRM- Saunabank - Sauna bench	1	120x543	2198
SA17-1	SAUNA PRM- Rücklehne - Backrest	1	56x304	2150
SA18-1	SAUNA PRM - Bänke Zwischenstück - Benches spacer	2	56x372	2190
SAP	SAUNA PRM - Saunahocker - Sauna stool	1		
SA13-1	SAUNA PRM- Stützpfosten für Saunabänke Support posts for sauna benches	2	28x42	307
SA13-2	SAUNA PRM- Stützpfosten für Saunabänke Support posts for sauna benches	1	28x42	757
SA38	SAUNA PRM- Lüftungsabdeckung Ventilation cover	3		


Pos	Specification VS70_0321 Sauna Cube M 234x234	Pcs.	Profile (mm)	Length (mm)
SA36	SAUNA- Luftschieber - Air slide 	3		
SH	MOUNTING PIECES 	3		
DBAND	DICHTUNGSBAND - SEAL TAPE  ✓			9.0 rm
PIR30	Insulation  ✓	7	30 x 600	1200
MF01	EPDM+Glue ✓	1	2600x2600	2600
W03	Winkel - Angle bracket 90x40x40 	6		
PS03	PFETTENSCHUH - JOIST HANGER 45X138 	8		
PL-1		4		2375
PL-C		4		50
KL-1	Gewindestange - Threaded Rod M12 	9		2000
KL-2	Gewindestange - Threaded Rod M12 	9		200
MUT21	Mutter - Nut M12 	27		
LMT02	Schlagmutter - Impact nut M12 	9		
BFM2	Befestigungsmutter - Fixing nut M12 	9		
US05	U-Scheibe - Washer M12 Ø40 	9		
TO01	adapter 	1		
SR4219A	Screw 4.2x19 	52		
SR50	Screw 4.8x25 	20		
SR3032	Screw 3.0x30 C3 	45		
SR3458	Screws 3.4x58 28mm Fussbodenbretter - Floor boads 	120		
SR3547	Screw 3.5x45 C3 	290		
SR52	Screw 5.0x42 	115		
SR5062	Screw 5.0x60 C3 	60		
SR5082	Screw 5.0x80 C3 	16		


Pos	Specification VS70_0321 Sauna Cube M 234x234	Pcs.	Profile (mm)	Length (mm)
SR5092	Screw 5.0x90 C3 	105		
SR50122	Screw 5.0x120 C3 	110		
SR64	Screw 6.0x50ÜP 	7		
SR60202	Screw 6.0x200 C3 	38		
NG2550	2.5x50 Nails 	215		
	✓ **- Cut into length on site (if needed)!**			

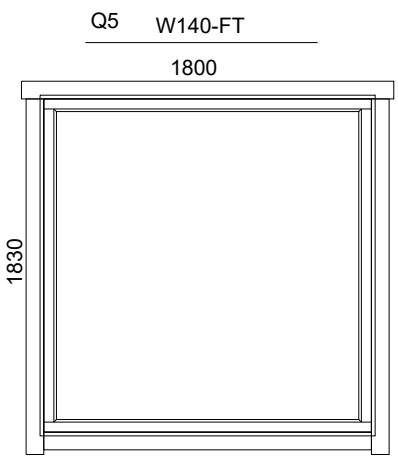
Pos	Specification VS70_0321 Sauna Cube M 234x234	Pcs.	Profile (mm)	Length (mm)
	WINDOW 1800x1830 W5-S70F-0XT-18001830  Fixed/ Fest/ Fikseeritud double-pane tempered glass gehärtete ISO Glas 2-fach 2x klaaspakett, karastatud	1		
VP3529-	Q4-Q6 Window sill - Fensterbank 	1		1758
PL2-1	Trims - Rahmenleisten - Piirdeliistud 18x58  √	1	18 x 58	1760
PL3-1	Trims - Rahmenleisten - Piirdeliistud 18x95  √	2	18 x 95	2000
PL3-2	Trims - Rahmenleisten - Piirdeliistud 18x95  √	4	18 x 95	1910
PL3-3	Trims - Rahmenleisten - Piirdeliistud 18x95  √	1	18 x 95	1760
	√ - Cut into length on site (if needed)!			

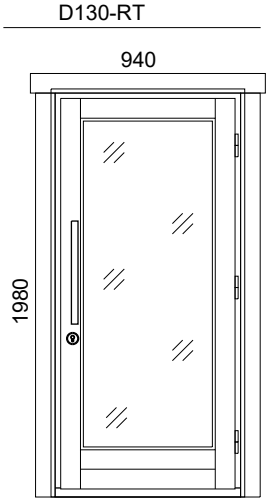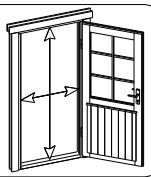Pos	Specification VS70_0321 Sauna Cube M 234x234	Pcs.	Profile (mm)	Length (mm)
	DOOR 940x1980 D0-C70R-0XT-09401980  Right handed / DIN rechts / paremakäeline Clear opening/ durchgangsmaß/ ava suurus 812x1872mm  double-pane tempered glass gehärtete ISO Glas 2-fach 2x klaaspakett, karastatud 	1		
PL3-5	Trims - Rahmenleisten - Piirdeliistud 18x95 √	2	18 x 95	1140
PL3-4	Trims - Rahmenleisten - Piirdeliistud 18x95 √	4	18 x 95	1960
SKK8080	8.0x80SKK LRV Handle - Handgriff 	2		
LRV-LK	LRV - Keyhole cover plate - Schlüsselloch Abdeckplatte 	1		
LS-LRV	LRV Cylinder lock - Zylinderschloss 	1		
LRV-KP	LRV Handle - Handgriff 	1		
	✓ **- Cut into length on site (if needed)!**			

Aken	Q4-Q6	-	paigaldusjuhis
Window	Q4-Q6	-	assembly instructions
Fenster	Q4-Q6	-	Montageanleitung

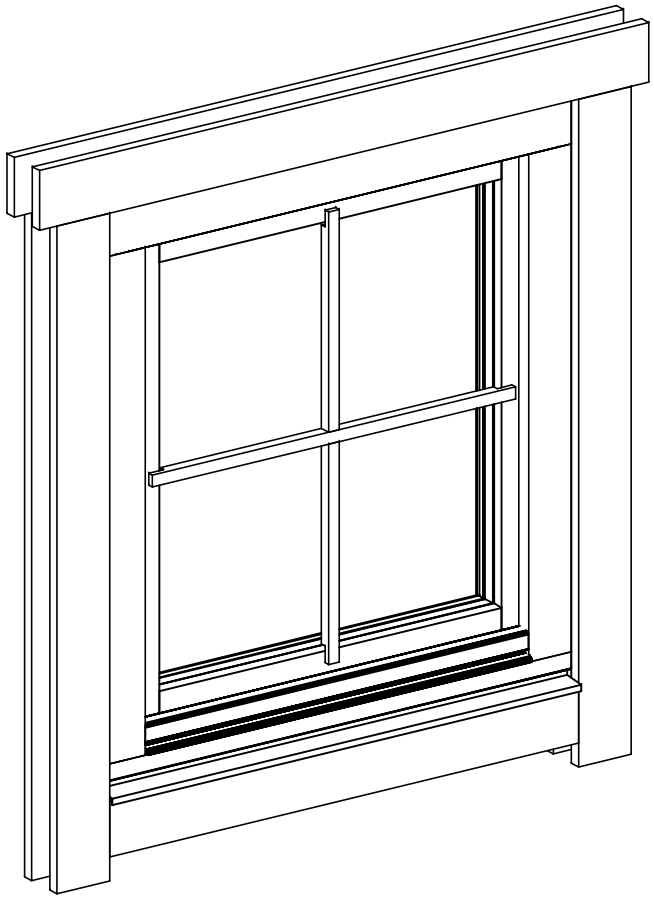


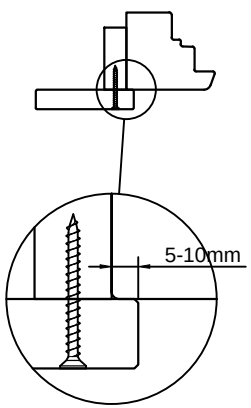


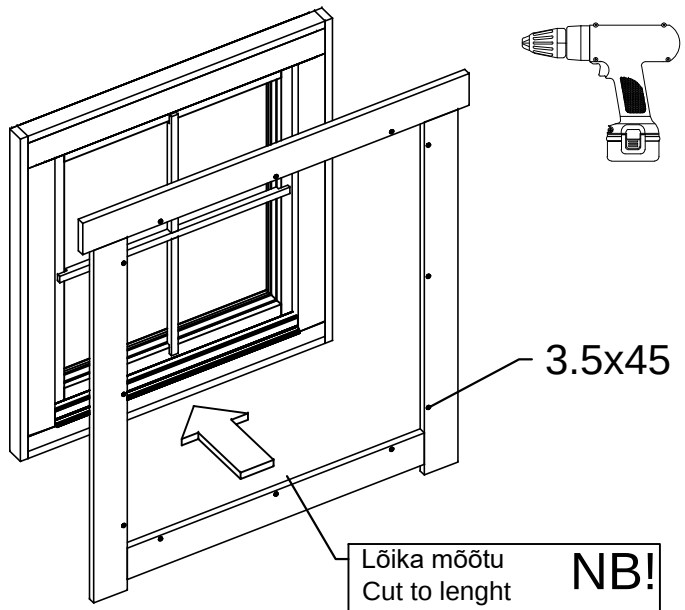

Lõika mõõtu
Cut to lenght
Absägen
- 10mm / -20mm


NB!




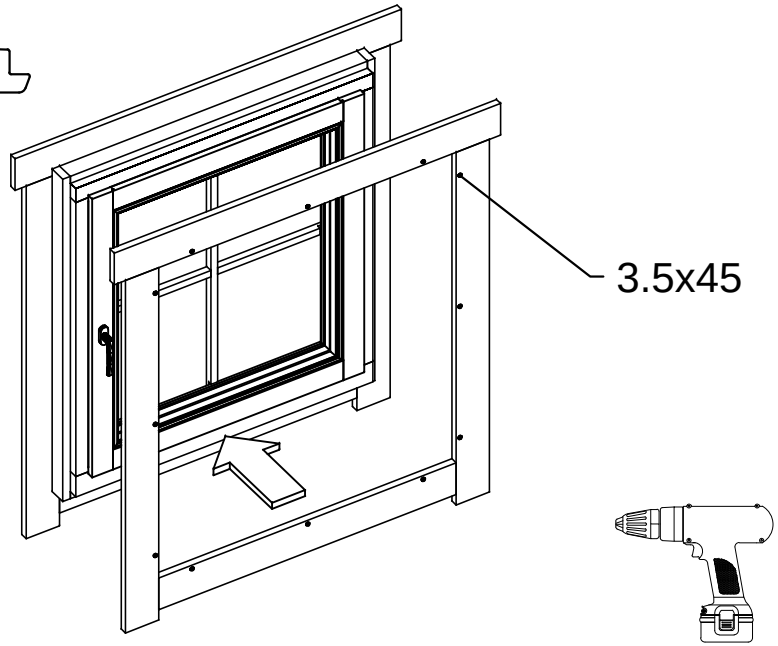

Vihmaliist / Rain strip / Wasserleiste


Q5-Q6

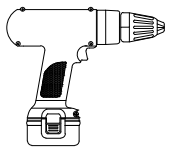

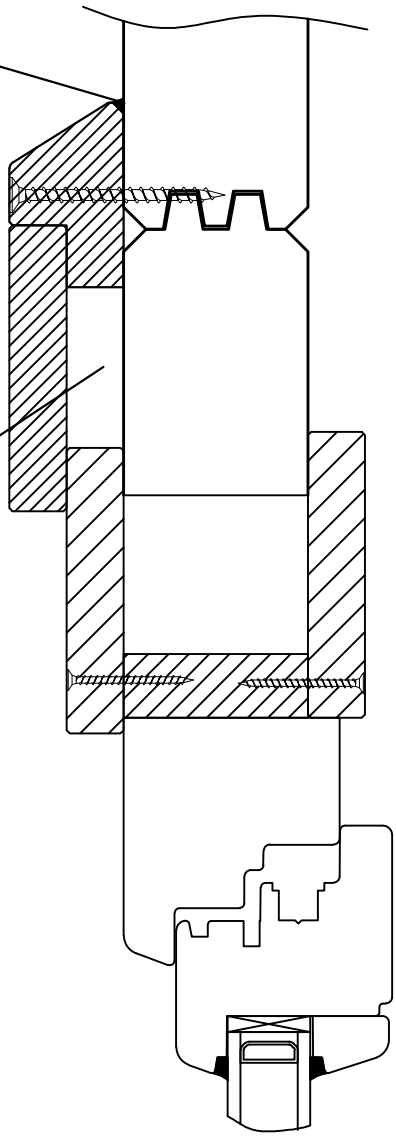

NB!
- Monteerida juhul kui ese on välja toodud maja spetsifikatsioonis!
- Install only if the item is listed in the house specification!
- Nur montieren wenn die Leiste in der Teileliste gezeigt ist!


Veeplekk / Window sill / Fensterbank

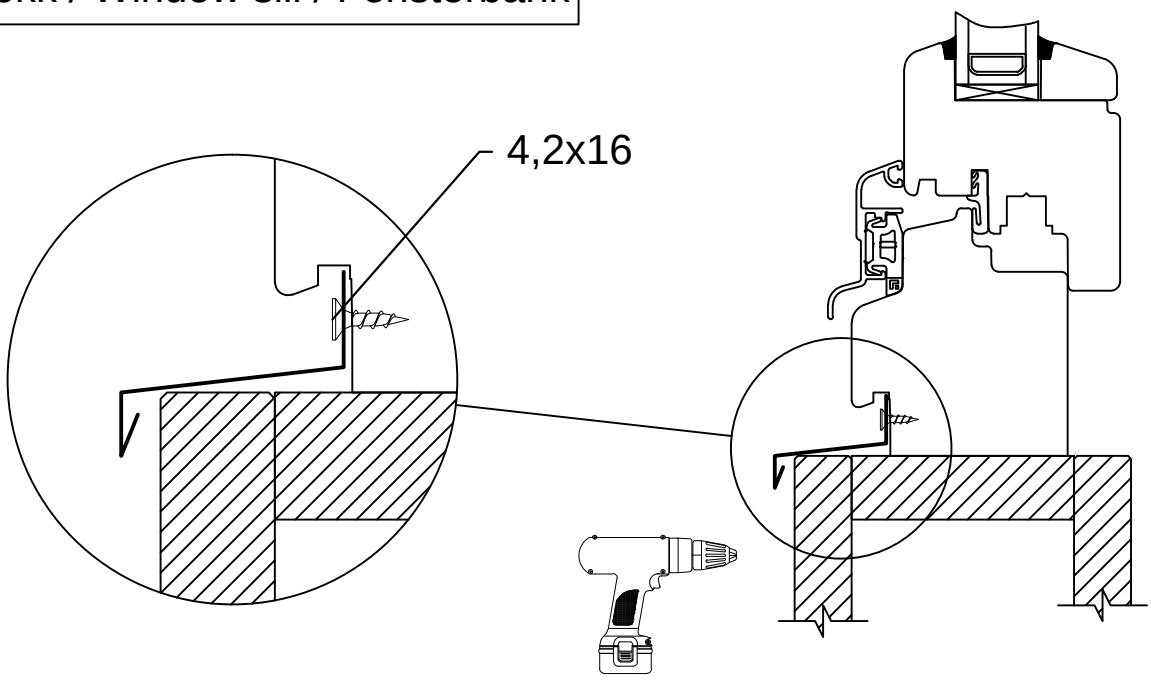

D130-RT


Installation instructions / Aufbauanleitung / Paigaldusjuhend

1

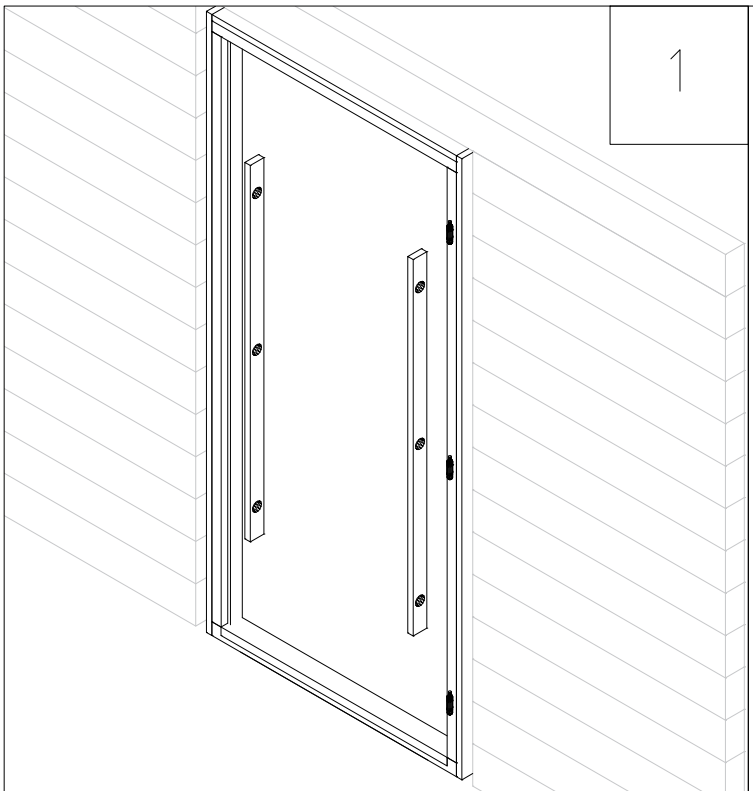

Lift the frames into the doorway and level!
Den Rahmen in die Türöffnung stellen und Nivellieren!
Leng tõsta ukseauku ja loodida!


2

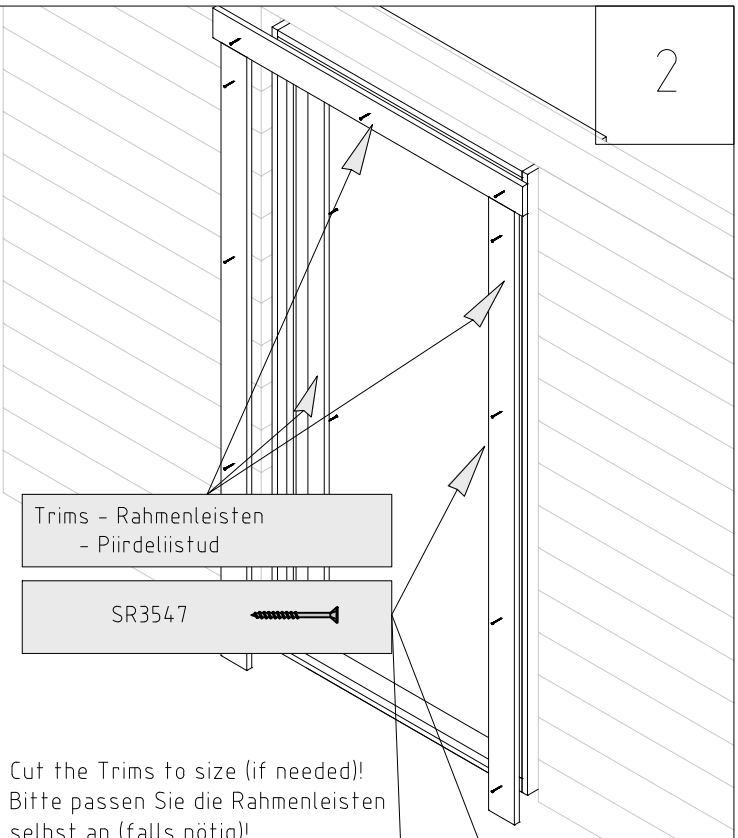


Cut the Trims to size (if needed)!
Bitte passen Sie die Rahmenleisten selbst an (falls nötig)!
Vajadusel lõika piirdeliistud mõõtu!

NB! When regulating the door at a later time, it may be necessary to reassemble the Trims!
NB! Bei der späteren Regulierung der Tür kann es erforderlich sein die Rahmenleisten nochmal abzuschrauben und anpassen!
NB! Ukse hilisemal reguleerimisel võib olla vajadus liistud uuesti lahti võtta!


WAND - WALL - SEIN 44mm

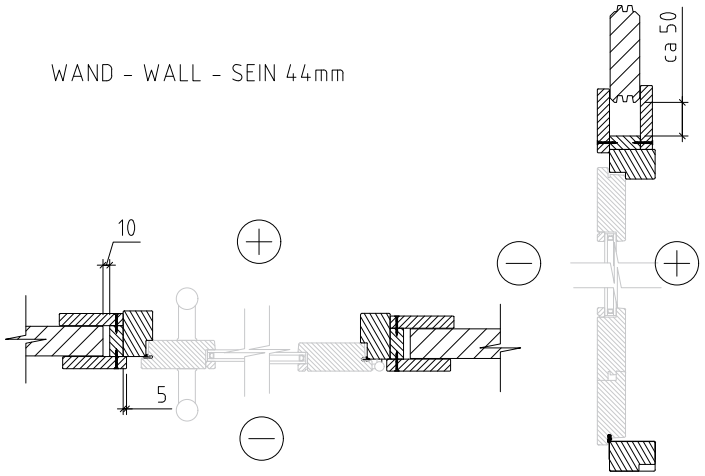


WAND - WALL - SEIN 58mm

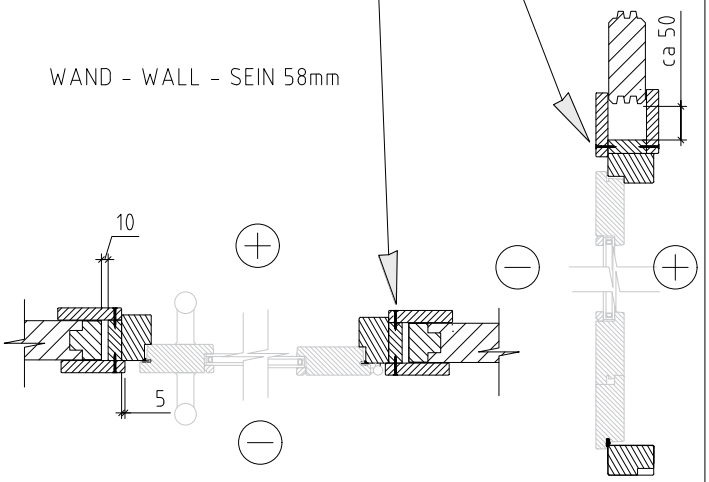

WAND - WALL - SEIN 70mm

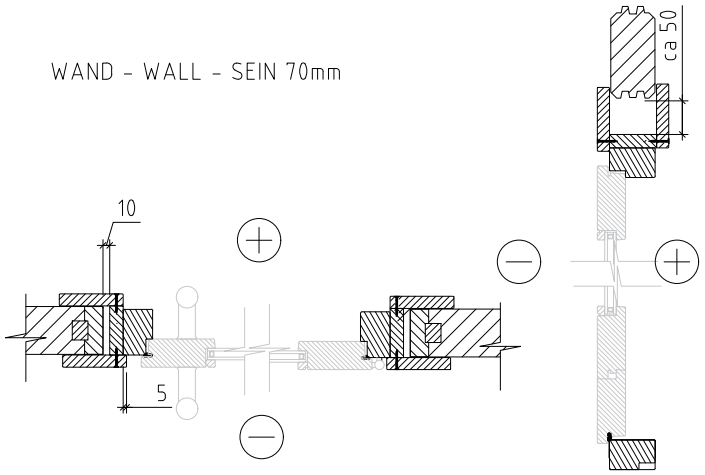

WAND - WALL - SEIN 92mm

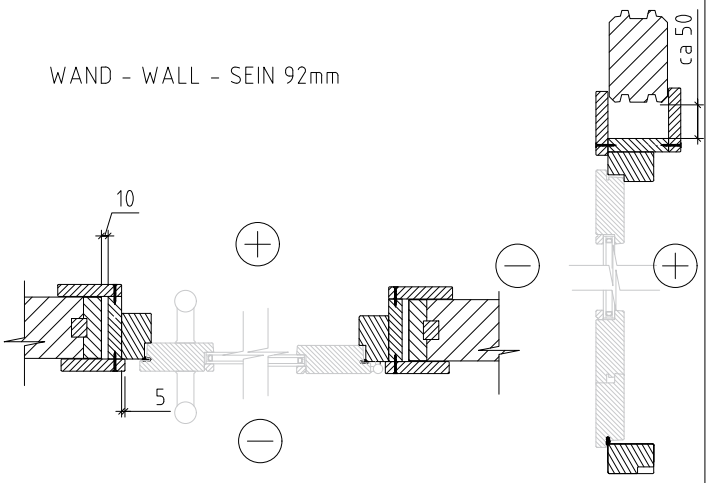


D130-RT

Installation instructions / Aufbauanleitung / Paigaldusjuhend


3




4

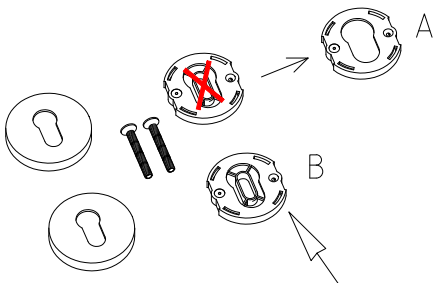


LRV-LK

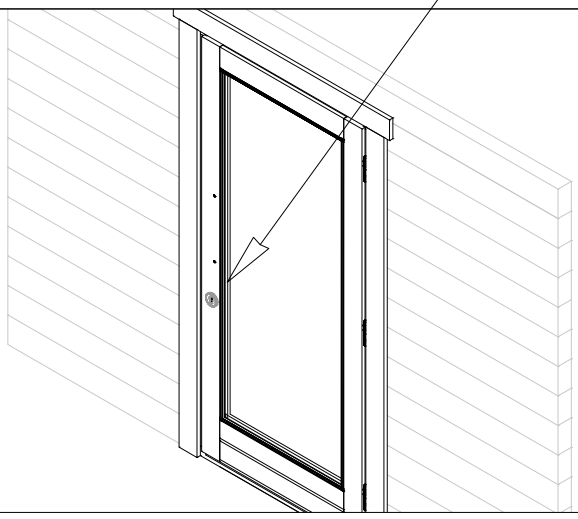

Outside - Aussen - väljas

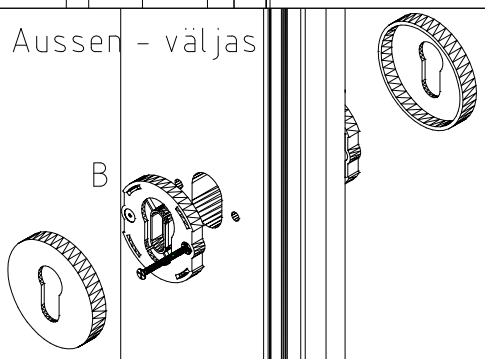


Inside - Innen - sees

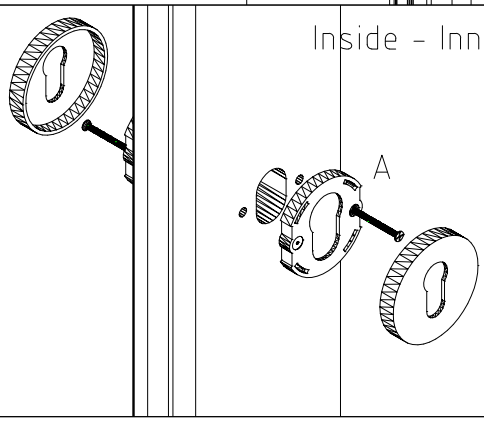

NB! Before attaching the cover plates, check the suitability of the lock cylinder!
NB! Vor dem Anbringen der Abdeckplatte ist die Eignung des Schließzylinders zu prüfen!
NB! Enne katikute kinnitamist kontrollida lukusüdamiku sobivust!


5

Inside - Innen - sees

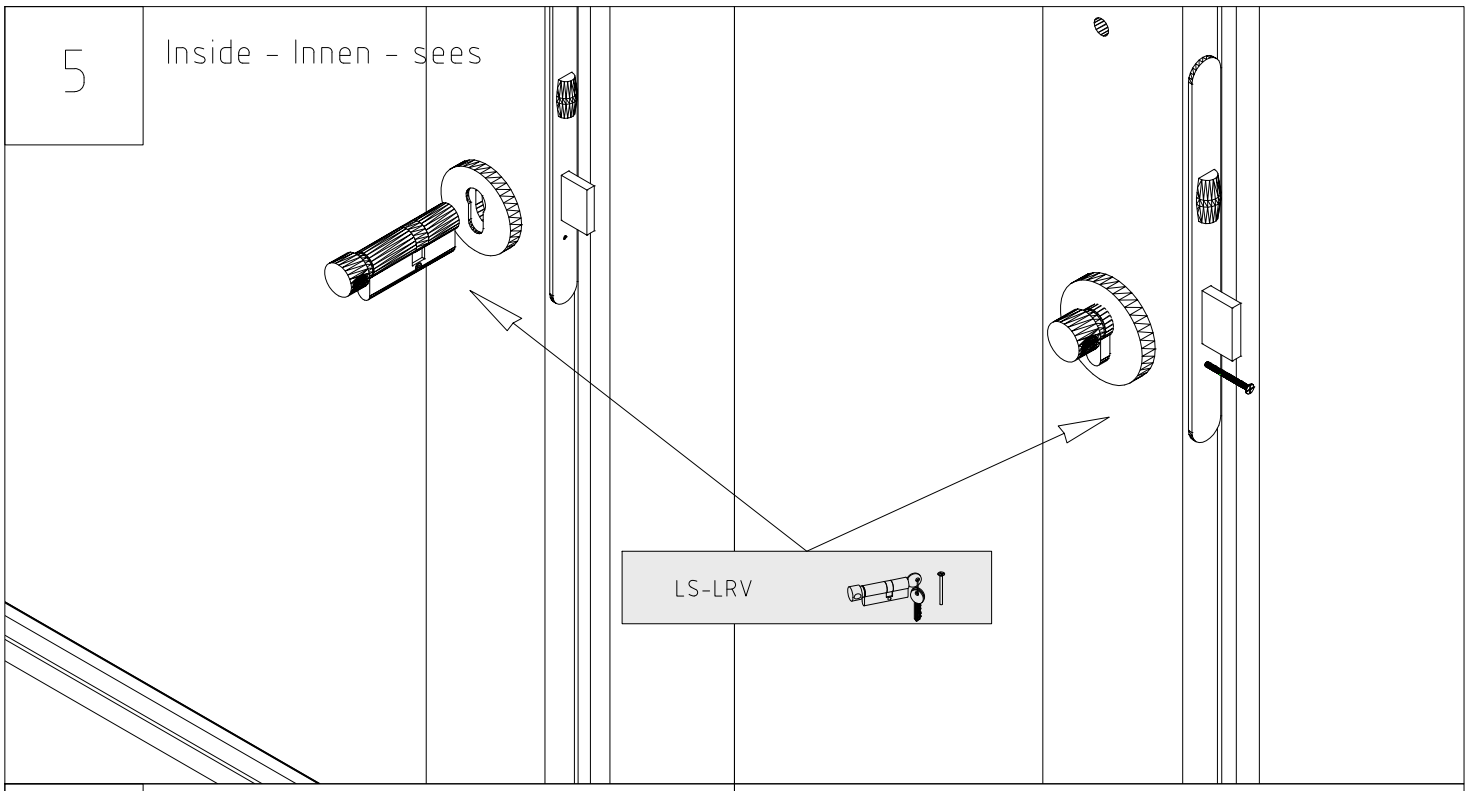



6


Unscrew - abschrauben - lahti kruvida

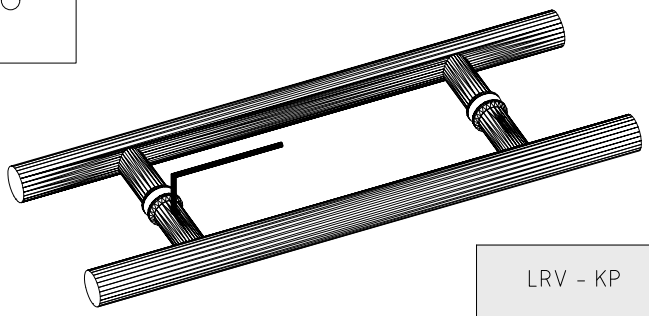

Remove the screws in the package - Entfernen Sie die Schrauben in der Verpackung - eemaldage pakendis olevad kruvid

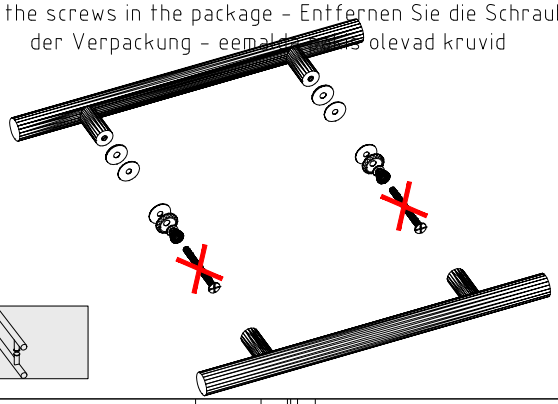






Inside - Innen - sees


Screw - Schrauben - kinni kruvida

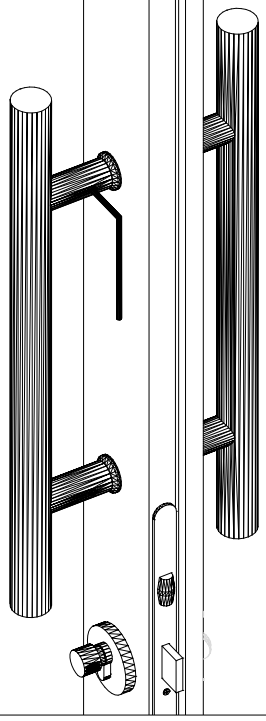

D130-RT

Installation instructions / Aufbauanleitung / Paigaldusjuhend


Rain strip / Wasserleiste / Vihmaliist

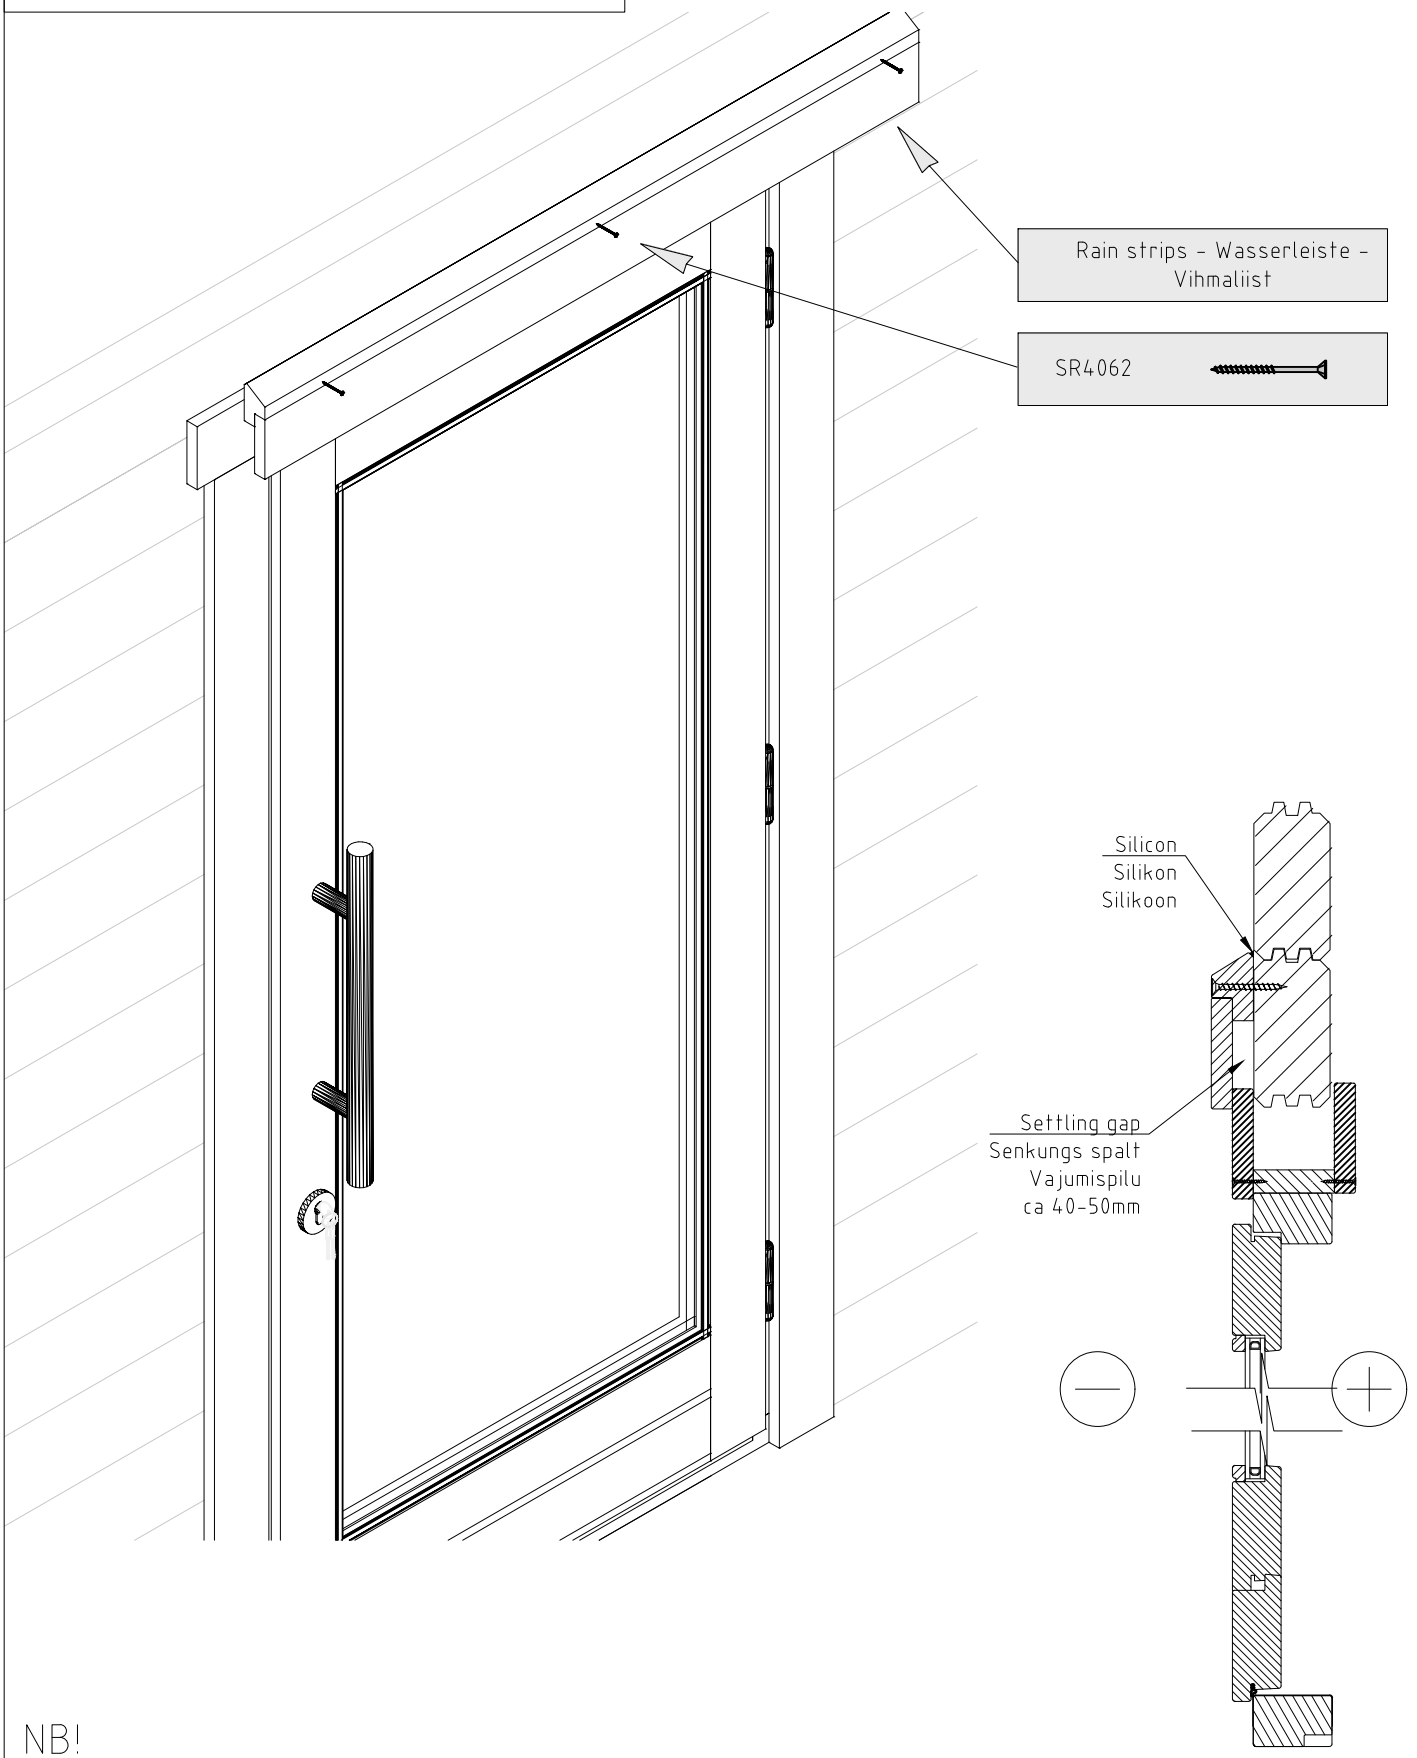


NB!

- Install only if the item is listed in the house specification!
- Nur montieren wenn die Leiste in der Teileleiste gezeigt ist!
- Monteerida juhul, kui liist on välja toodud maja spetsifikatsioonis!

Sauna Cube M & L Assembly Instruction

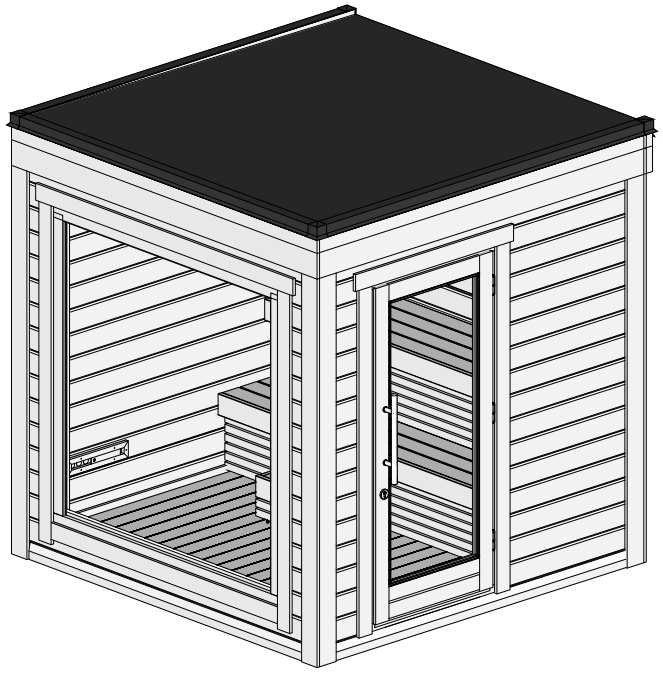

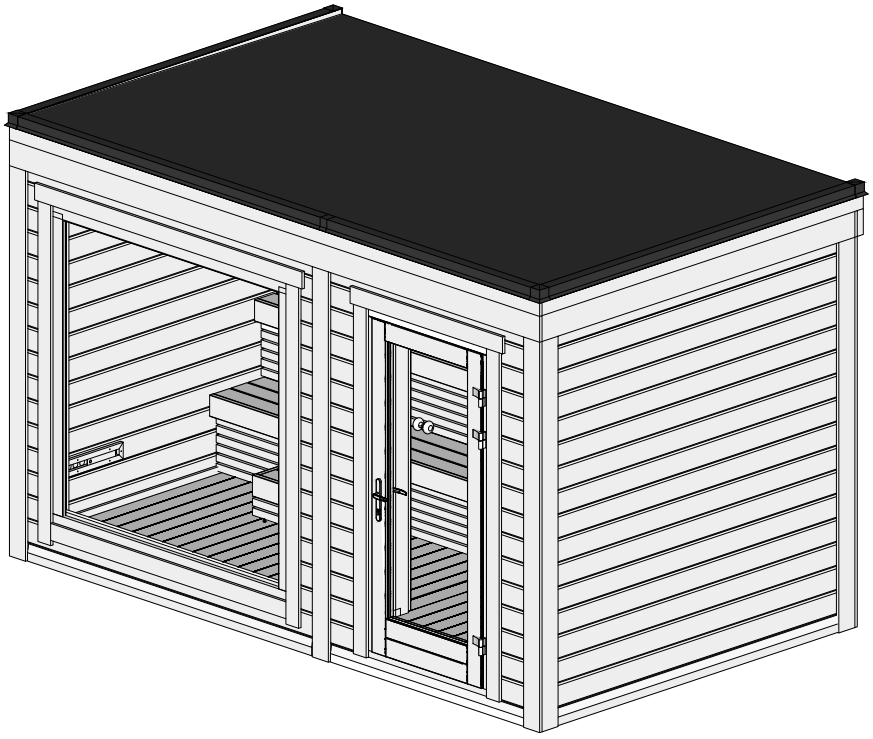


PREPARATION AND ASSEMBLY INSTRUCTIONS


Required personnel
Minimum 2 persons are required to assemble the sauna. Some components are heavy and large. Do not attempt to assemble the sauna alone.

Before starting assembly
Make sure that all required parts from specification sheets is located from the package.

Required tools
- Cordless drill / screwdriver
- Drill bits (Ø3 mm and Ø5 mm)
- Spirit level
- Measuring tape
- Rubber hammer
- Hammer, nail gun
- Saw
- Utility knife
- Ladder (if required)
- Silicone or PU foam gun (if required)

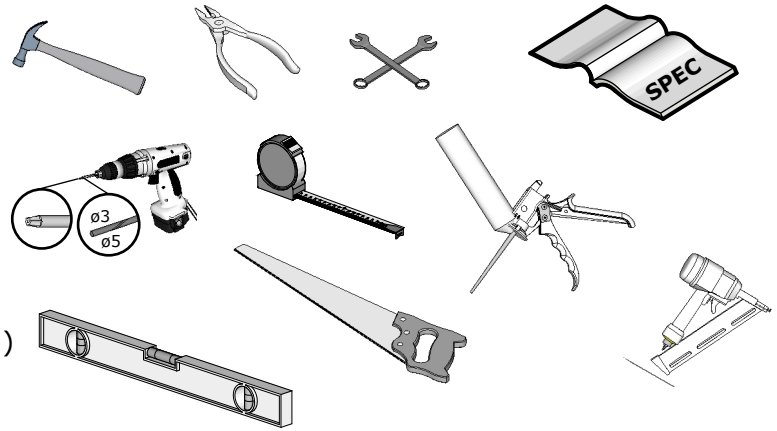

Safety equipment
- Protective gloves
- Safety glasses
- Safety footwear

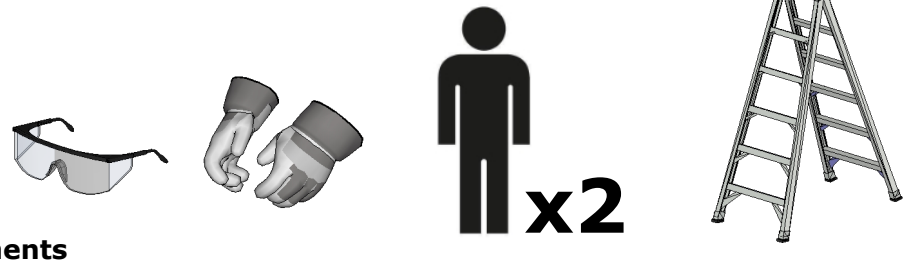


Installation site requirements
- The sauna must be installed on a solid, level, and stable foundation.
- Suitable foundations include concrete, paving stones, or a properly prepared wooden base.
- The foundation must be perfectly level.
- Ensure sufficient working space around the sauna.


Final check
Ensure all screws are tightened, the structure is level, and doors and windows operate correctly.


Important
The sauna must be treated with a suitable wood finish after installation. Regular maintenance must be carried out both inside and outside


Assembly step sequence
1. Prepare and level the foundation.
2. Assemble and position the base frame.
3. Install the vertical corner posts.
4. Install wall logs starting from the first row.
5. Continue installing wall logs to full height.
6. Install threaded rods and tighten.
7. Install upper support beams and roof frame.
8. Install insulation if required.
9. Install roof boards.
10. Install ceiling boards and strips.
11. Install floor boards and strips.
12. Install outside beams and laths.
13. Install EPDM and roof metal sheets.
14. Install sauna interior.
15. Install doors and windows
16. Fully tighten threaded rods after assembly.
17. Install cover boards. Cover lids.


1

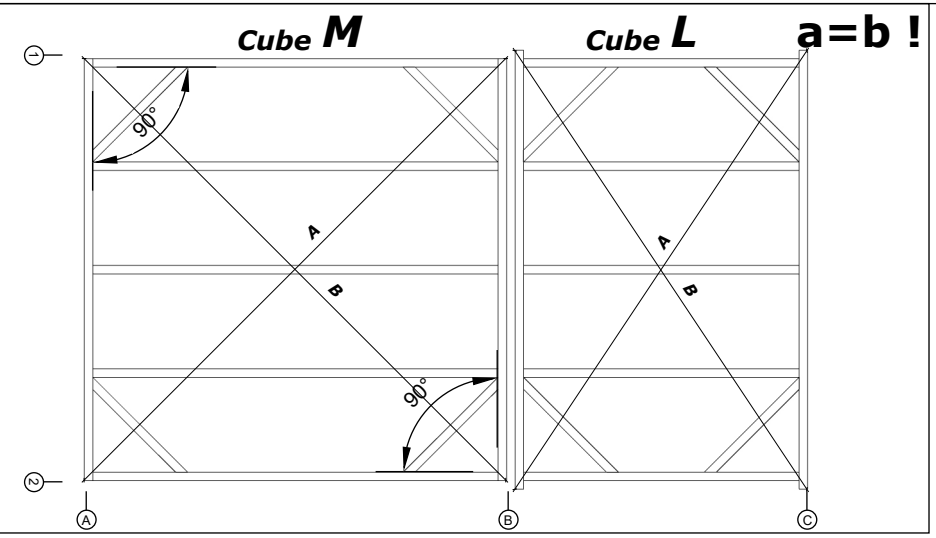

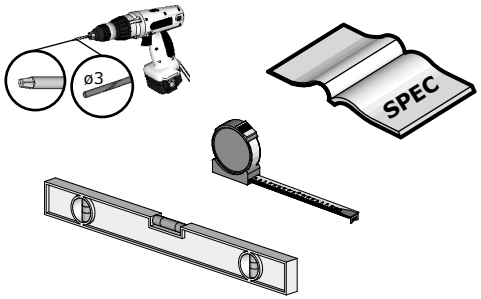


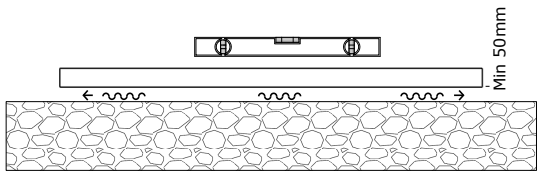

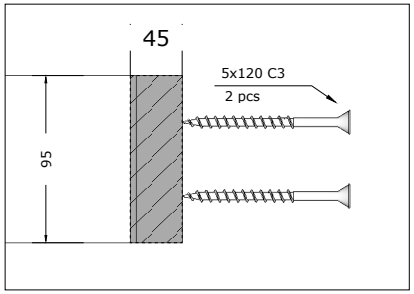


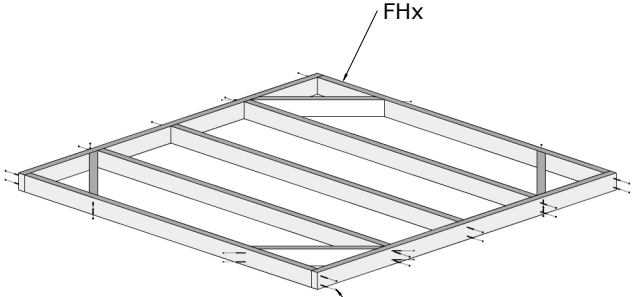



Screw 5.0x120 C3
36 pcs

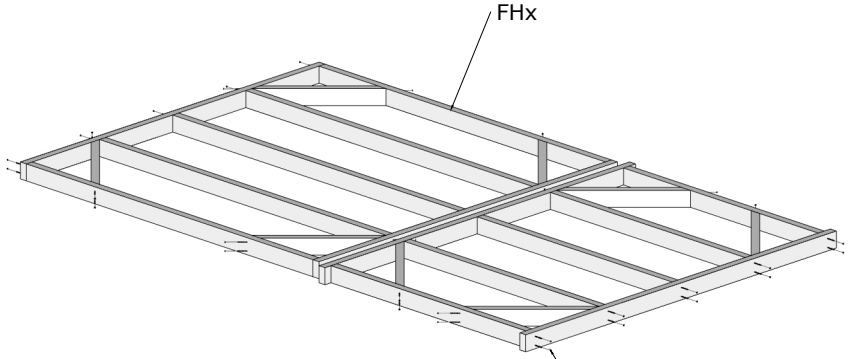



Screw 5.0x120 C3
64 pcs

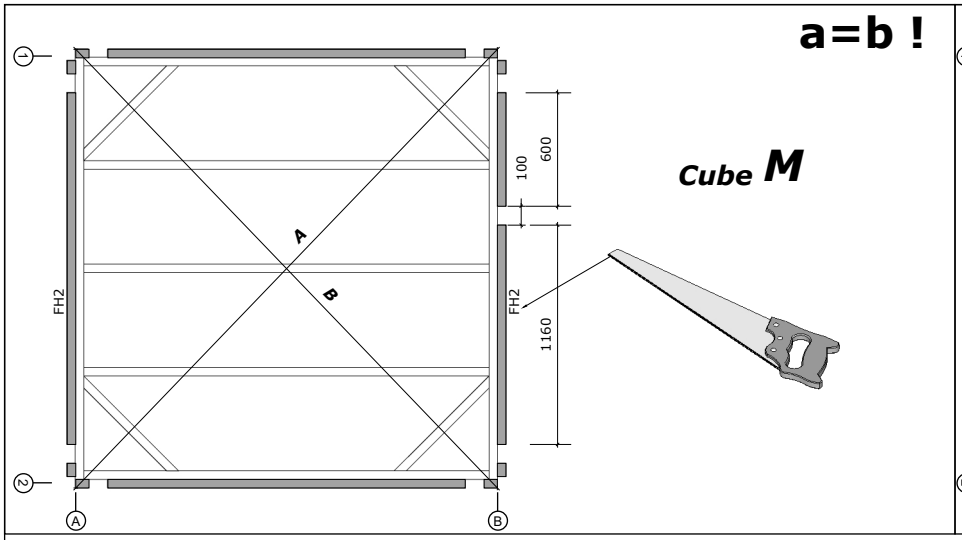

a=b !
Cube M
100
600
1160
FH2
FH2
A
B
1
2
A
B

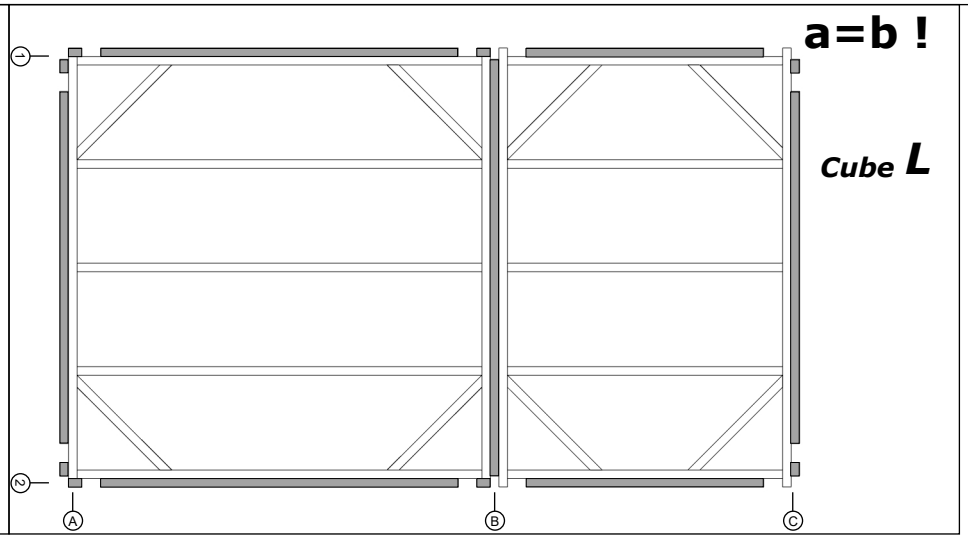

a=b !
Cube L
1
2
A
B
C

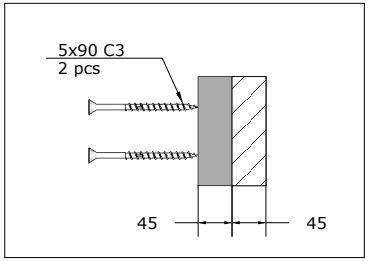

5x90 C3
2 pcs
45
45

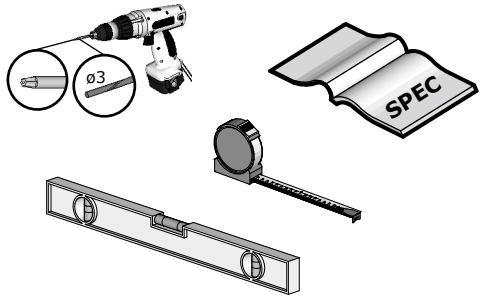
ø3
SPEC

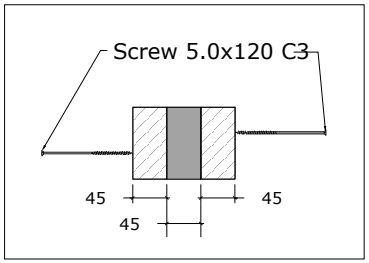

Screw 5.0x120 C3
45
45
45

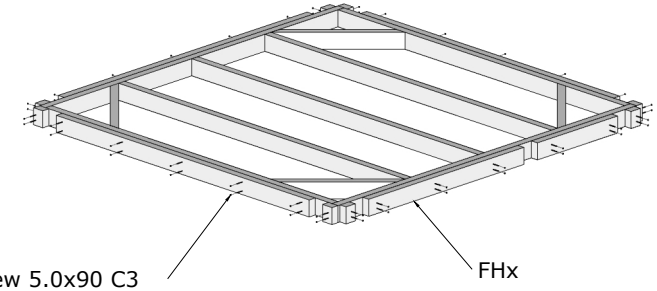

Screw 5.0x90 C3
56 pcs
FHx

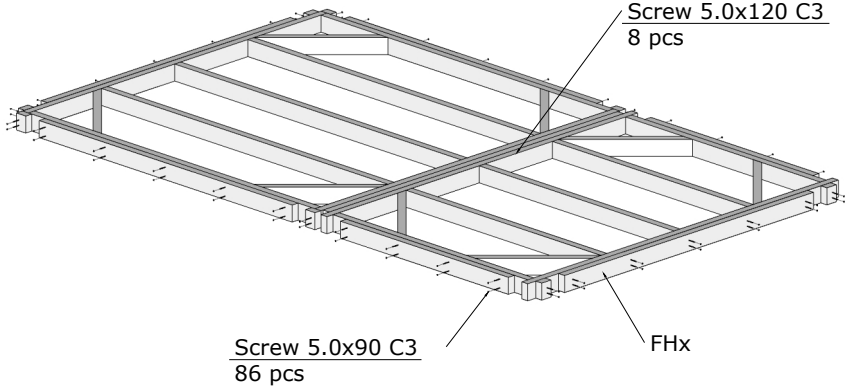
Screw 5.0x120 C3
8 pcs
Screw 5.0x90 C3
86 pcs
FHx

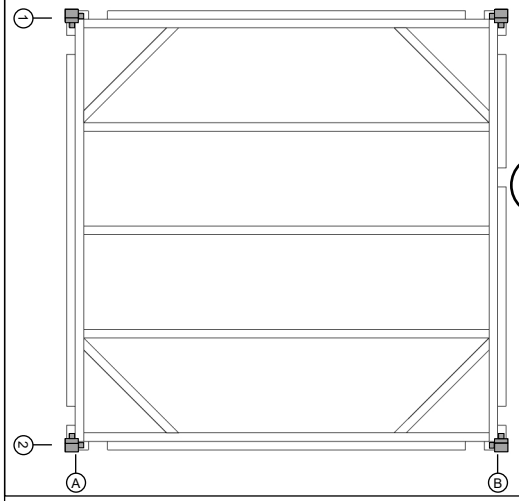

1
2
A
B


Cube M

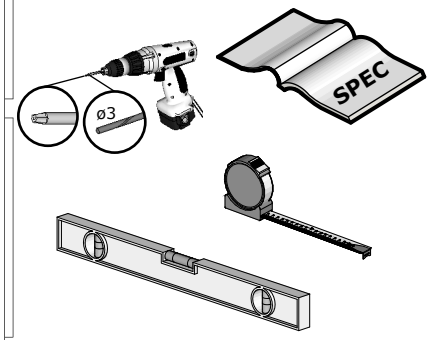

ø3
SPEC

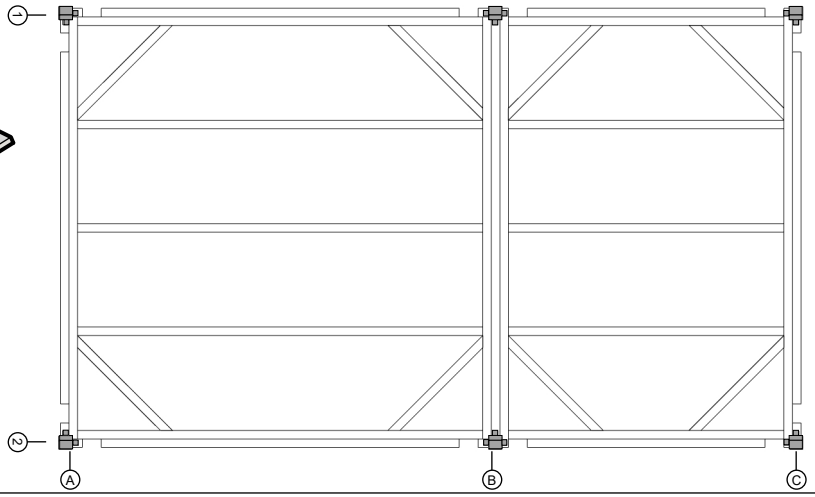

1
2
A
B
C


Cube L

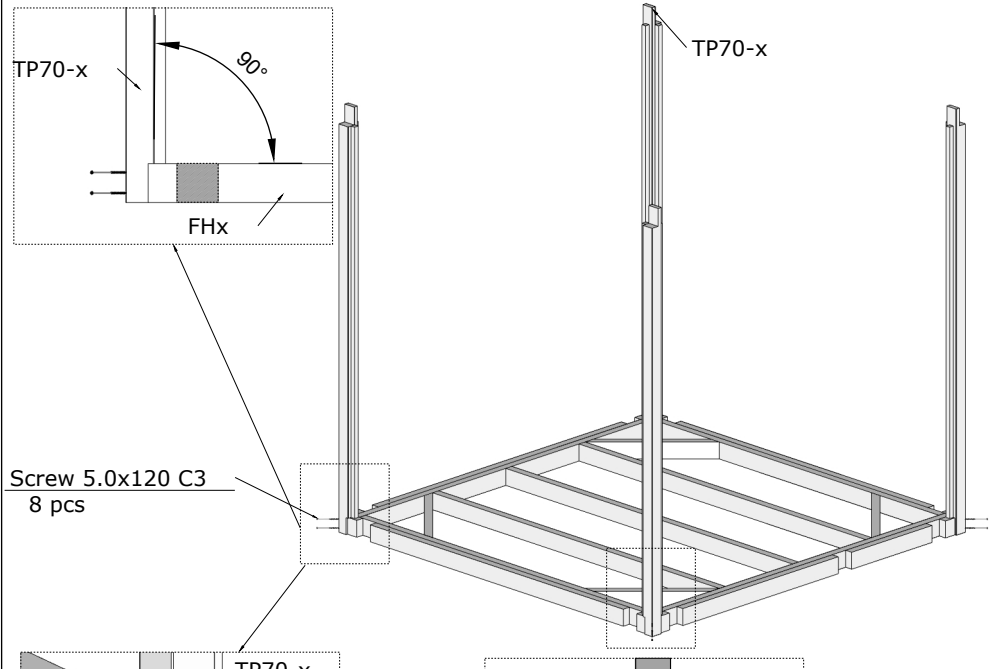

TP70-x
90°
FHx
TP70-x
Screw 5.0x120 C3
8 pcs

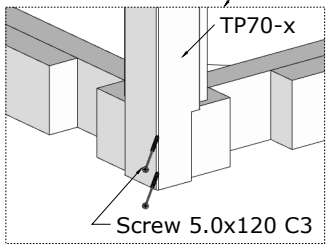
TP70-x
Screw 5.0x120 C3

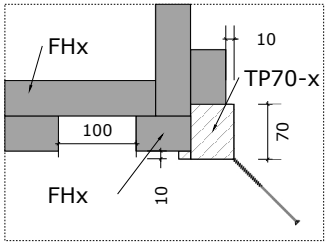

FHx
10
TP70-x
100
70
FHx
10

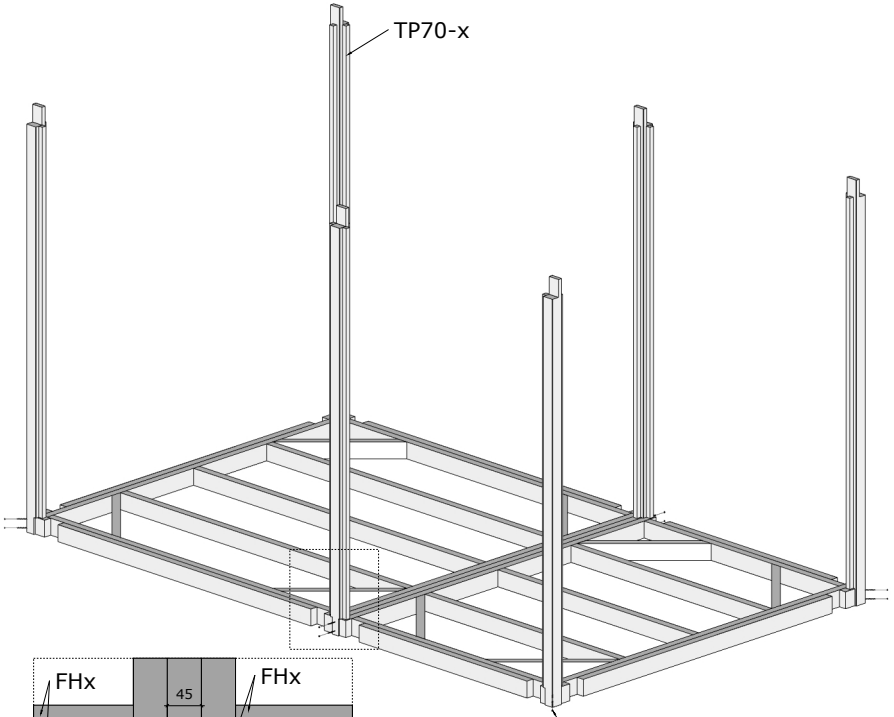

TP70-x
Screw 5.0x120 C3
12 pcs

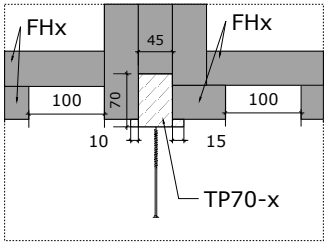
FHx
45
FHx
100
70
100
10
15
TP70-x

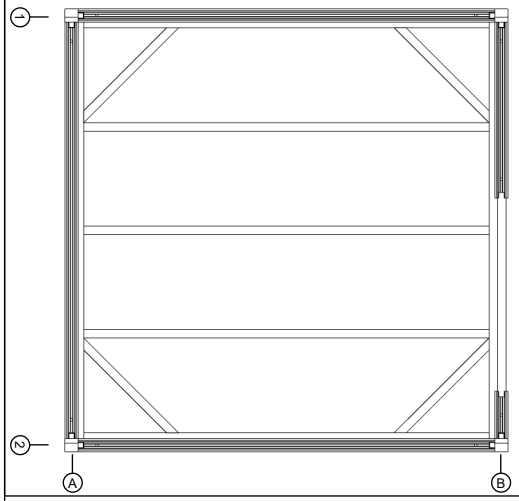



Cube M

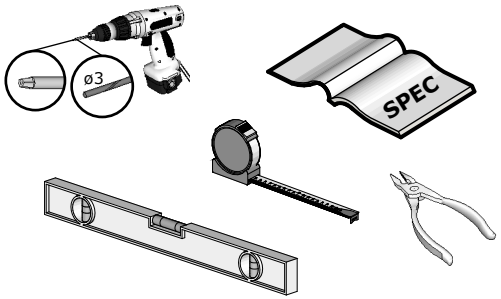


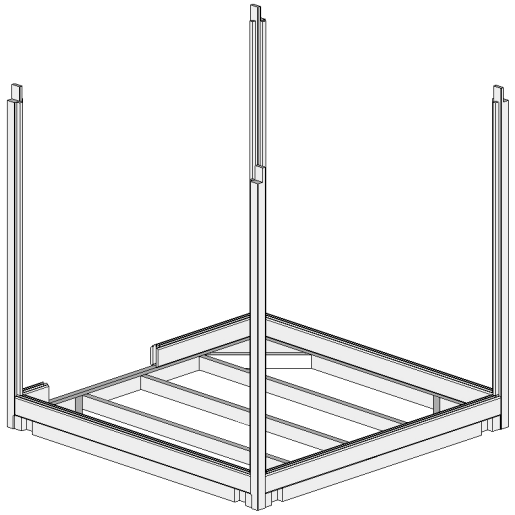


During the assembly of a mirrored sauna, the wall logs can be rotated. If necessary, wall logs with ventilation holes should also be rotated.

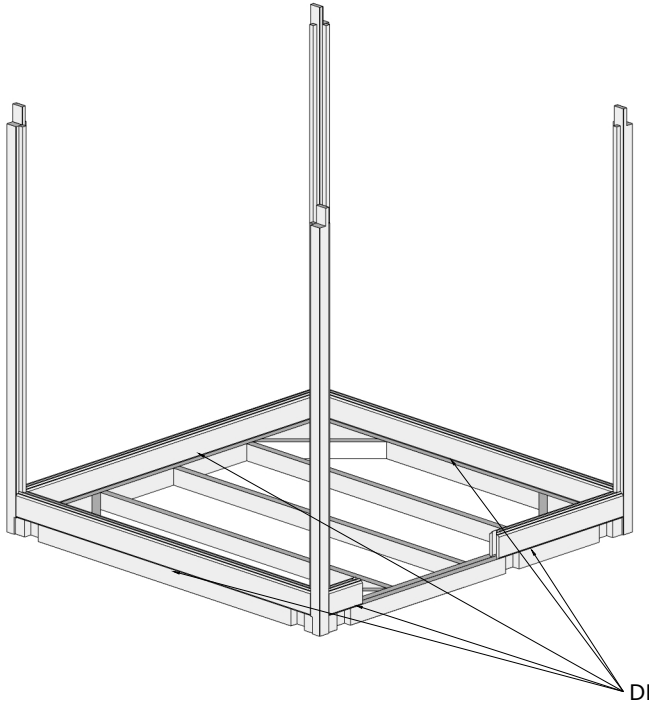


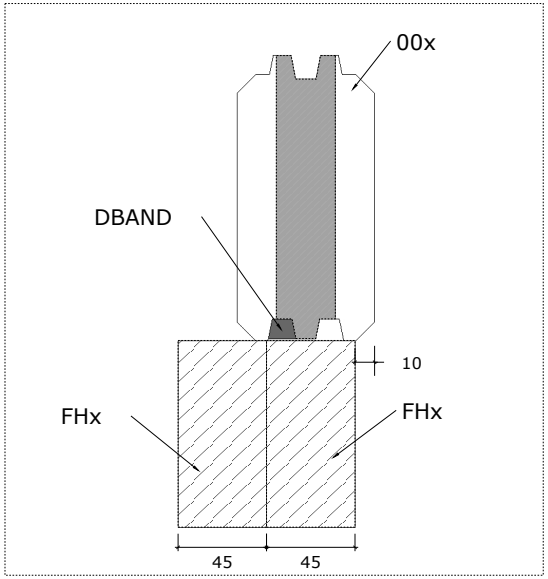


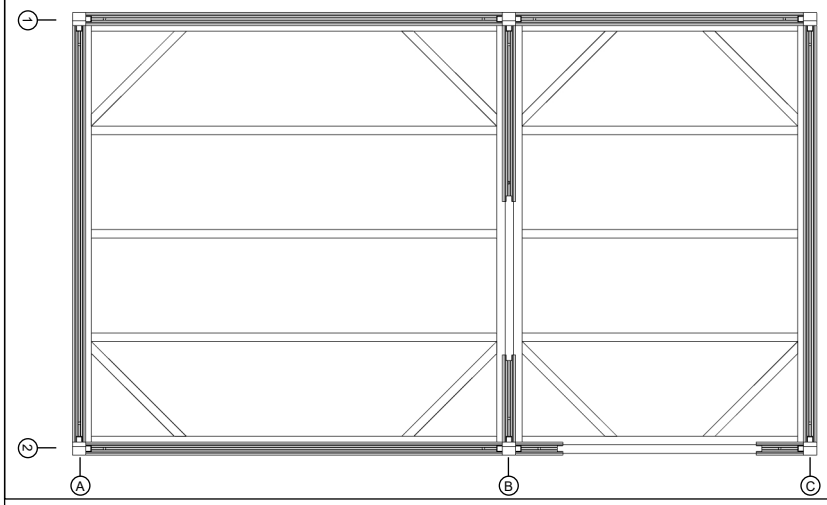

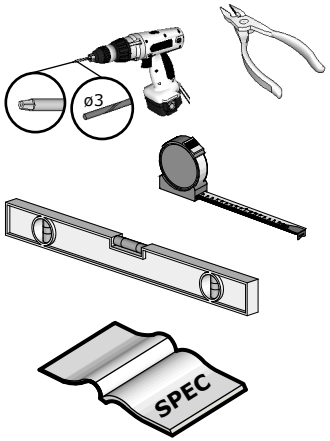



5

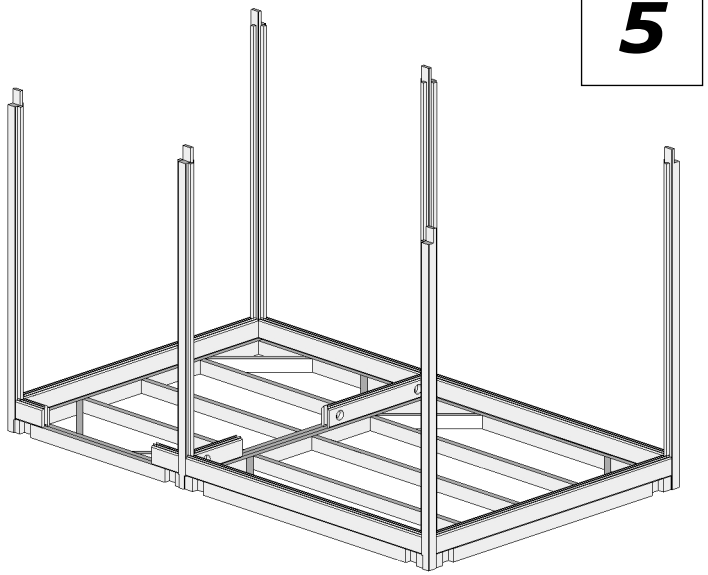


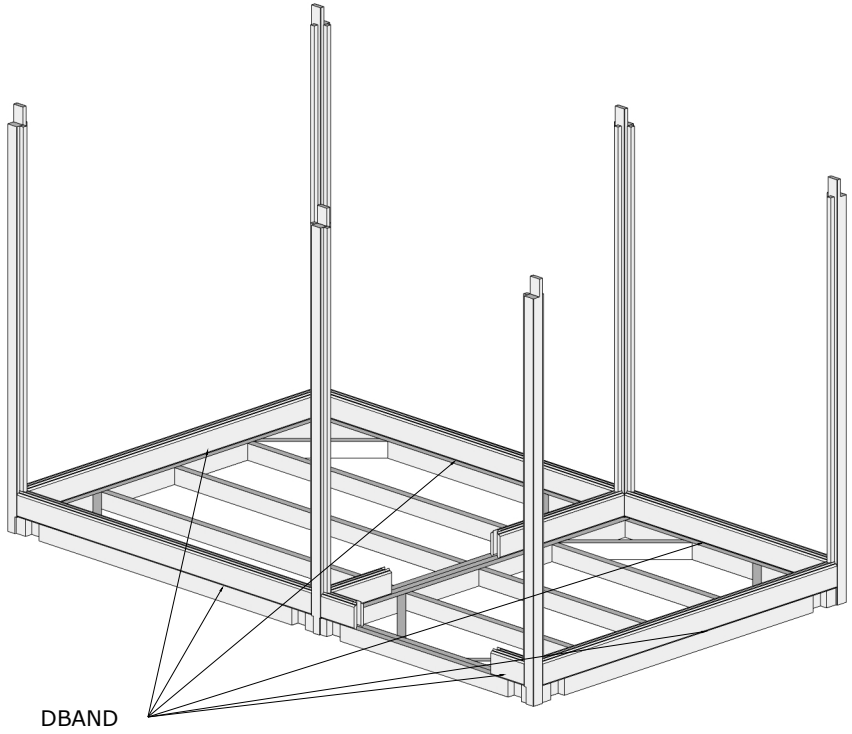


During the assembly of a mirrored sauna, the wall logs can be rotated. If necessary, wall logs with ventilation holes should also be rotated.

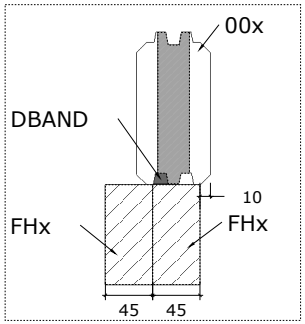


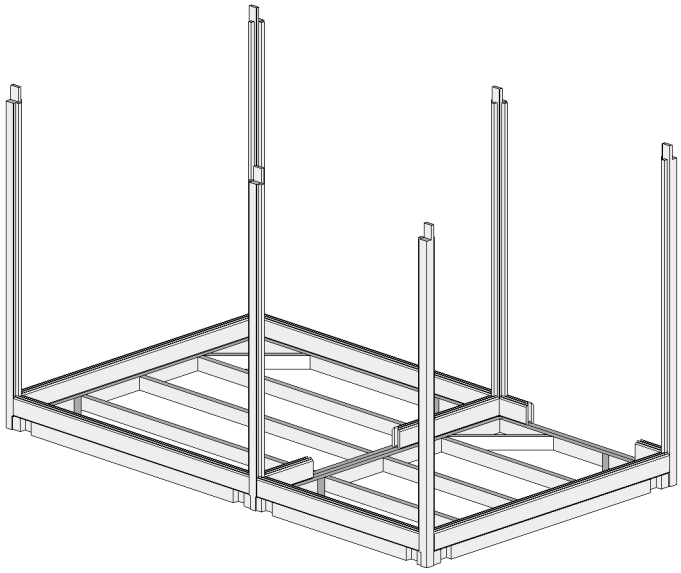

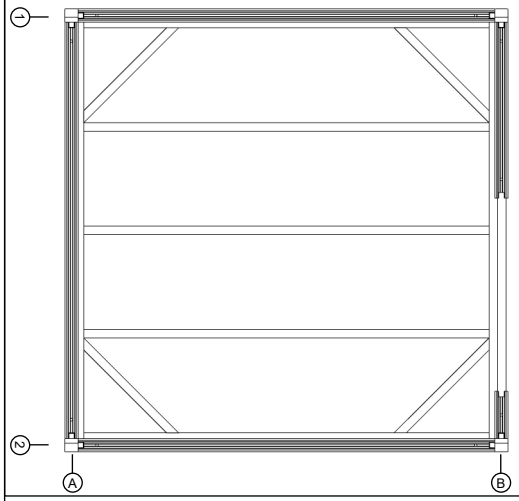



Cube M

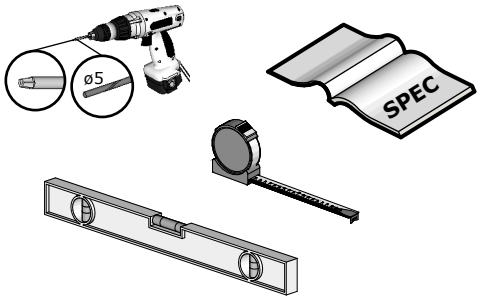

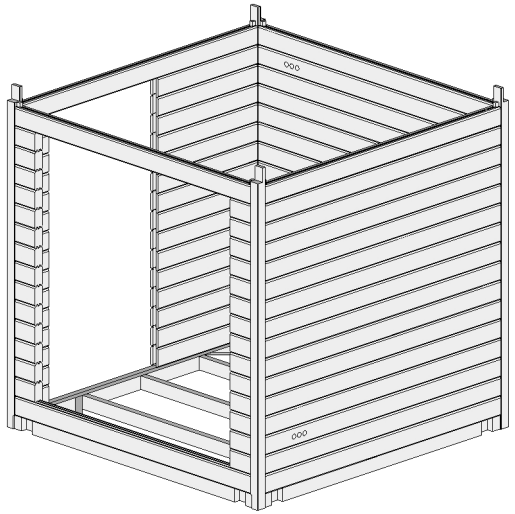



During the assembly of a mirrored sauna, the wall logs can be rotated. If necessary, wall logs with ventilation holes should also be rotated.

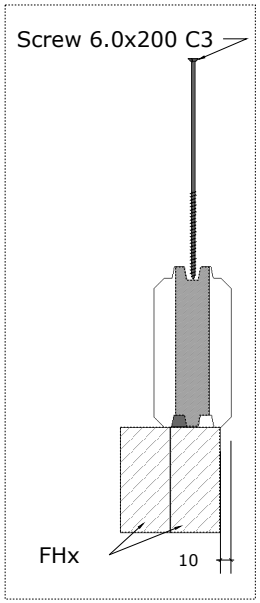


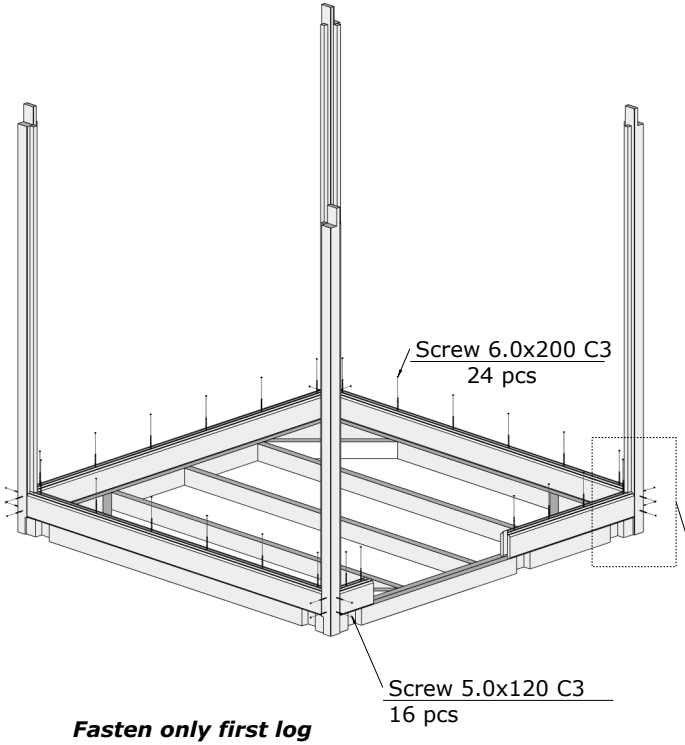


Fasten only first log row with a screw!

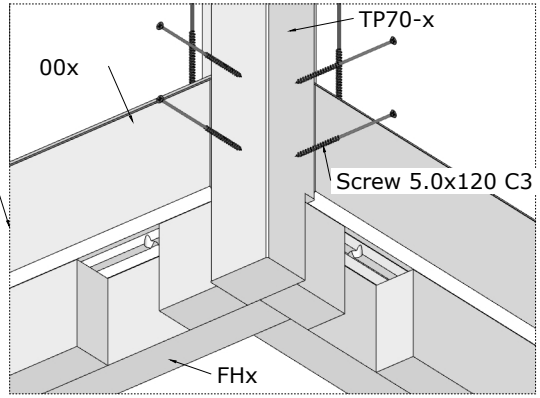


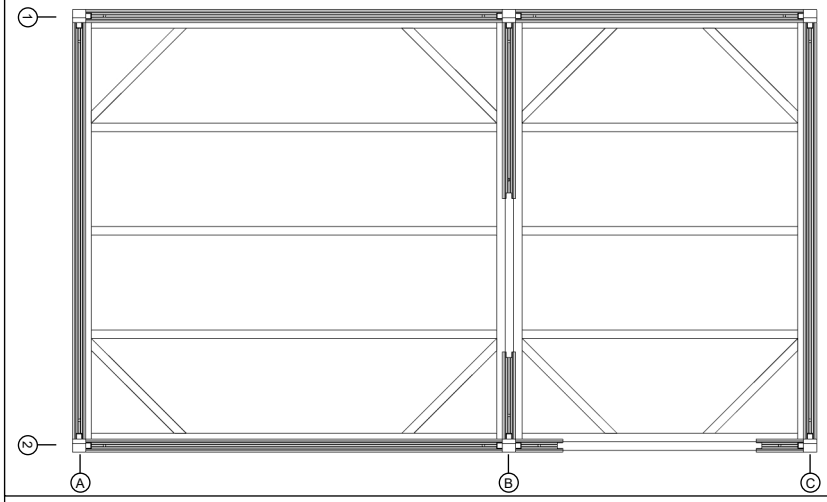


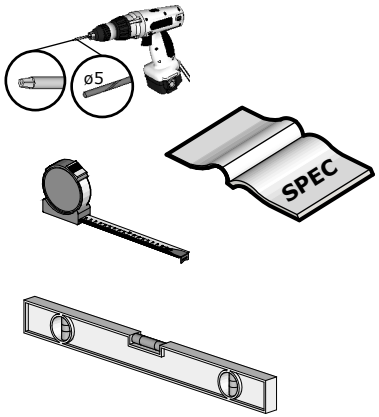

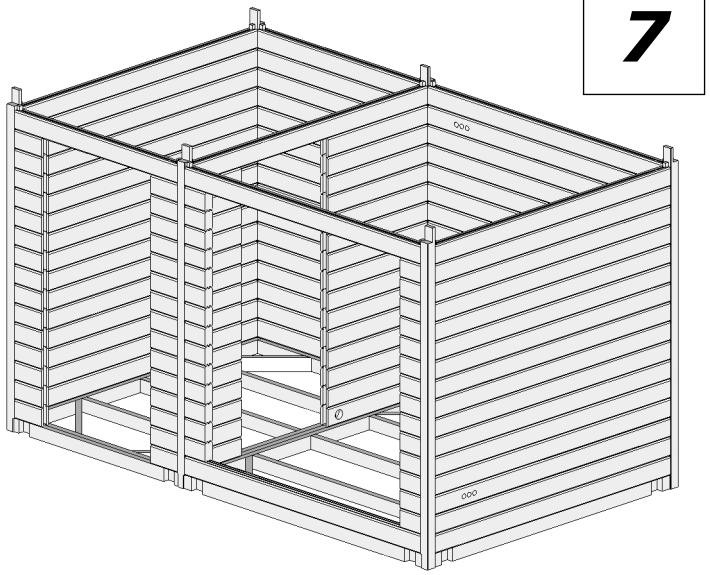



During the assembly of a mirrored sauna, the wall logs can be rotated. If necessary, wall logs with ventilation holes should also be rotated.

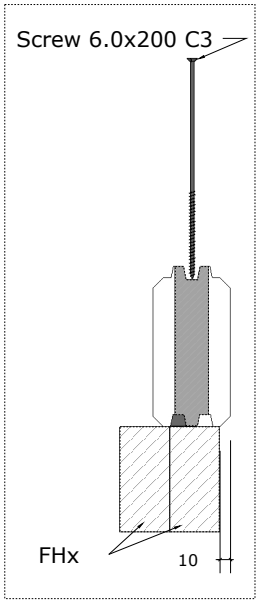


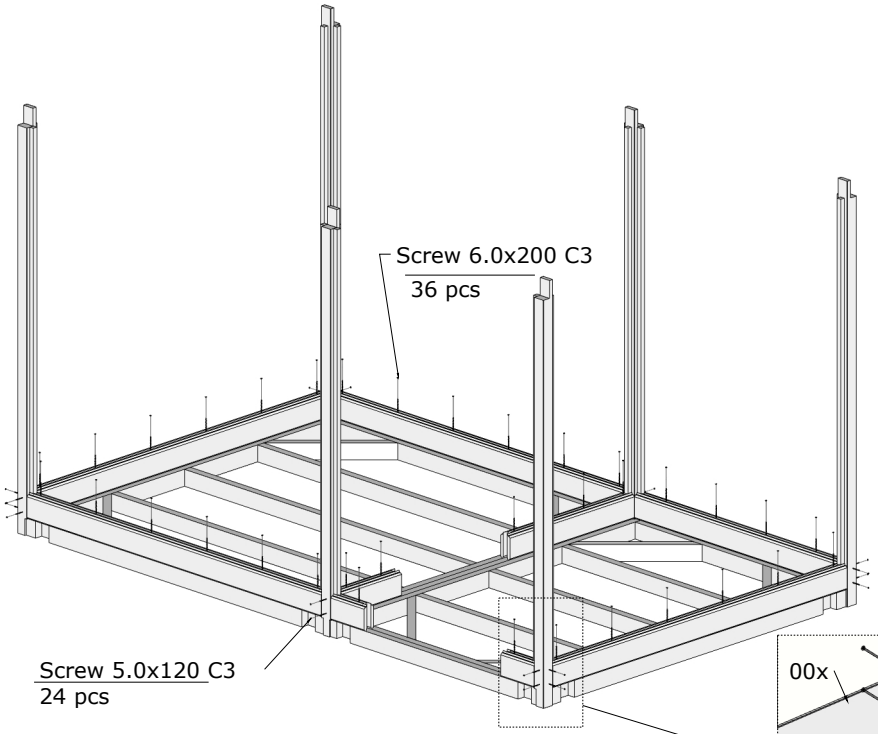



Fasten only first log row with a screw!

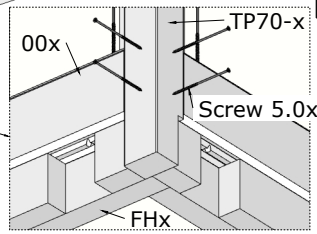


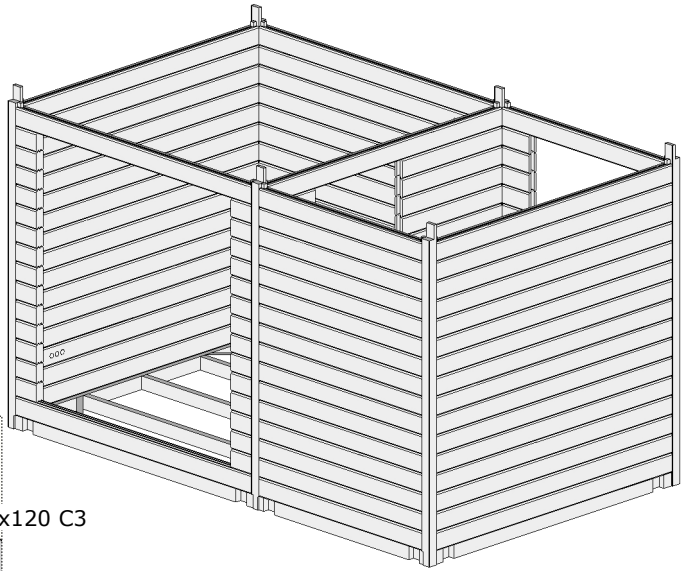


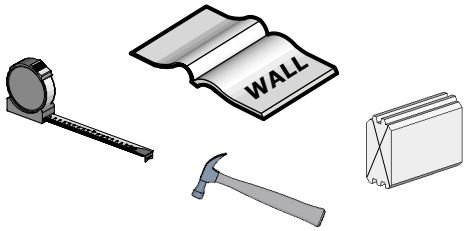

WALL

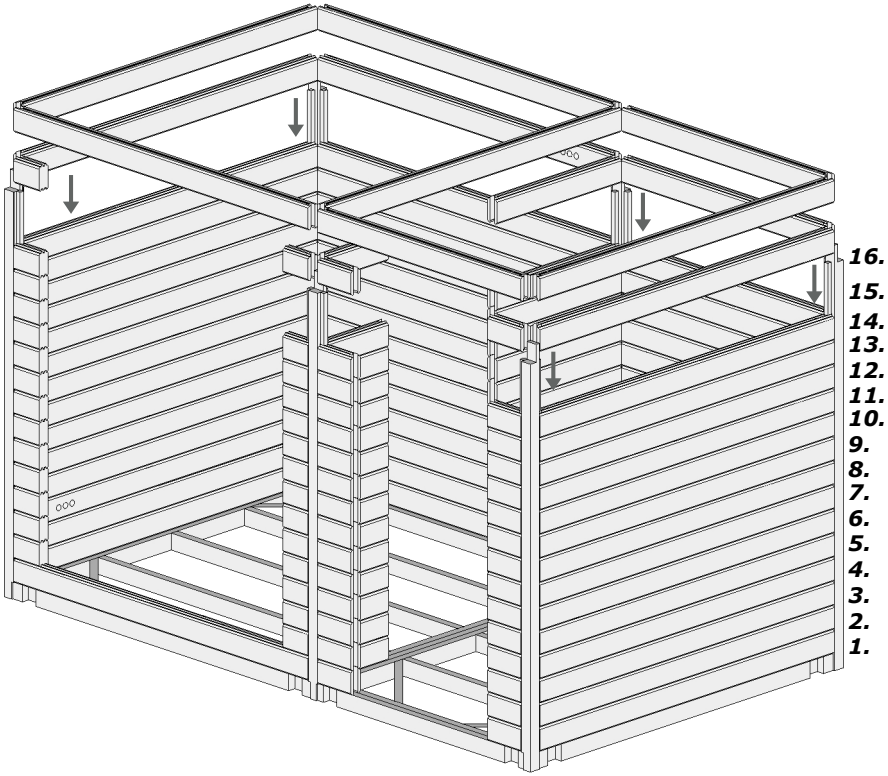

16.
15.
14.
13.
12.
11.
10.
9.
8.
7.
6.
5.
4.
3.
2.
1.

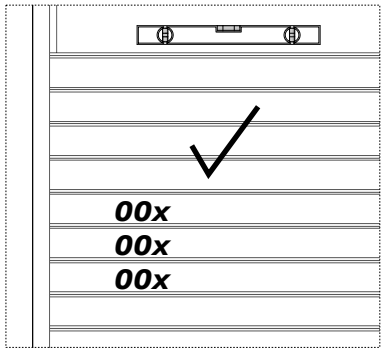

00x
00x
00x

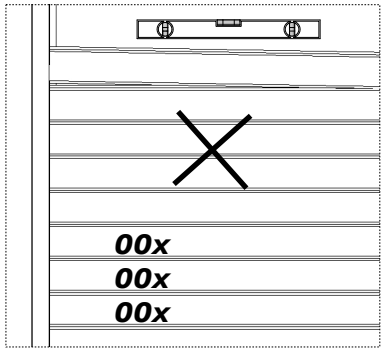

00x
00x
00x

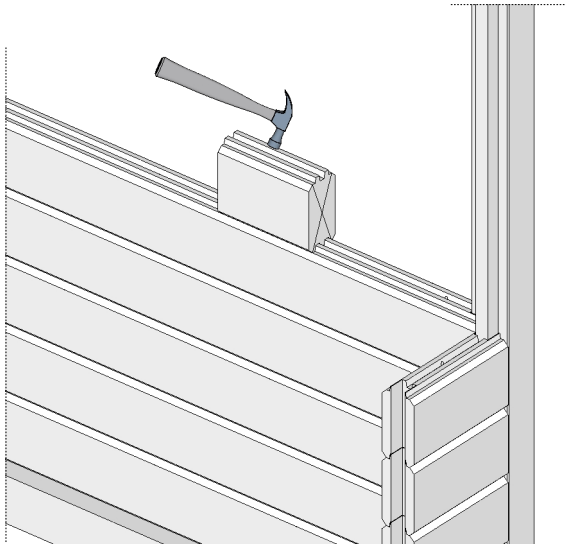


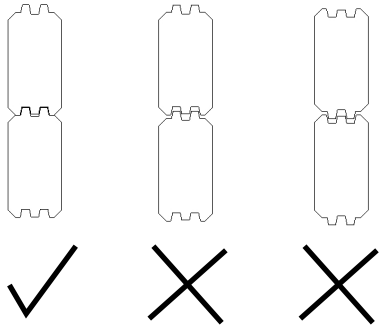


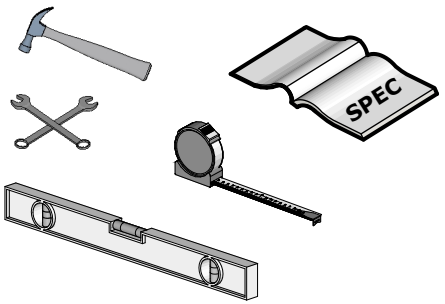


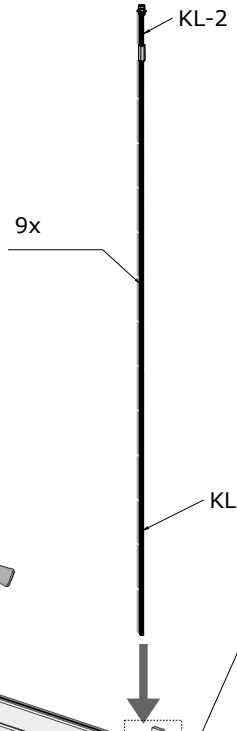


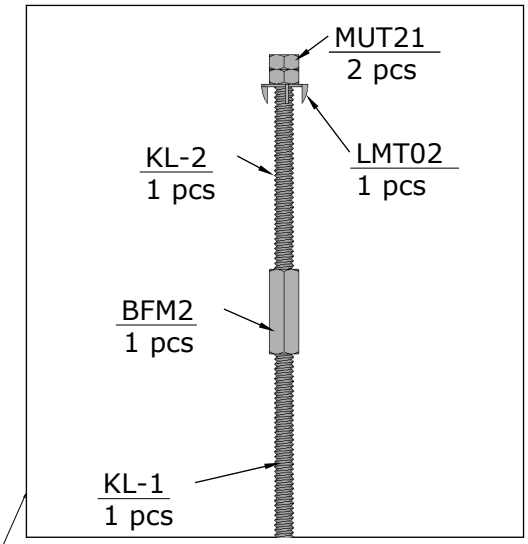

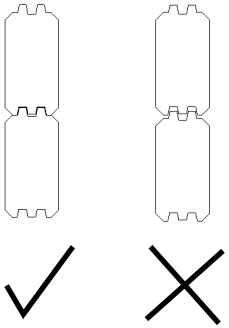

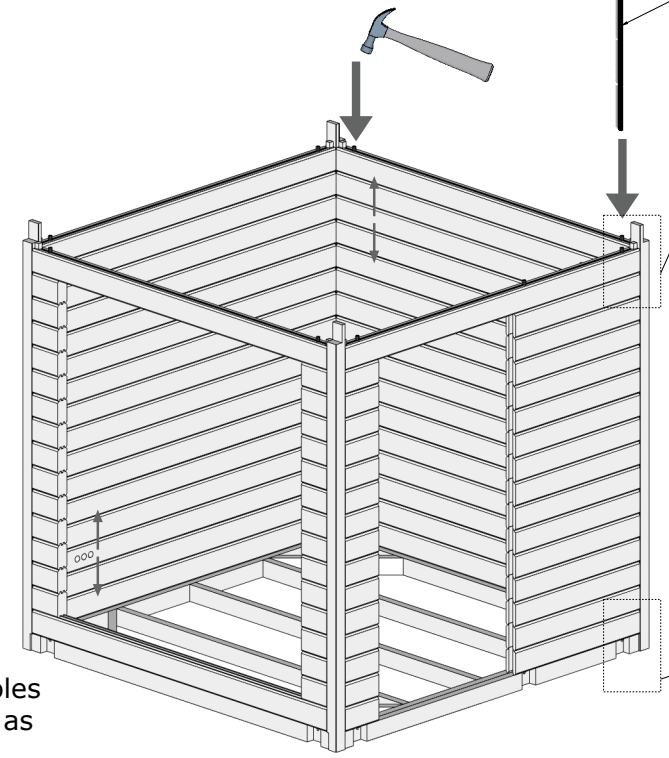


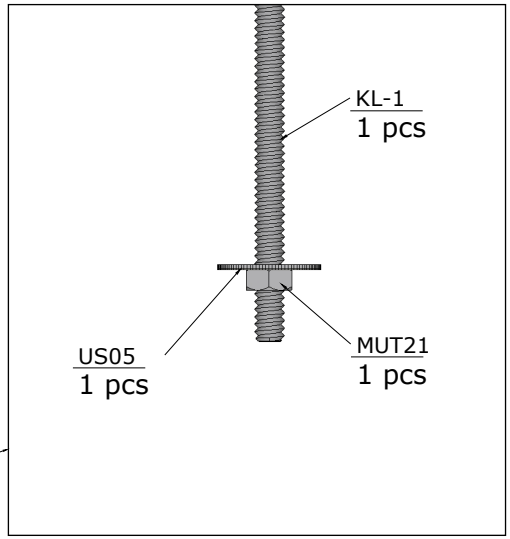


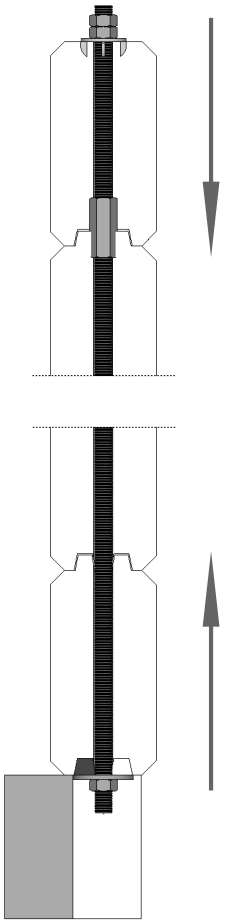



The wall logs with ventilation holes can be installed higher or lower as required.
Please ensure that the ventilation holes are not covered by the sauna bench from the inside!


Not a single part may be fastened to the wall logs with a screw!

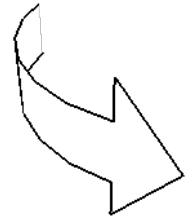


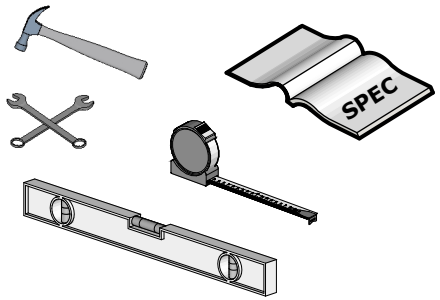


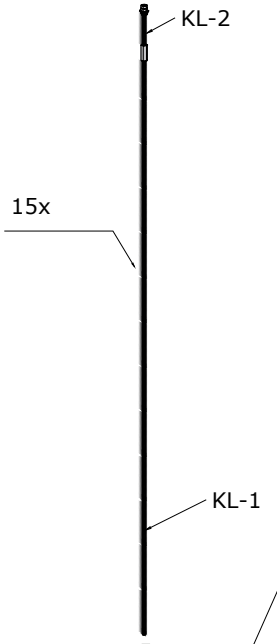

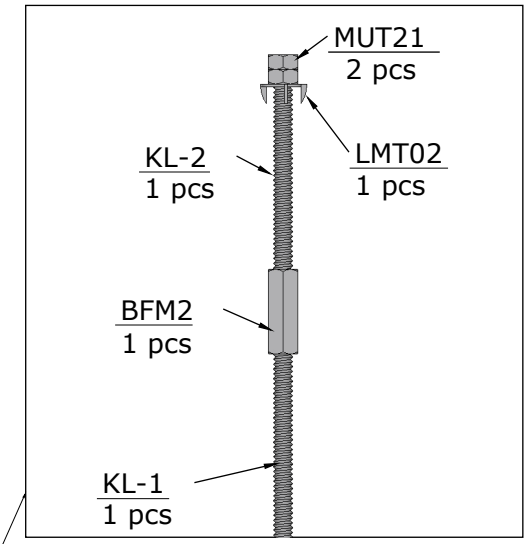


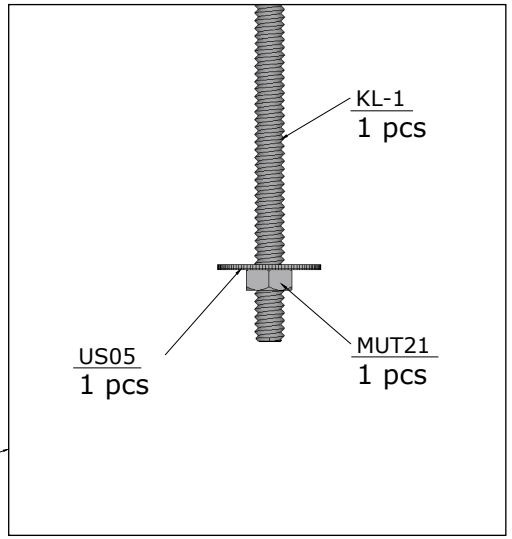

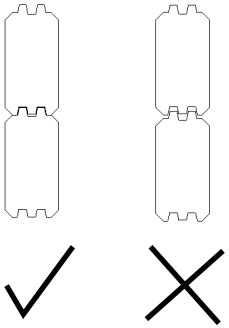

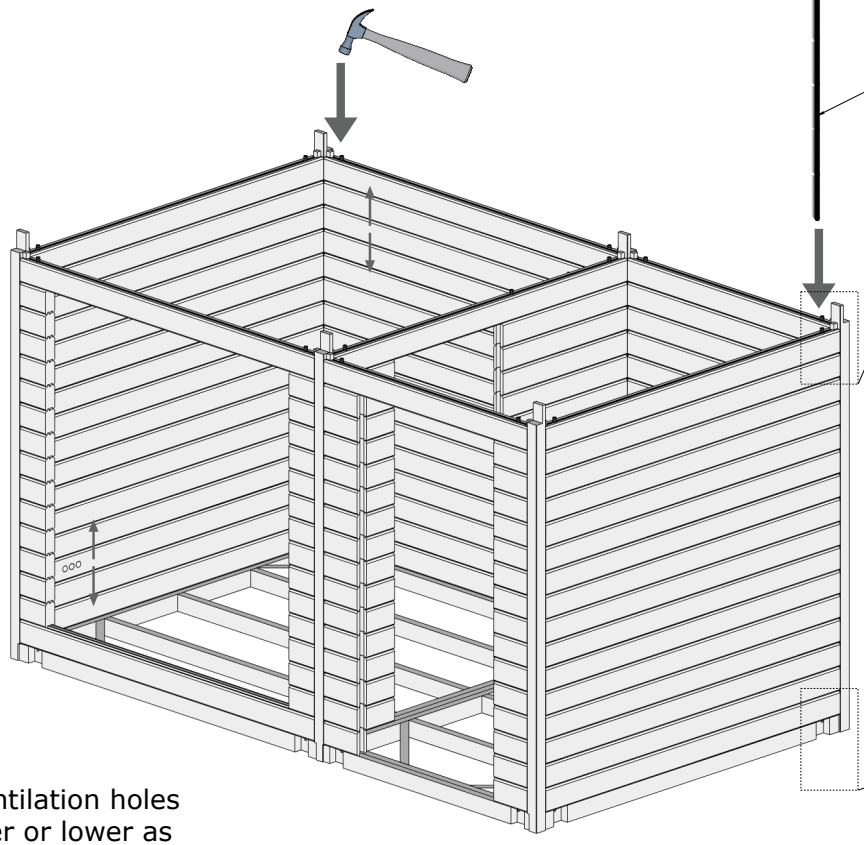


WALL B

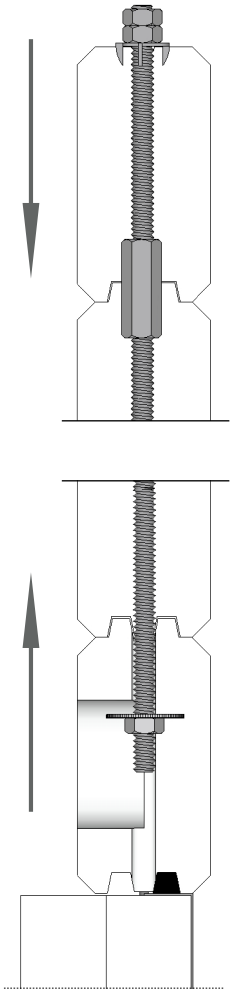


The wall logs with ventilation holes can be installed higher or lower as required.
Please ensure that the ventilation holes are not covered by the sauna bench from the inside!


Not a single part may be fastened to the wall logs with a screw!

Cube M

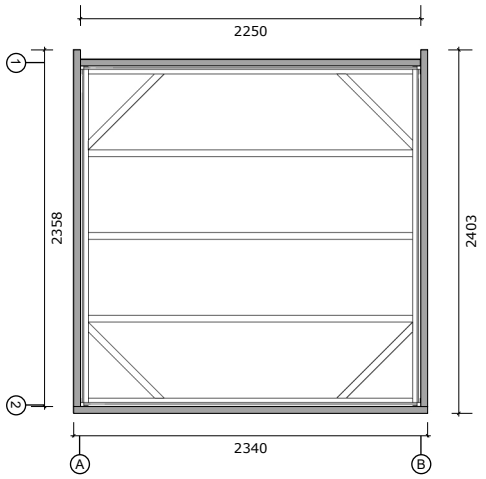



Cube L

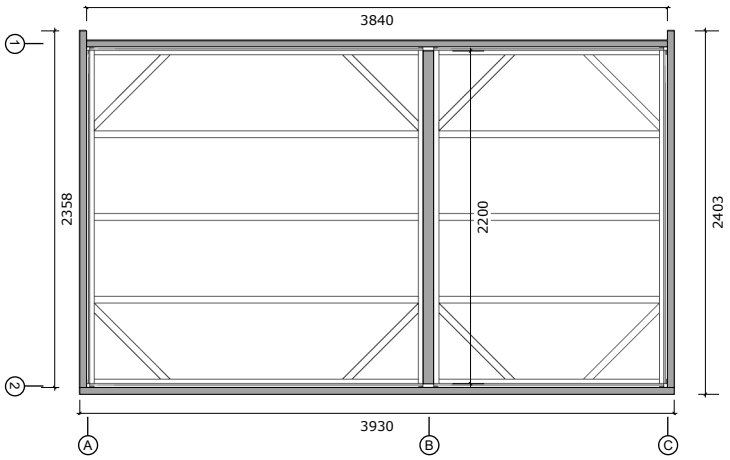

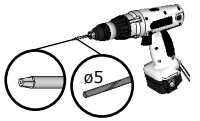




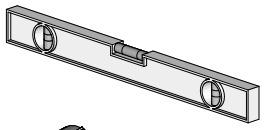




Wall B

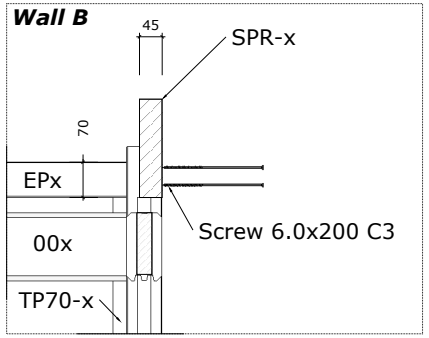


SPR-x
45x195

SPR-x
44x145


Screw 6.0x200 C3
16 pcs

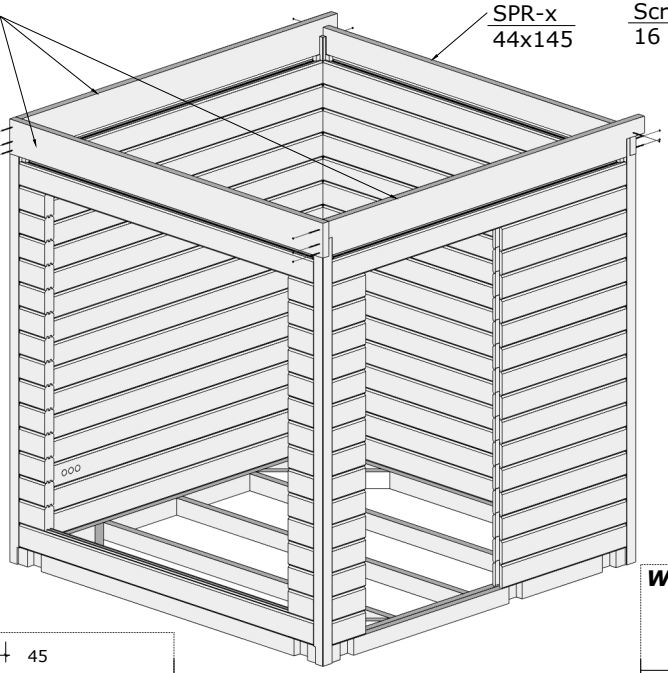


Screw 6.0x200 C3
12 pcs

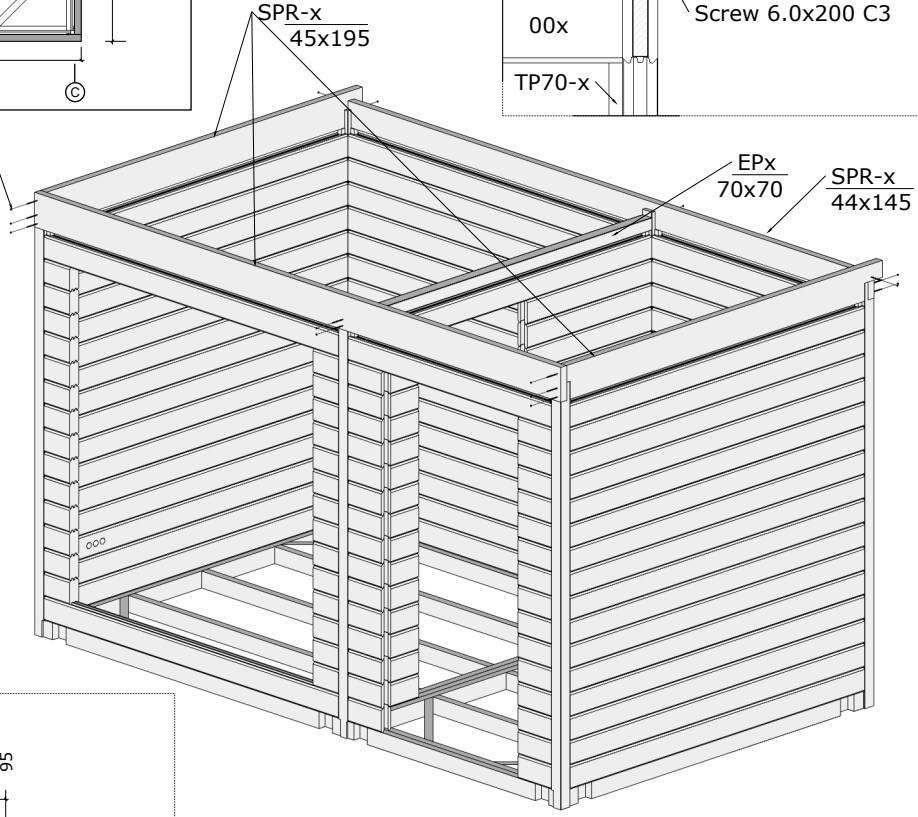


Wall 1

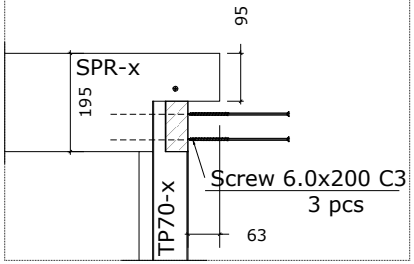


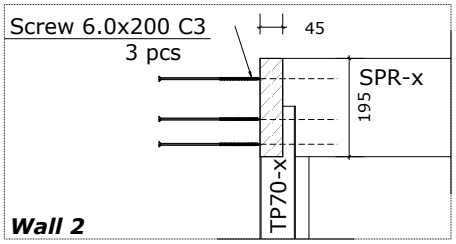



Wall 2


Not a single part may be fastened to the wall logs with a screw!

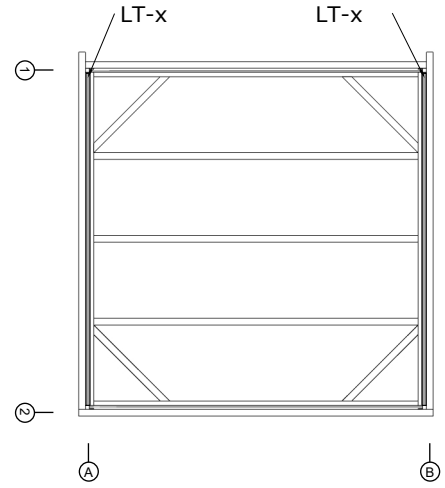

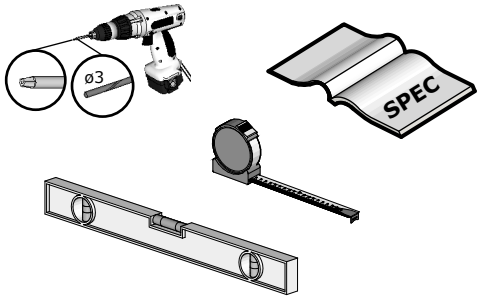

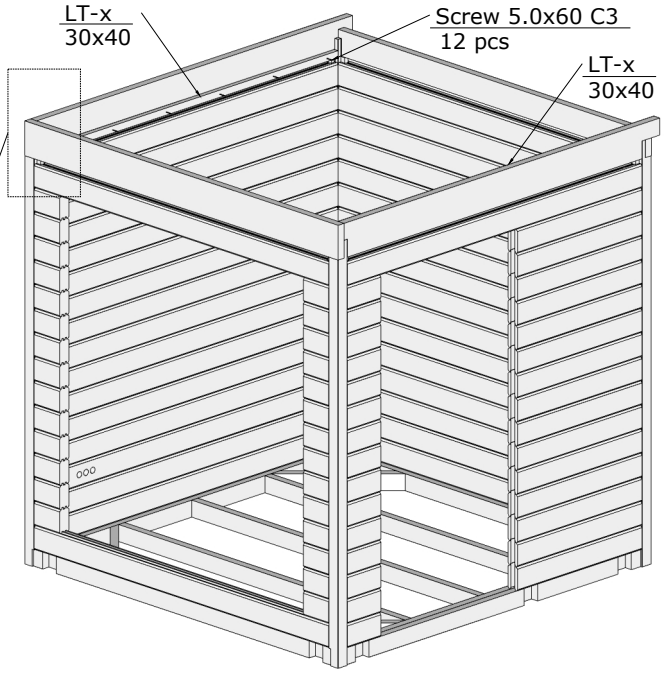


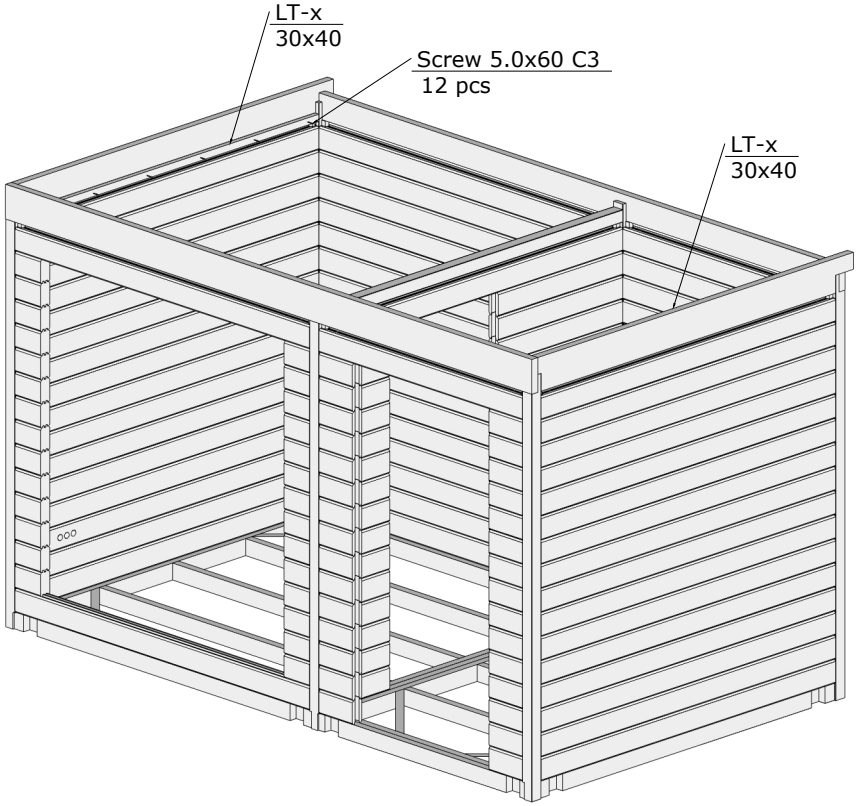

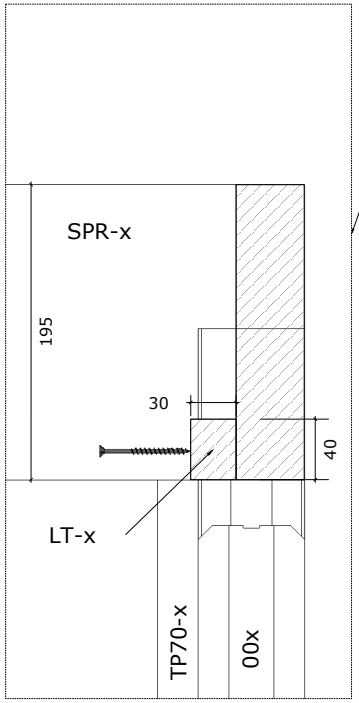


Not a single part may be fastened to the wall logs with a screw!


Cube M

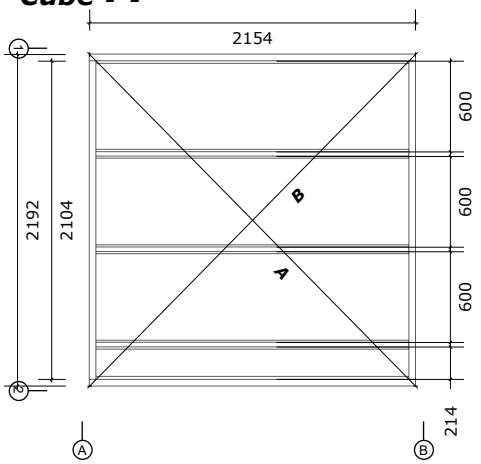


Cube L

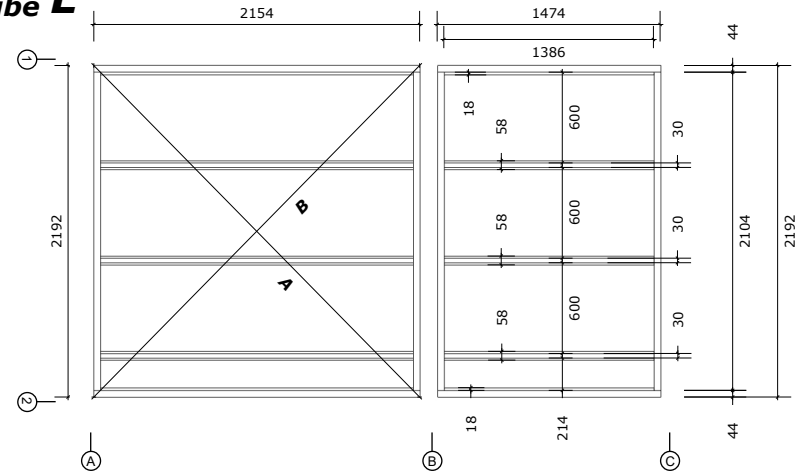

a=b !

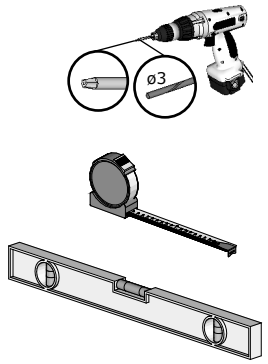

SPEC

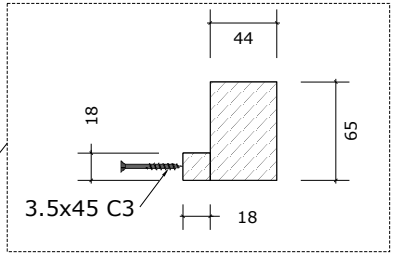

Screw 3.5x45 C3
28 pcs


DLx
18x18

DLx
18x58

LTx
44x65

LTx
44x65


Screw 5.0x90 C3
25 pcs

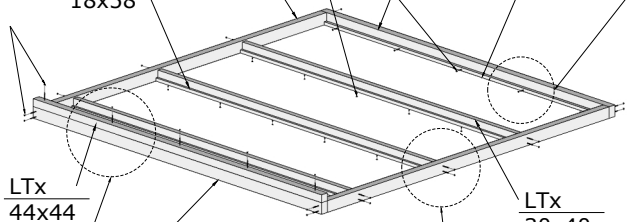


LTx
44x44


LTx
44x65

LTx
30x40

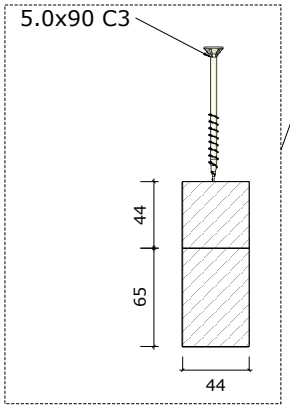

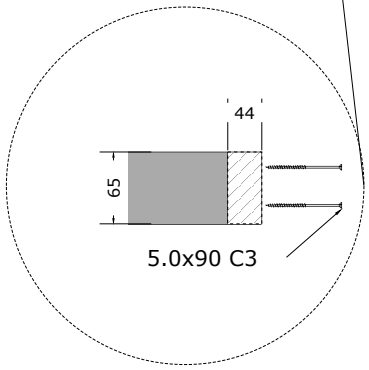


Screw 5.0x90 C3
49 pcs

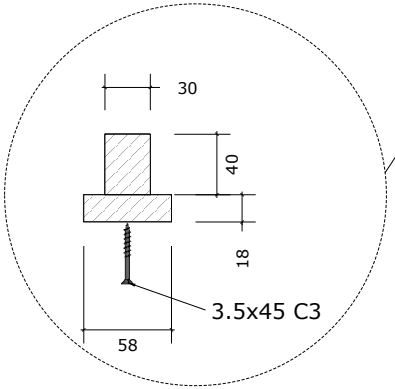

Screw 3.5x45 C3
51 pcs

DLx
18x18

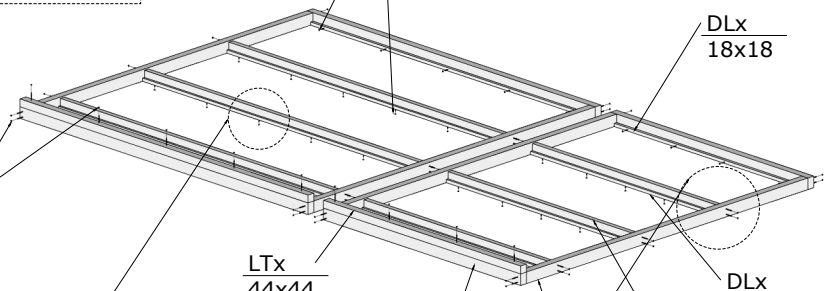


LTx
44x44

LTx
44x65


DLx
18x58

LTx
30x40


LTx
44x65

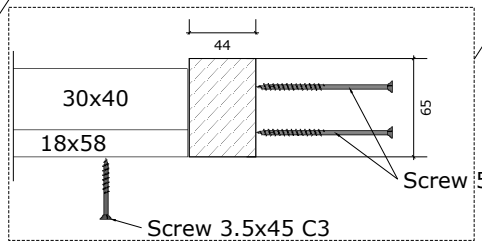



Cube M

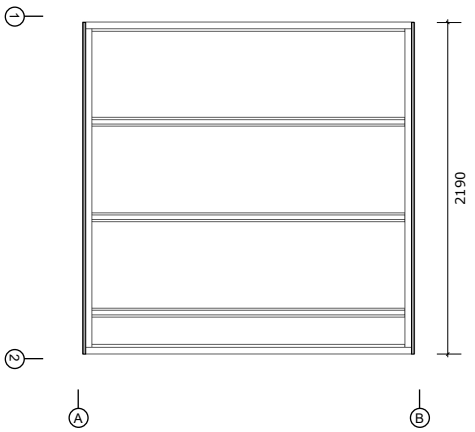

1
2
2190
A
B


Cube L

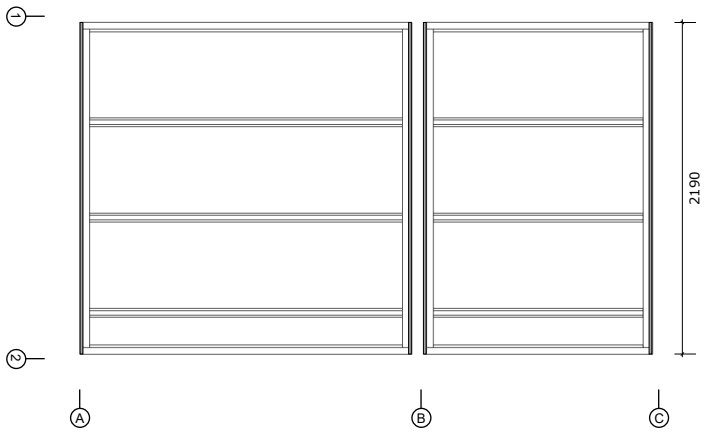

1
2
2190
A
B
C

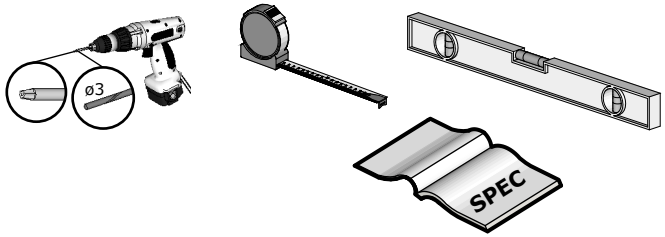

ø3
SPEC

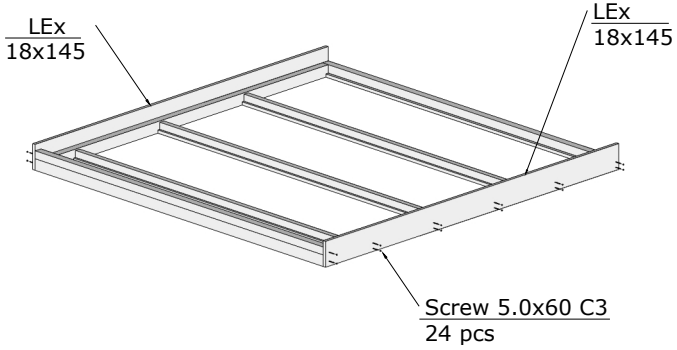
LEx
18x145
LEx
18x145
Screw 5.0x60 C3
24 pcs

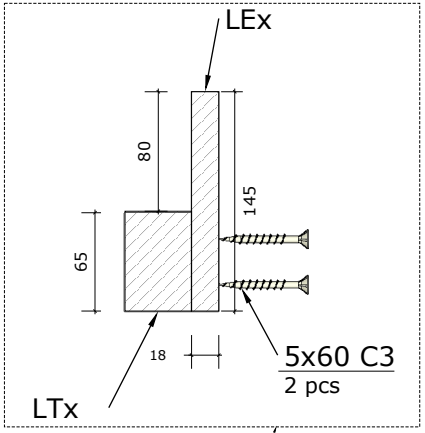

LEx
80
145
65
18
5x60 C3
2 pcs
LTx

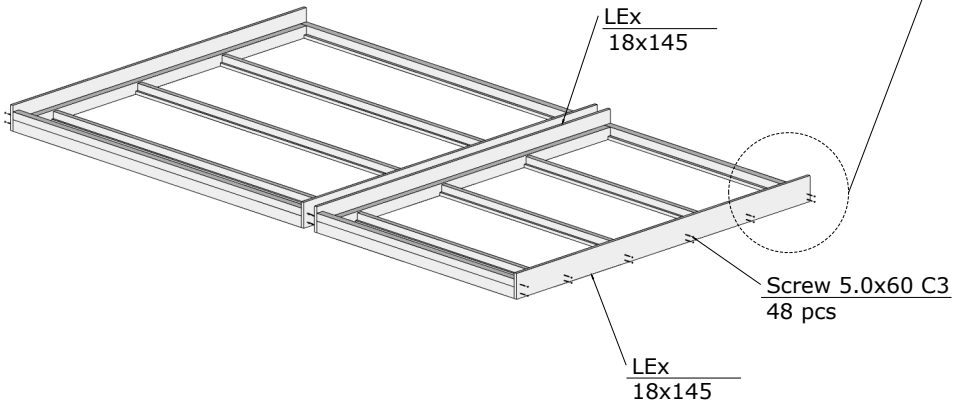
LEx
18x145
Screw 5.0x60 C3
48 pcs
LEx
18x145

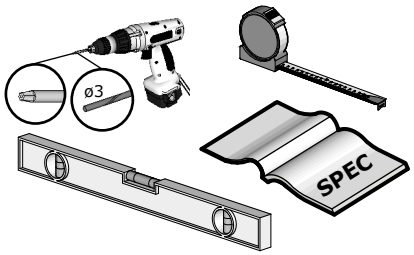


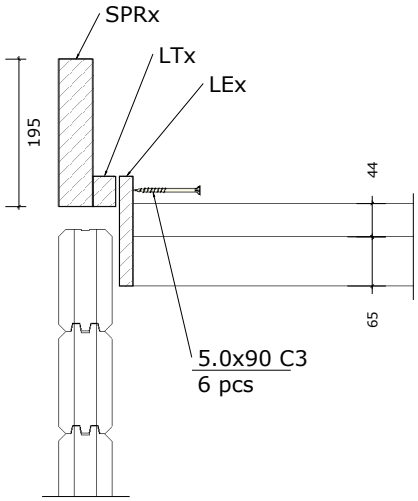

WALL A

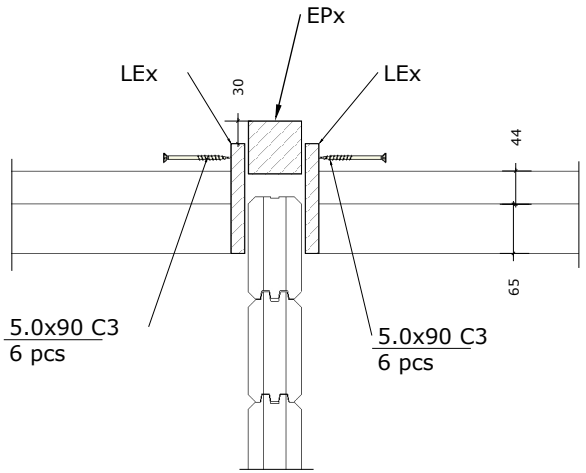



WALL B

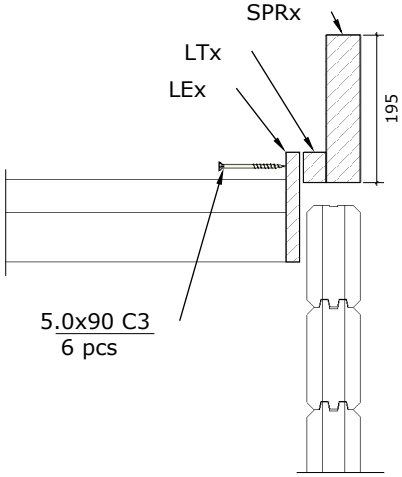


WALL C


Screw 5.0x90 C3
12 pcs

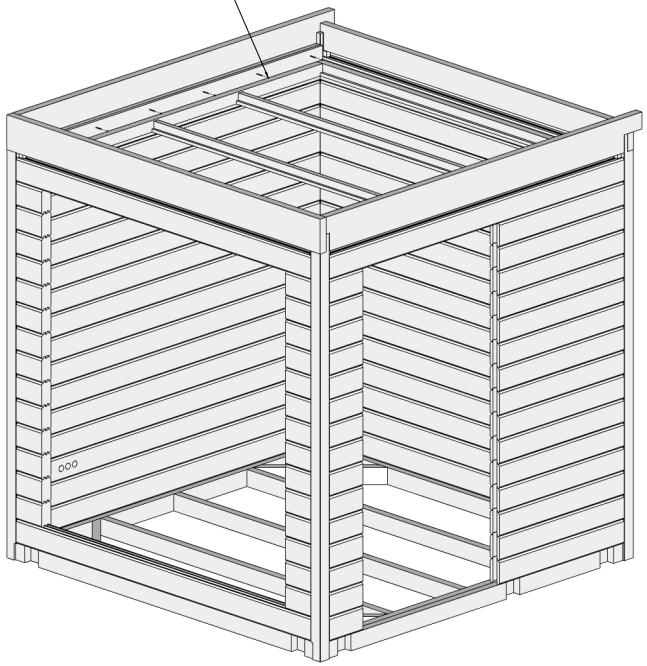

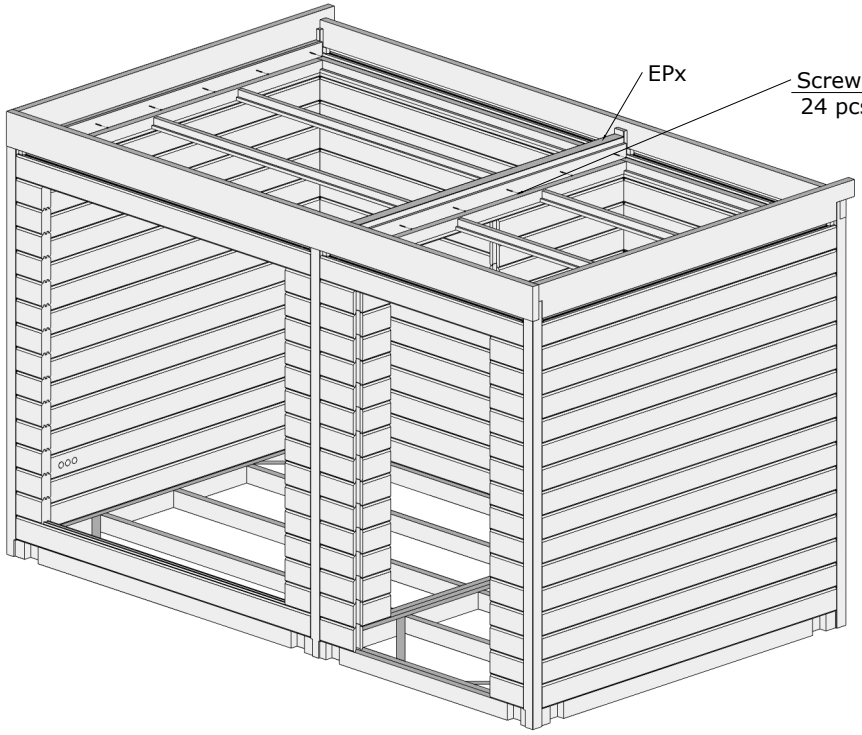



Not a single part may be fastened to the wall logs with a screw!

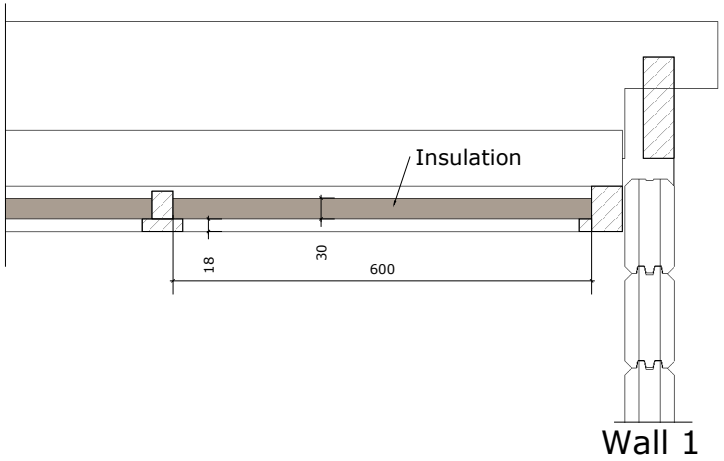


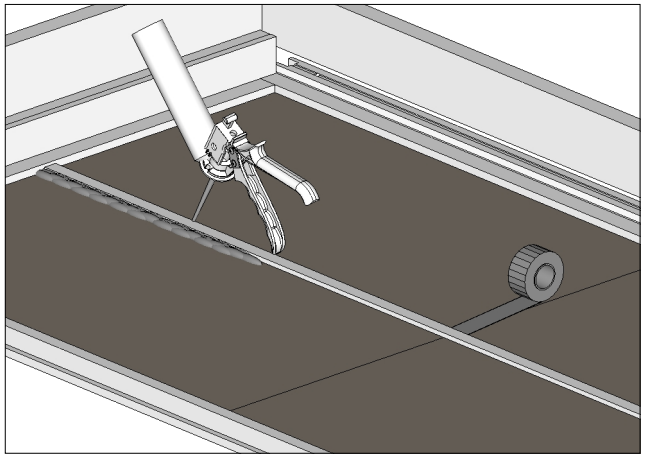


**** Gun Foam and aluminium tape is not included in the package!***

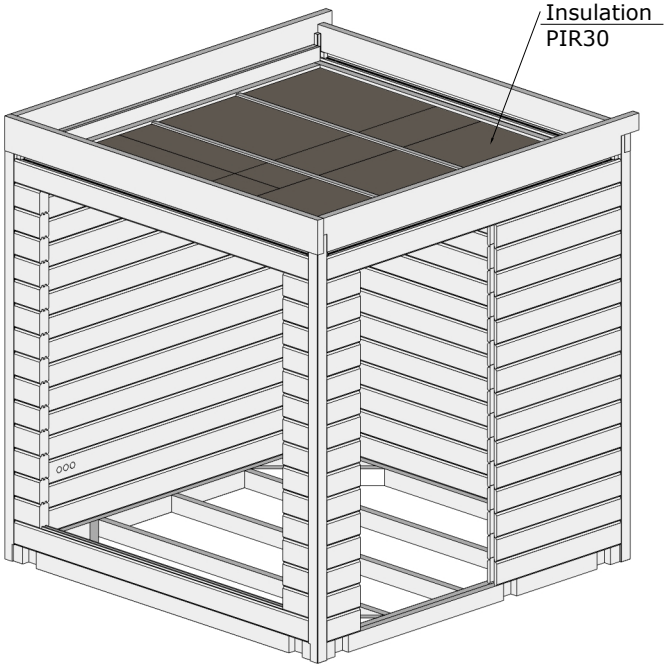

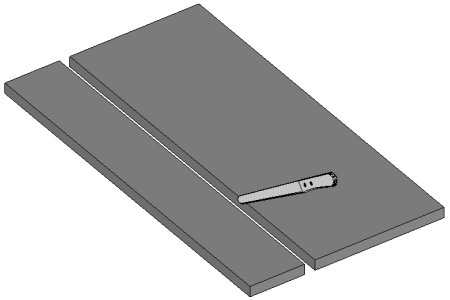


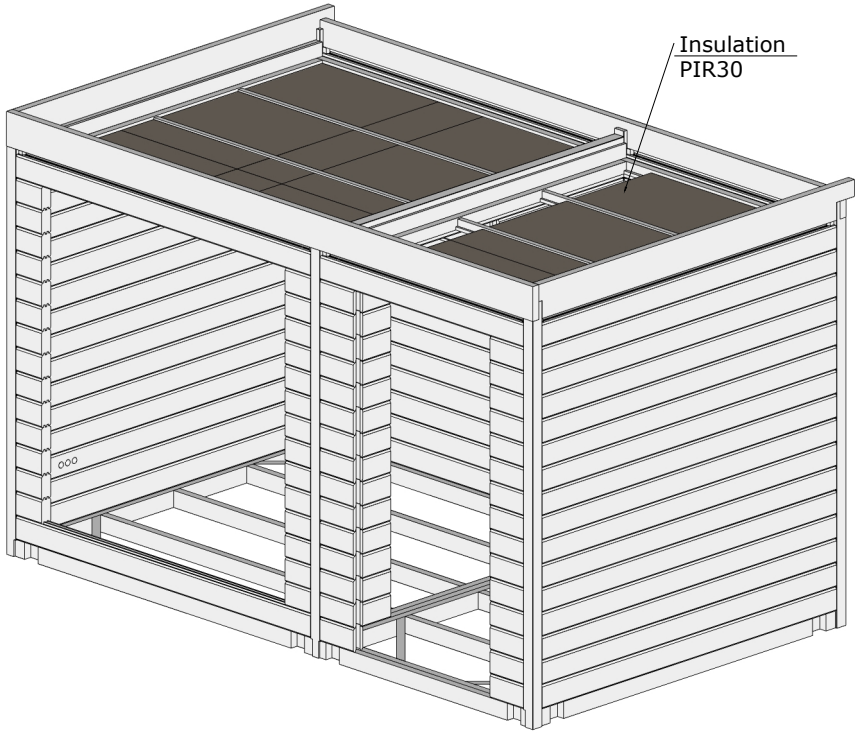



Cube M

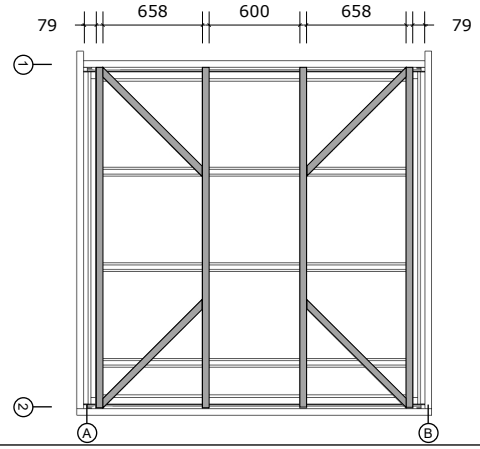



Cube L

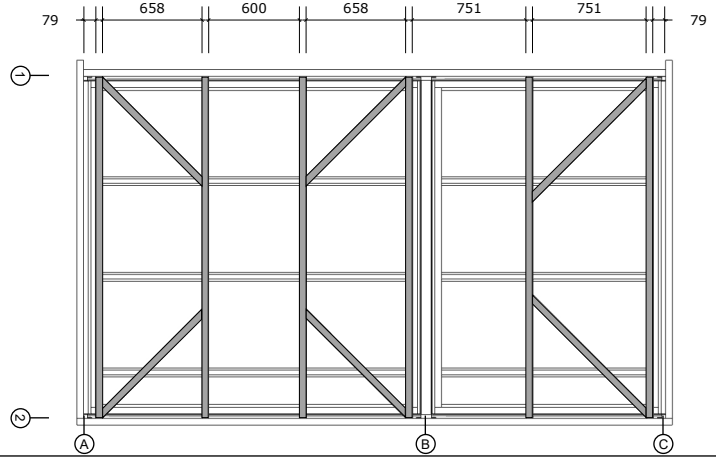


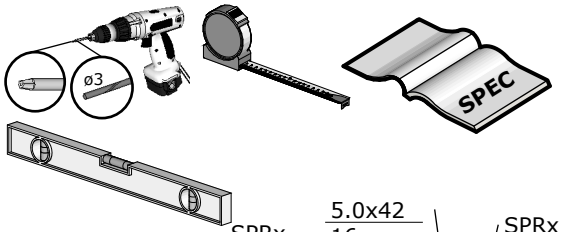


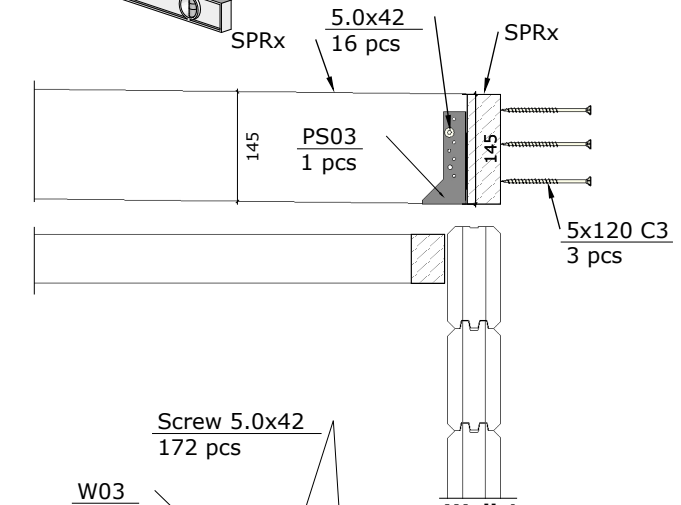

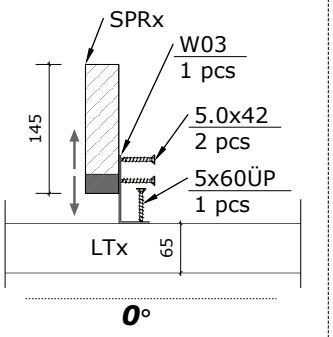


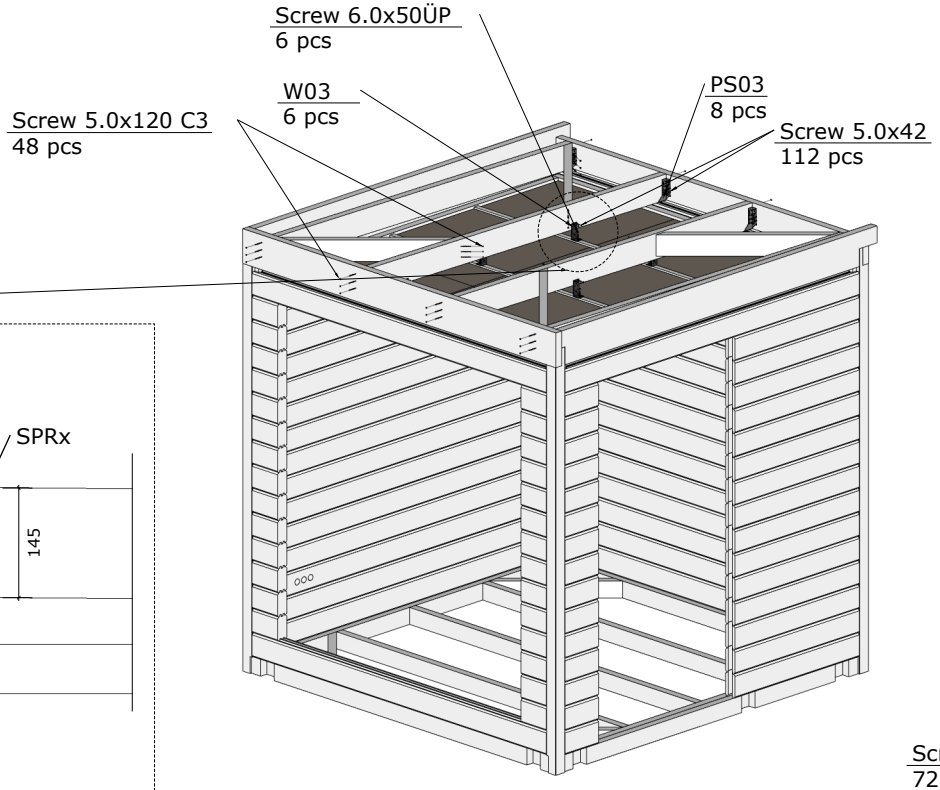


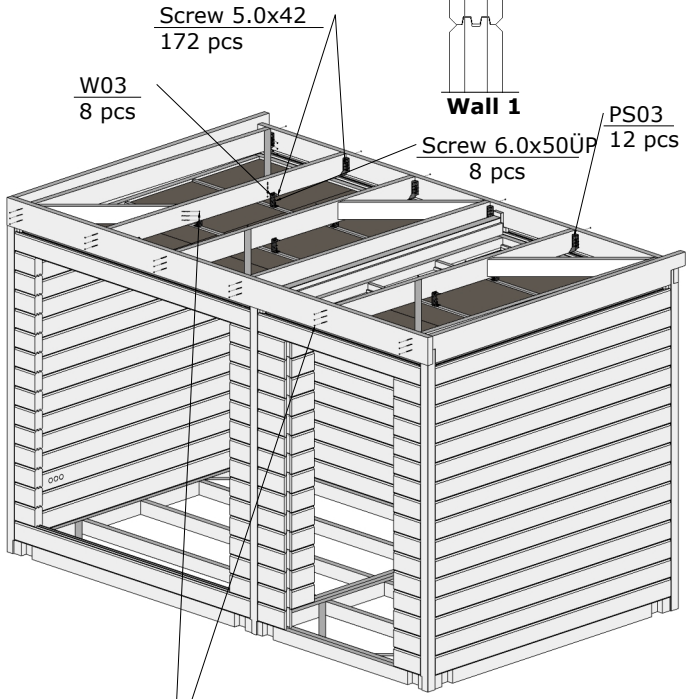


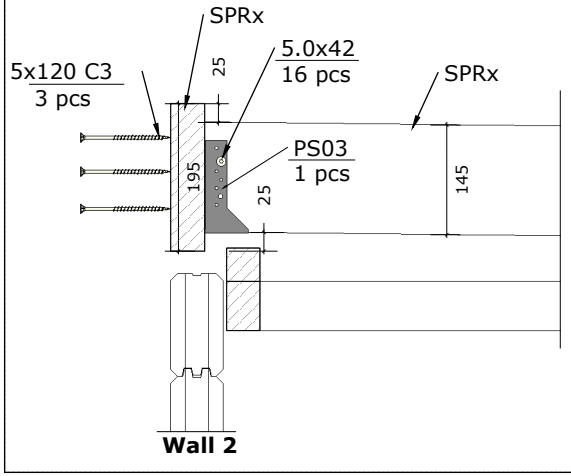



Not a single part may be fastened to the wall logs with a screw!

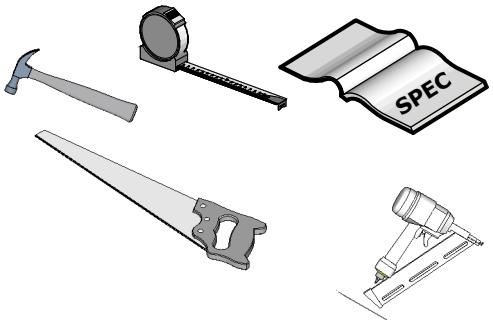

SPEC

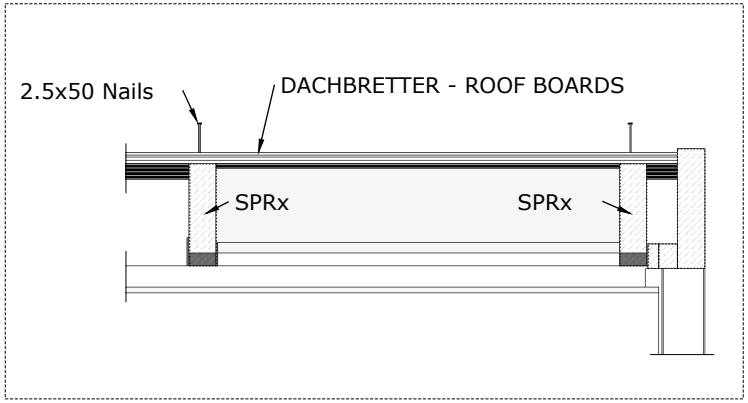

2.5x50 Nails
DACHBRETTER - ROOF BOARDS
SPRx
SPRx

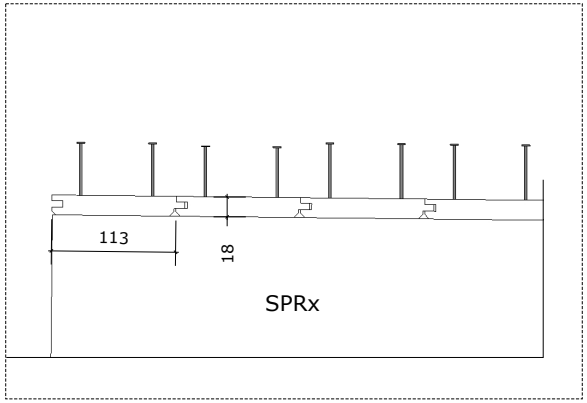

113
18
SPRx

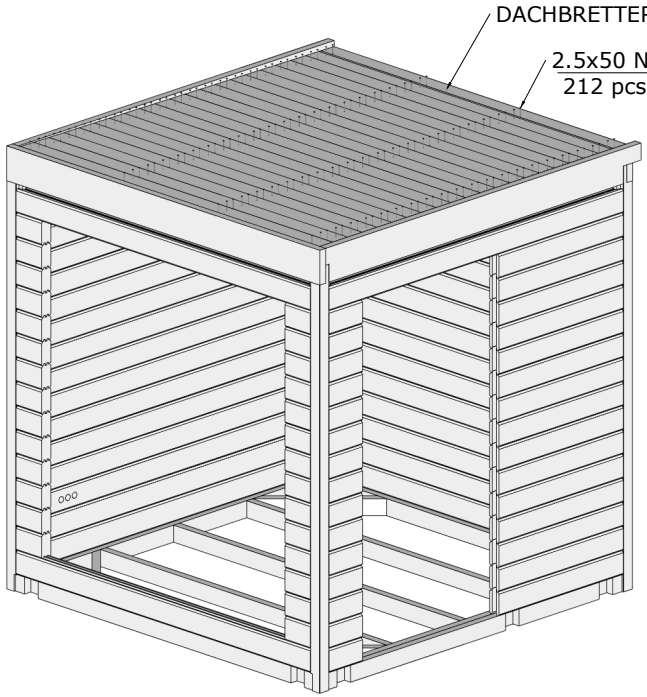

DACHBRETTER - ROOF BOARDS
2.5x50 Nails
212 pcs

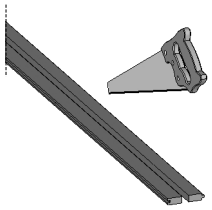


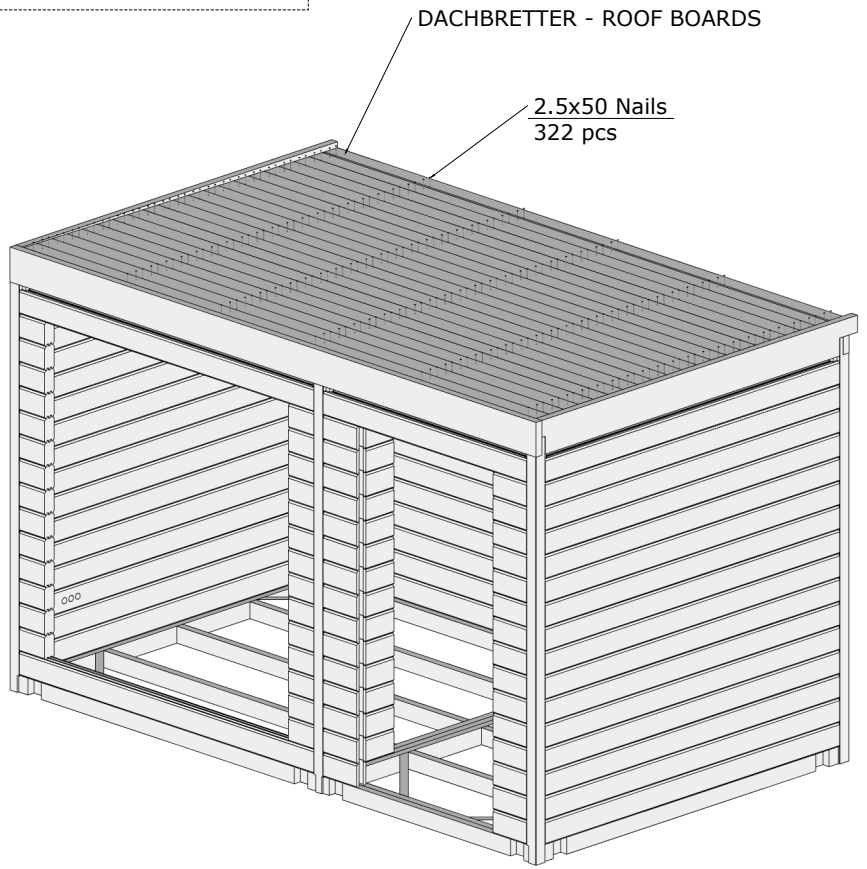

DACHBRETTER - ROOF BOARDS
2.5x50 Nails
322 pcs

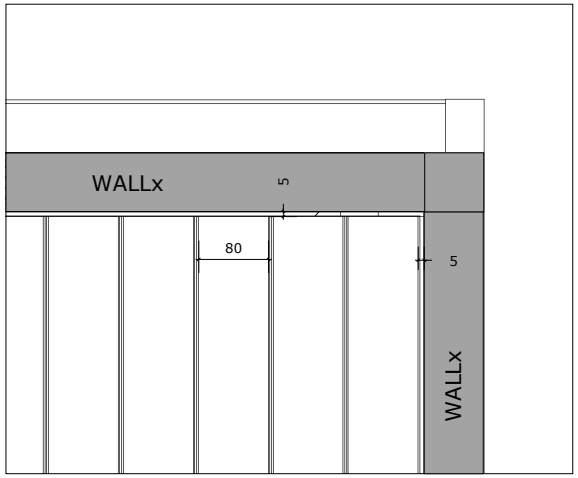

WALLx
5
80
5
WALLx

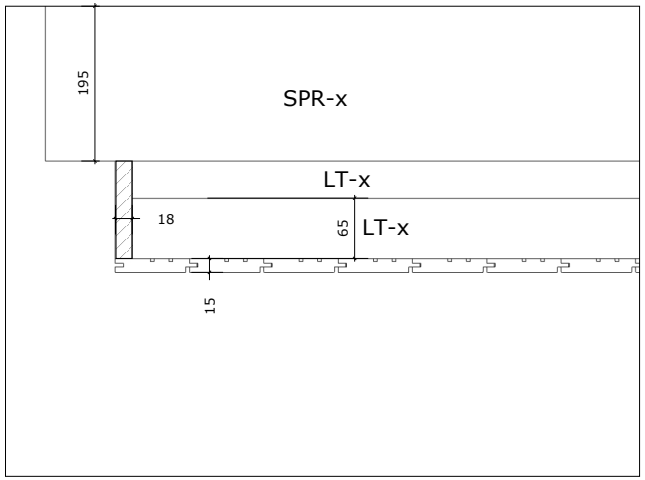

195
SPR-x
LT-x
18
65
LT-x
15

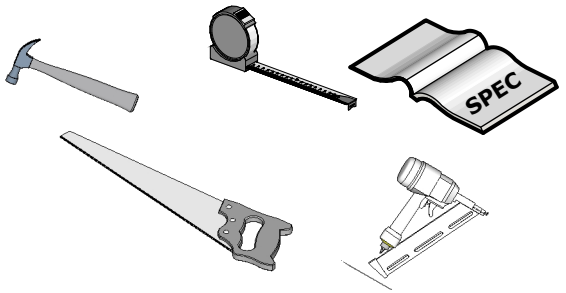

SPEC

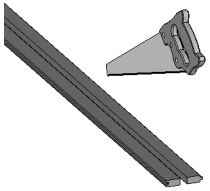


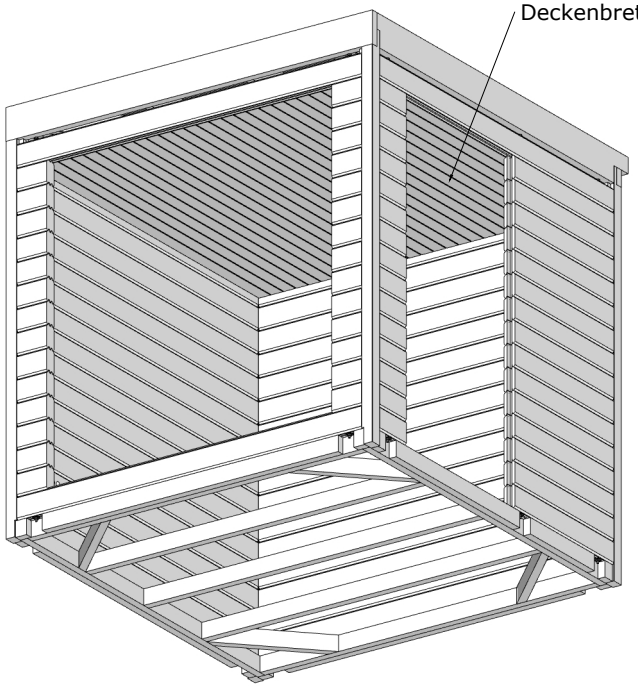
Deckenbretter - Ceiling boards

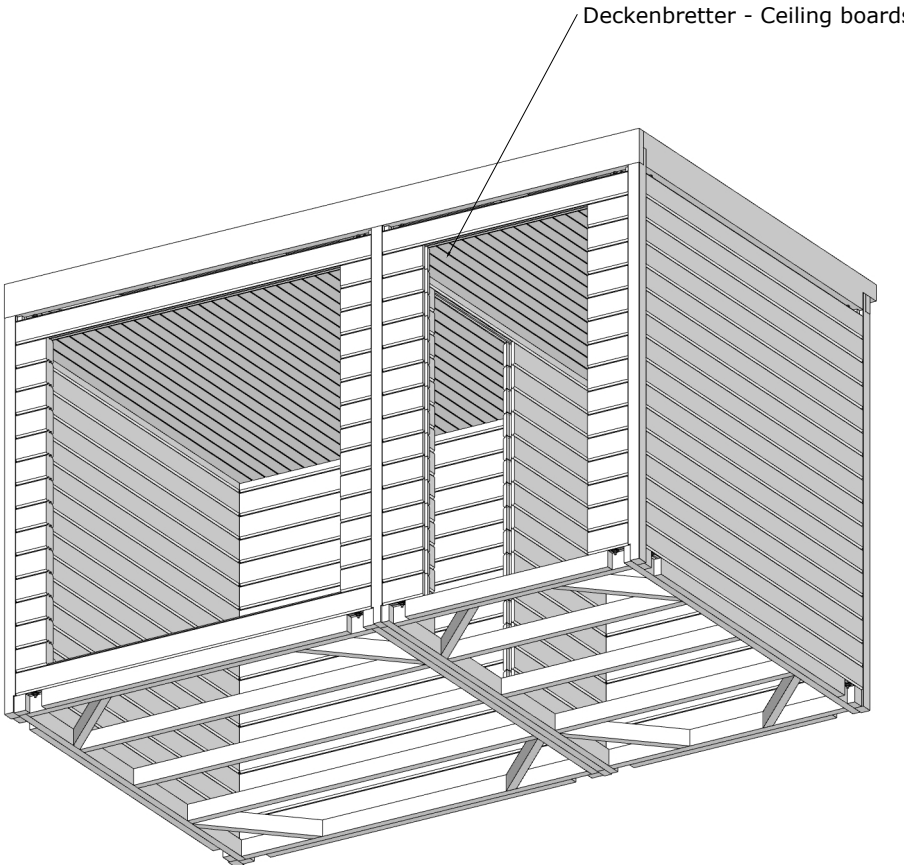

Deckenbretter - Ceiling boards

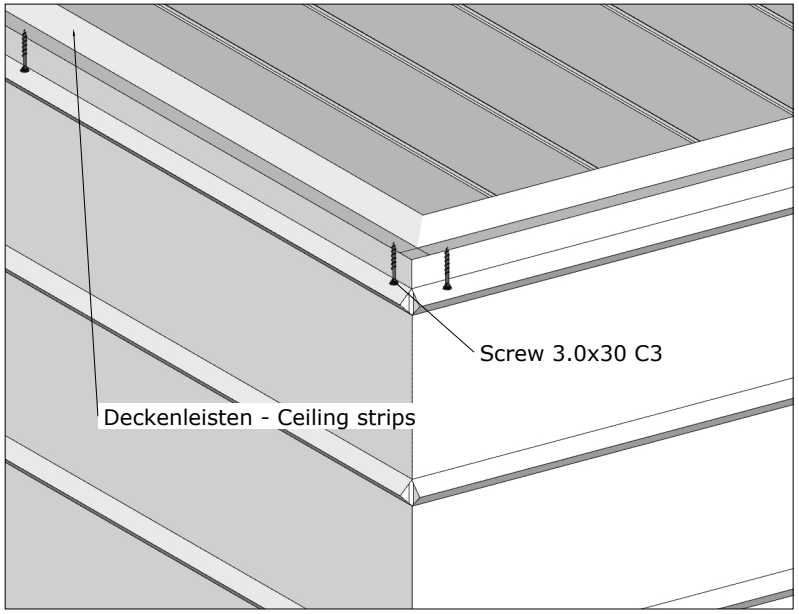

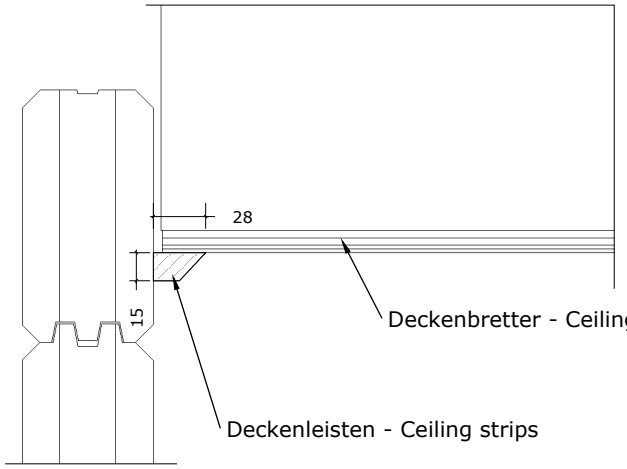


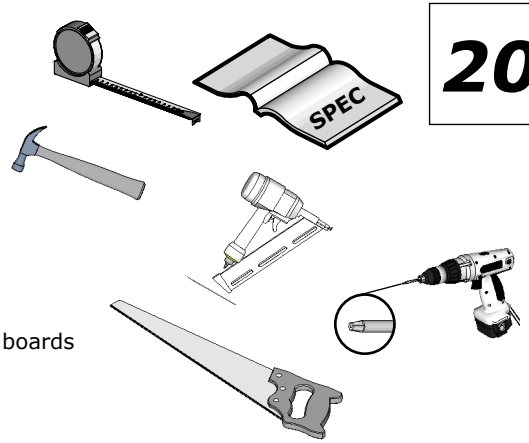


WALL x

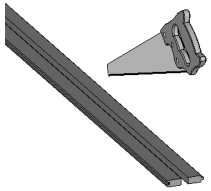


Screw 3.0x30 C3
24 pcs

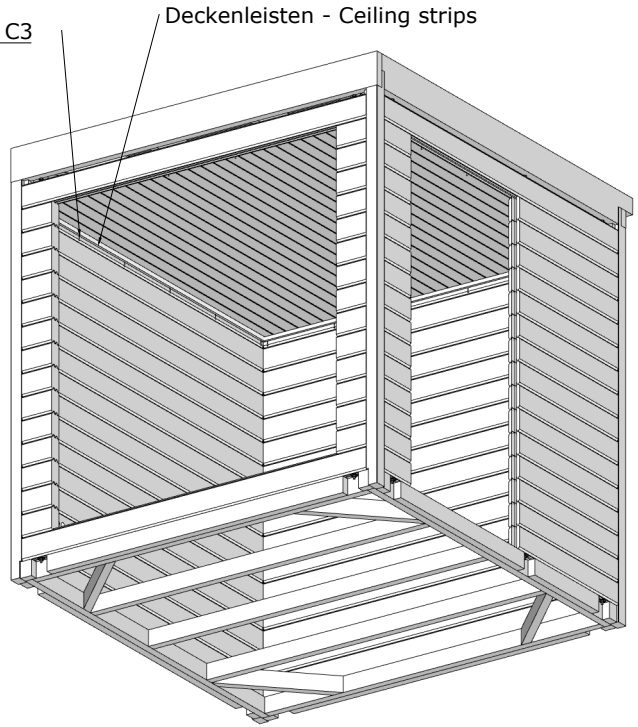



Screw 3.0x30 C3
44 pcs

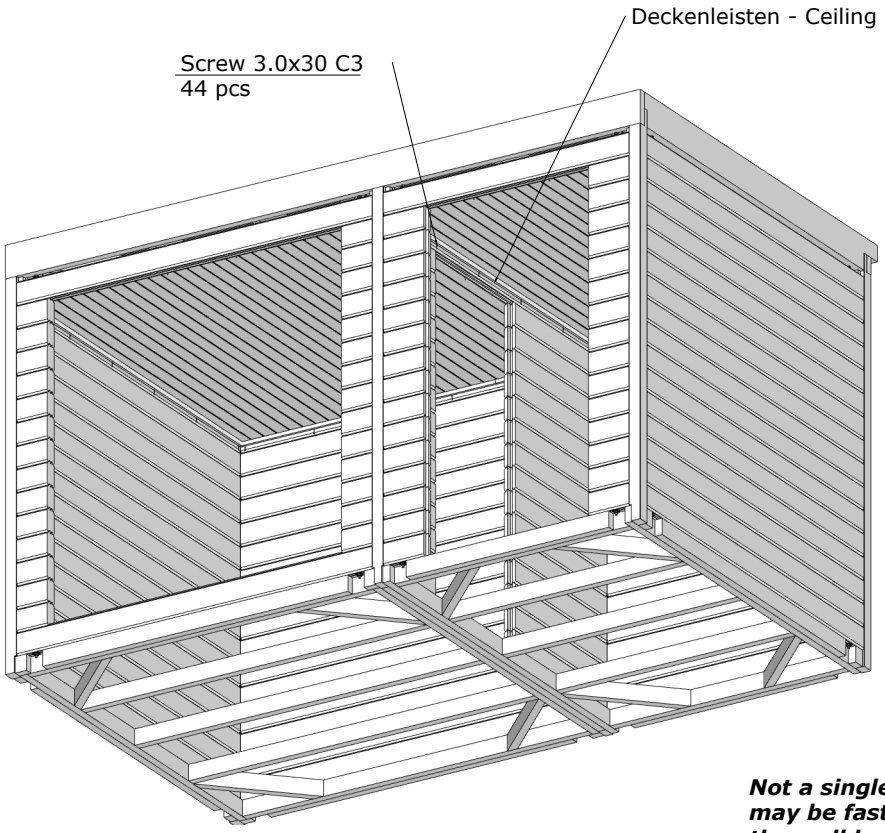



Not a single part may be fastened to the wall logs with a screw!

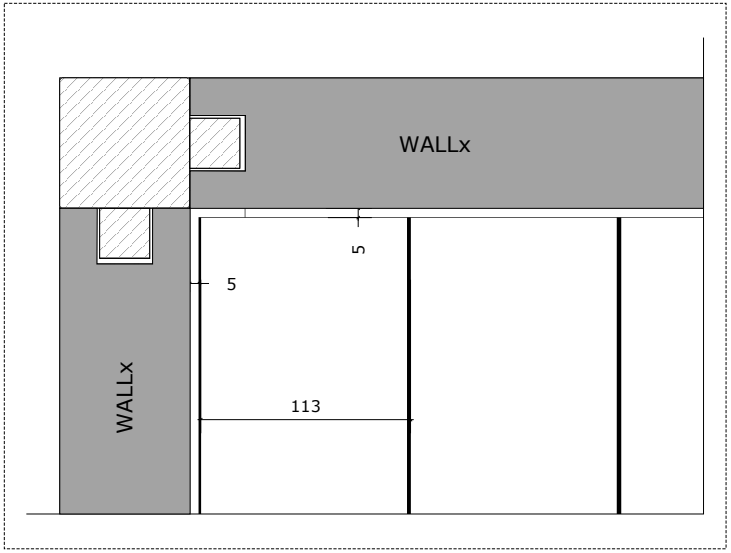

WALLx
5
5
WALLx
113

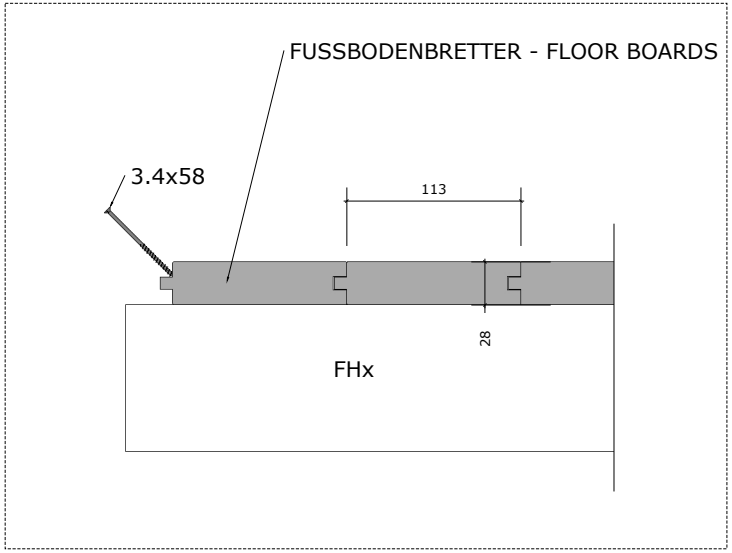

FUSSBODENBRETTER - FLOOR BOARDS
3.4x58
113
28
FHx

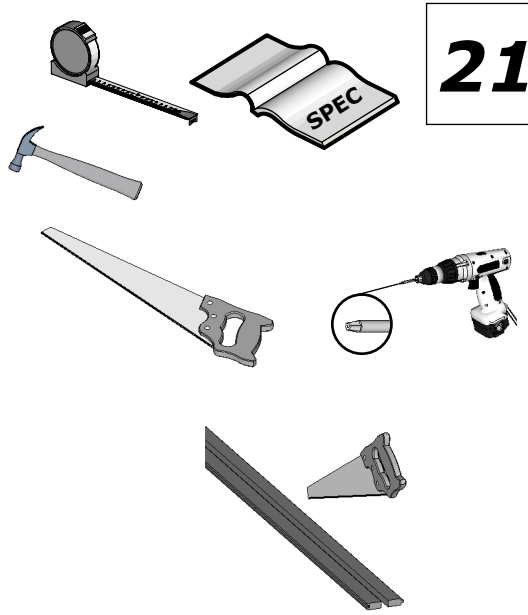

SPEC

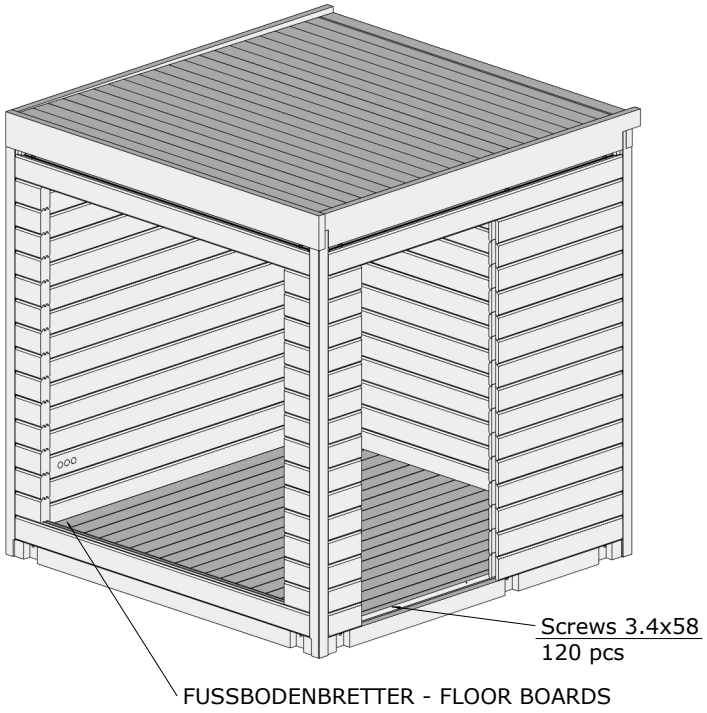
Screws 3.4x58
120 pcs
FUSSBODENBRETTER - FLOOR BOARDS

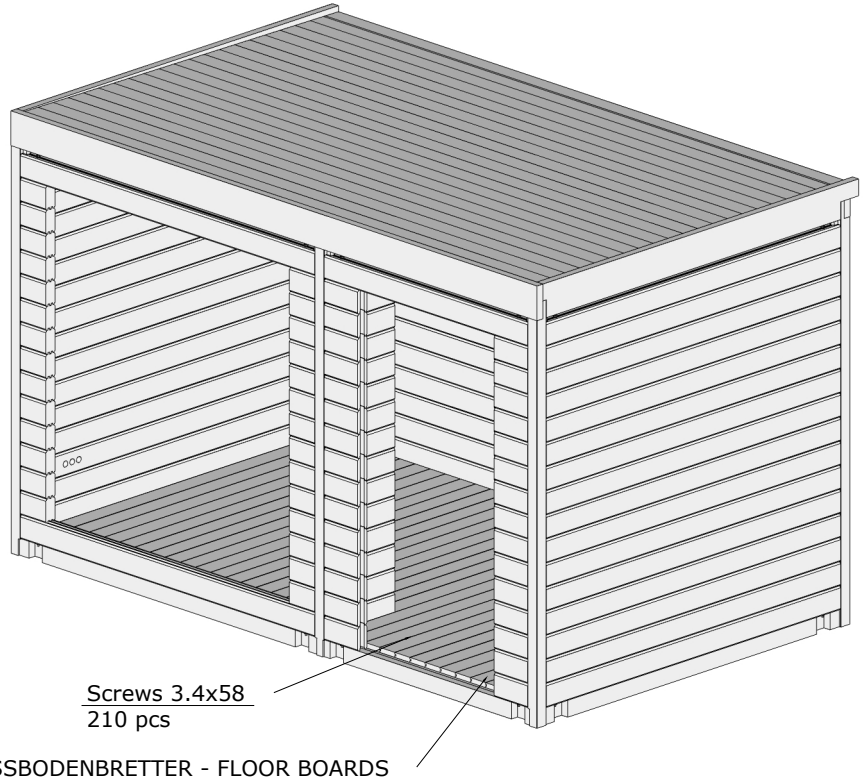
Screws 3.4x58
210 pcs
FUSSBODENBRETTER - FLOOR BOARDS

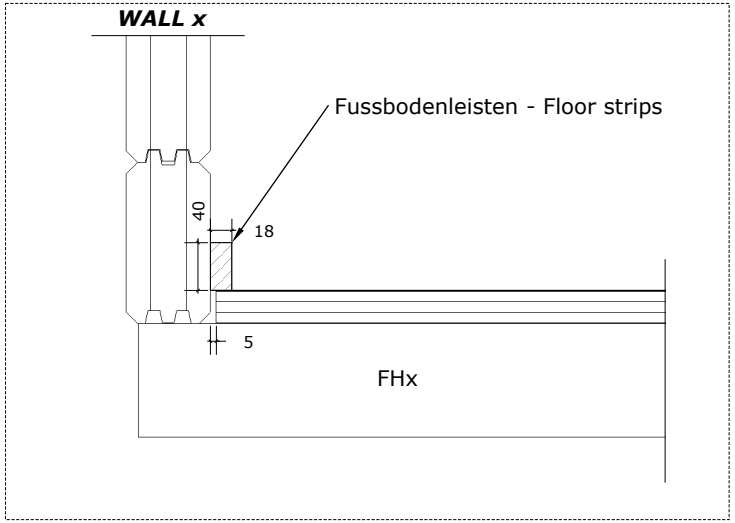


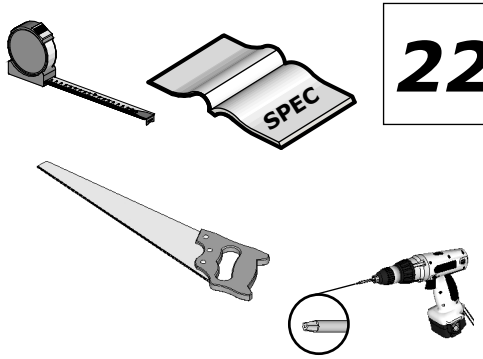

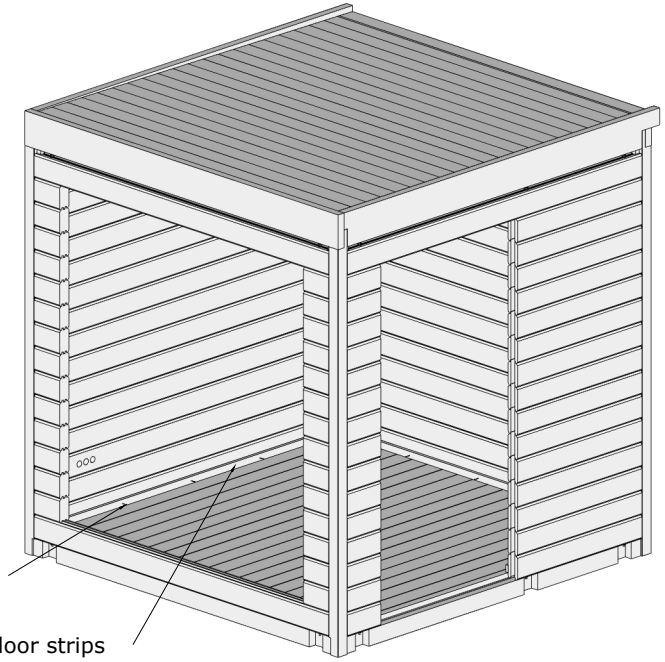


Screw 3.0x30 C3
20 pcs


Fussbodenleisten - Floor strips

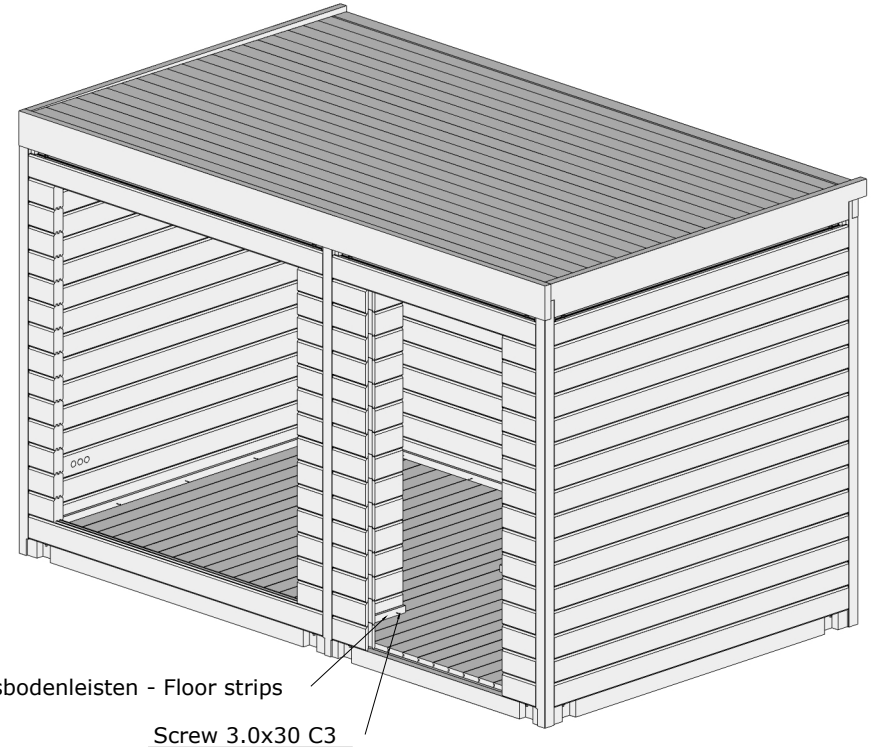



Fussbodenleisten - Floor strips


Screw 3.0x30 C3
34 pcs

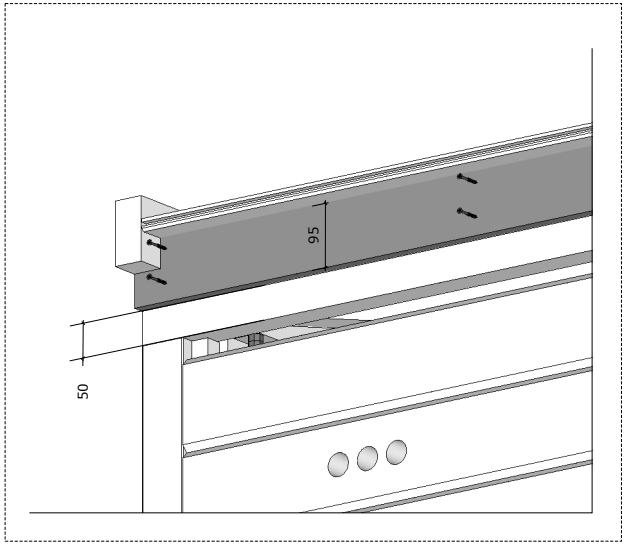


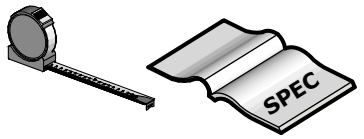

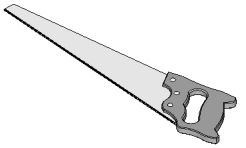





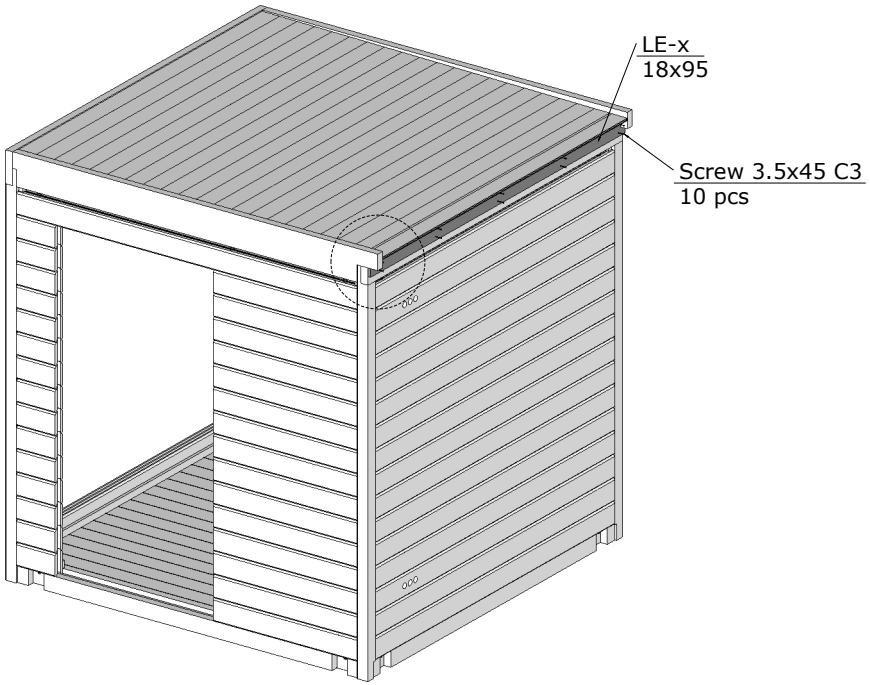


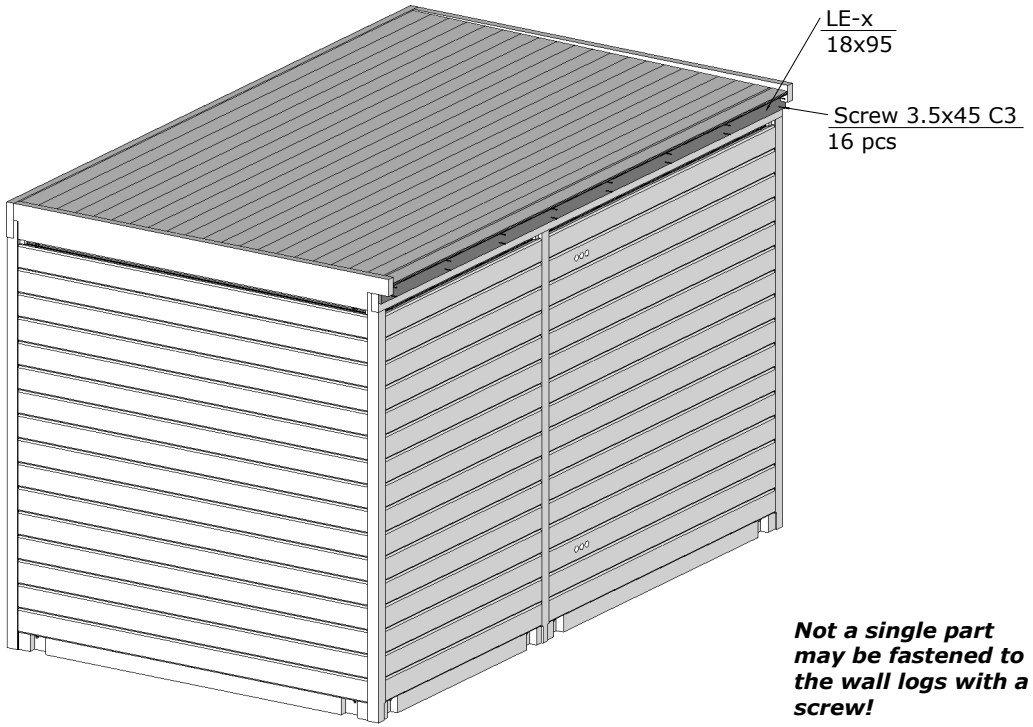



Not a single part may be fastened to the wall logs with a screw!

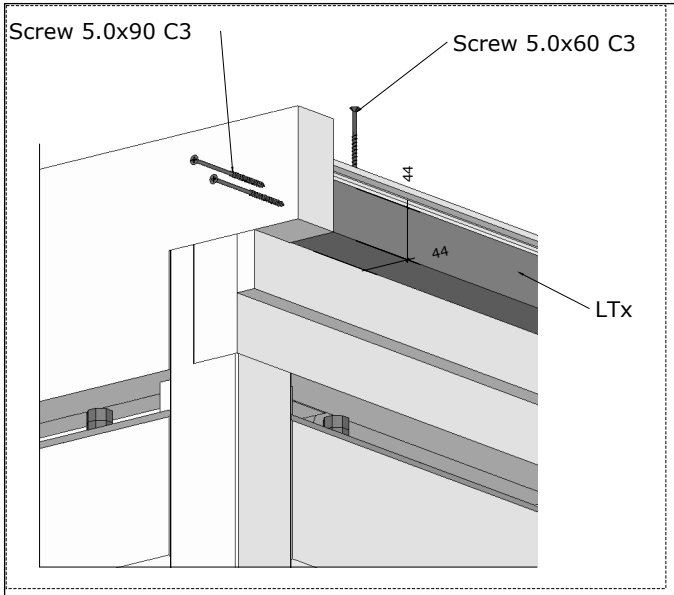

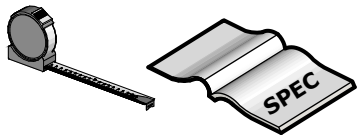


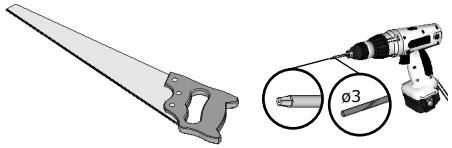


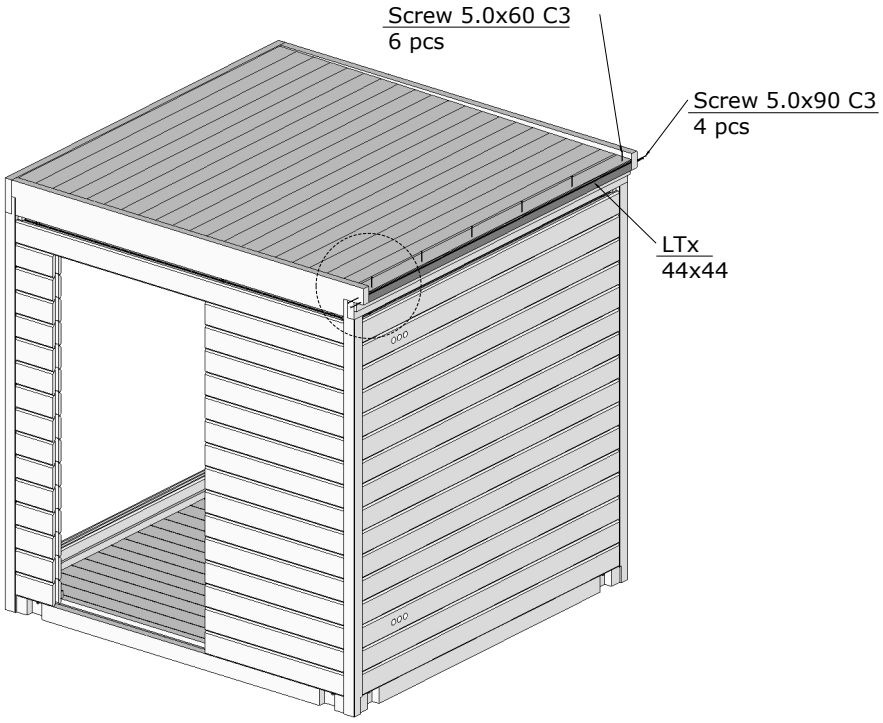


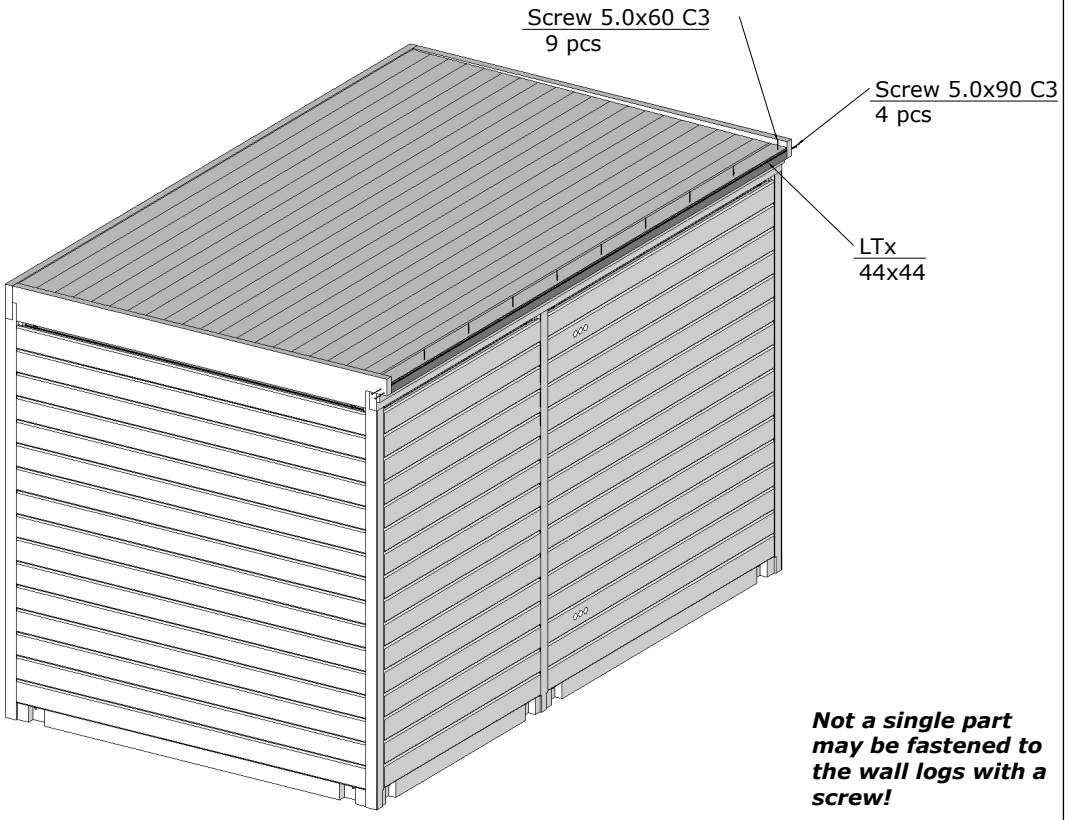



Not a single part may be fastened to the wall logs with a screw!

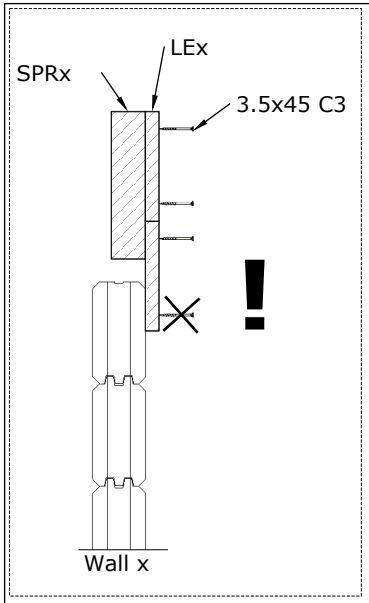


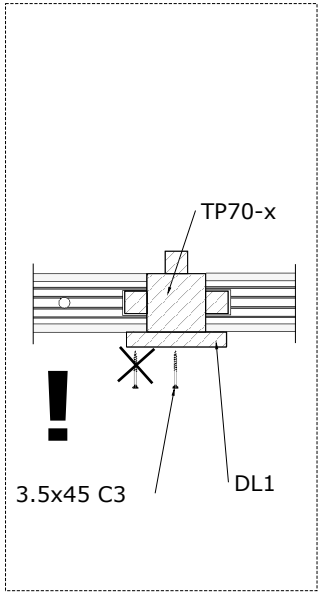


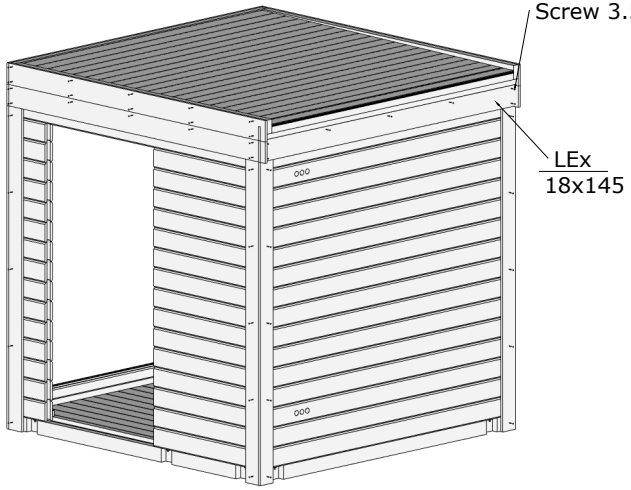


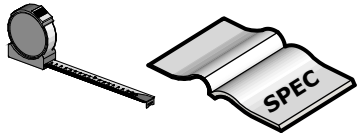


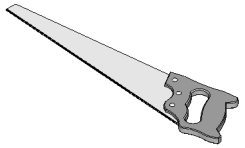

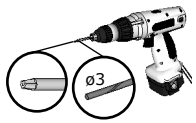


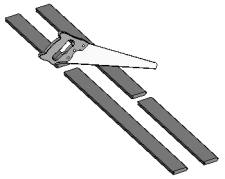


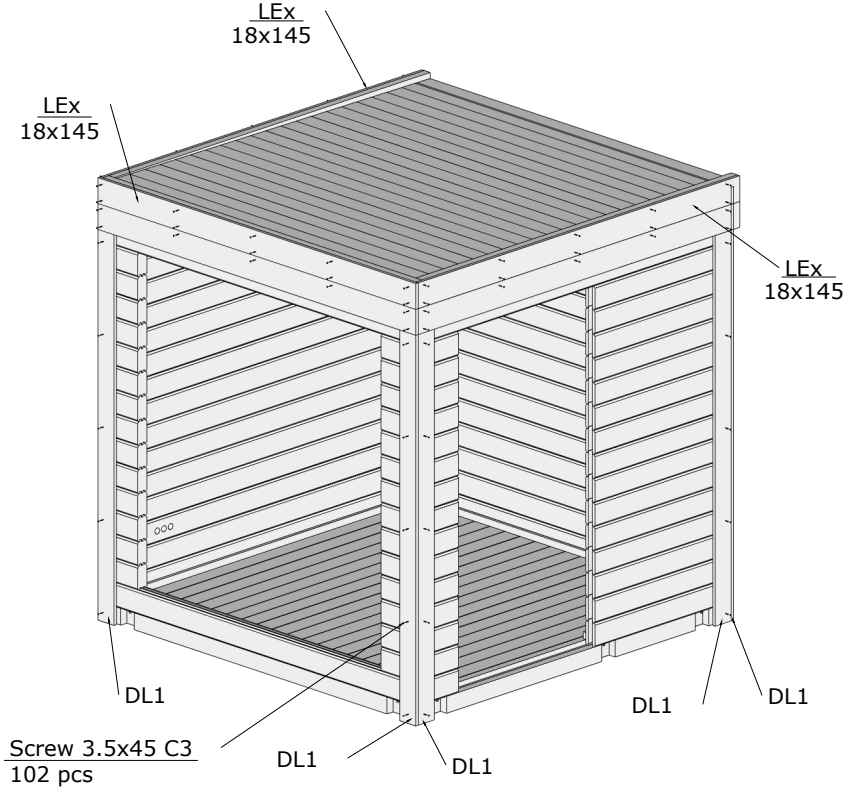


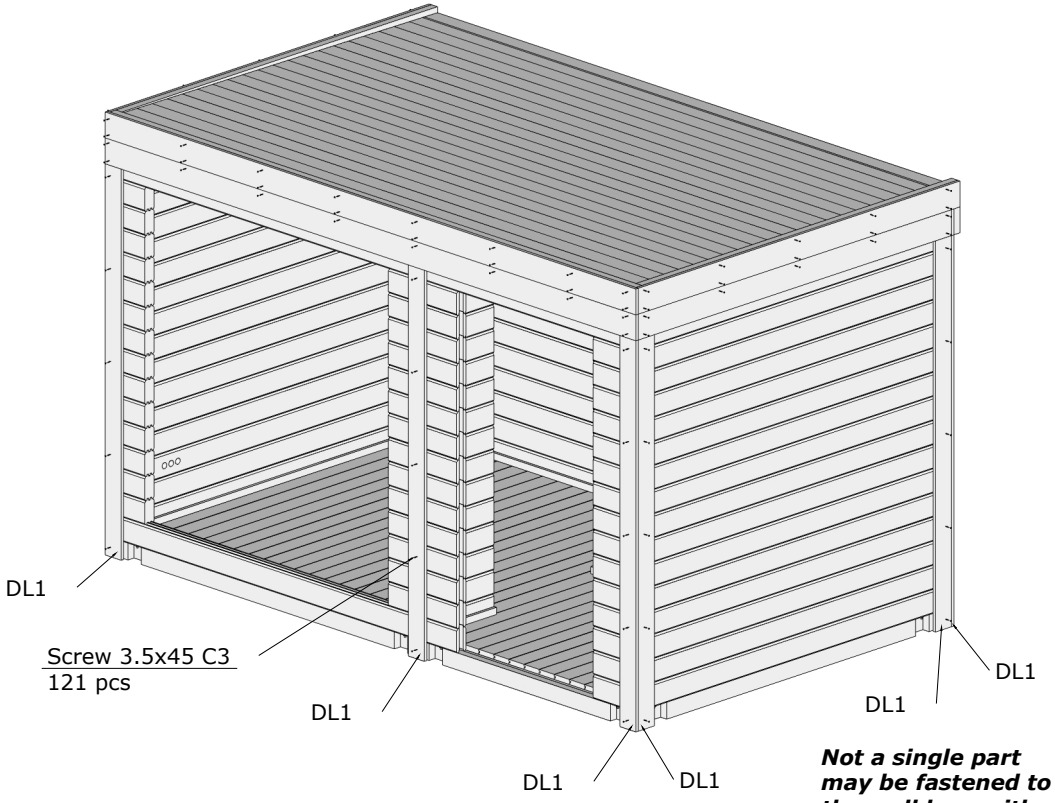



Not a single part may be fastened to the wall logs with a screw!

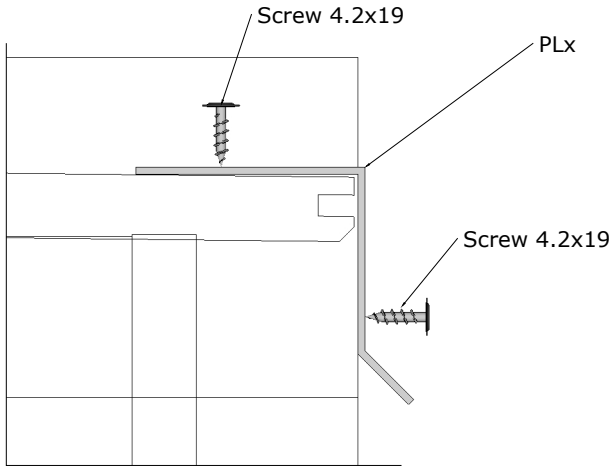

Screw 4.2x19
PLx
Screw 4.2x19

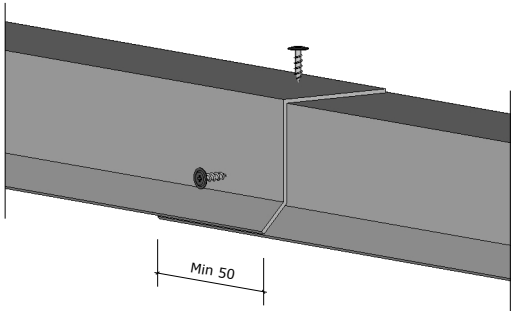

Min 50

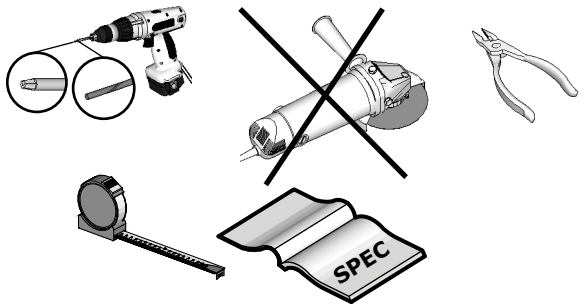

SPEC

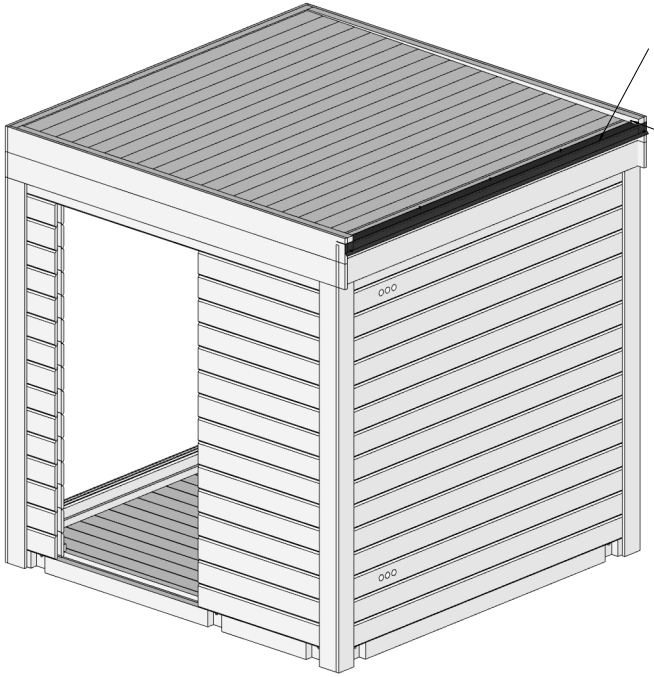

PL-1
Screw 4.2x19
14 pcs

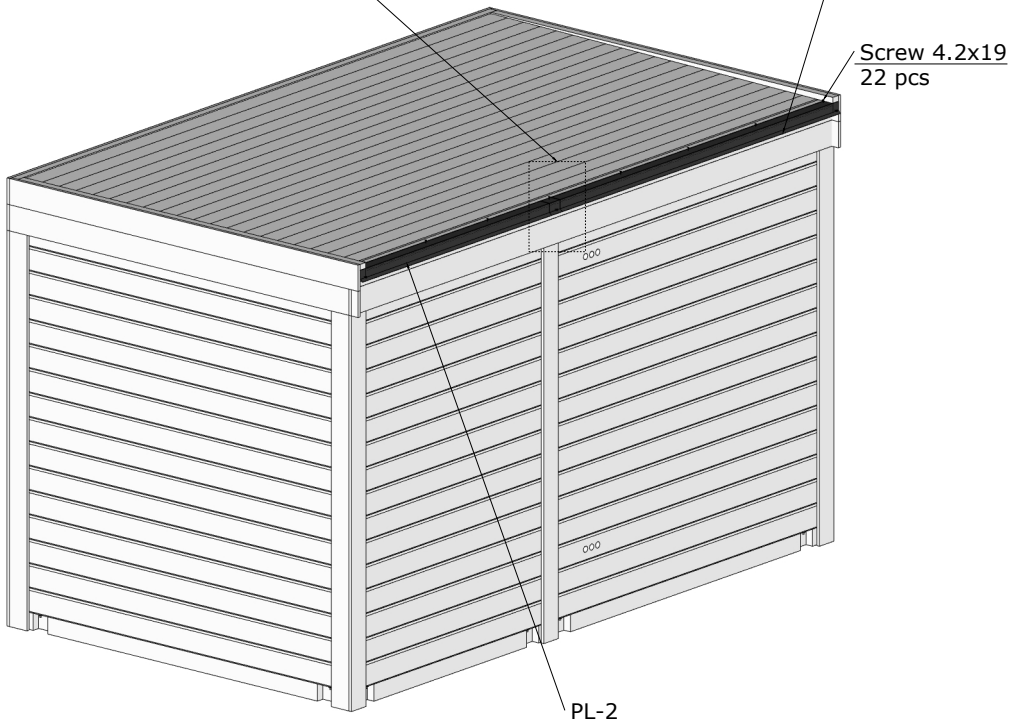

PL-1
Screw 4.2x19
22 pcs
PL-2

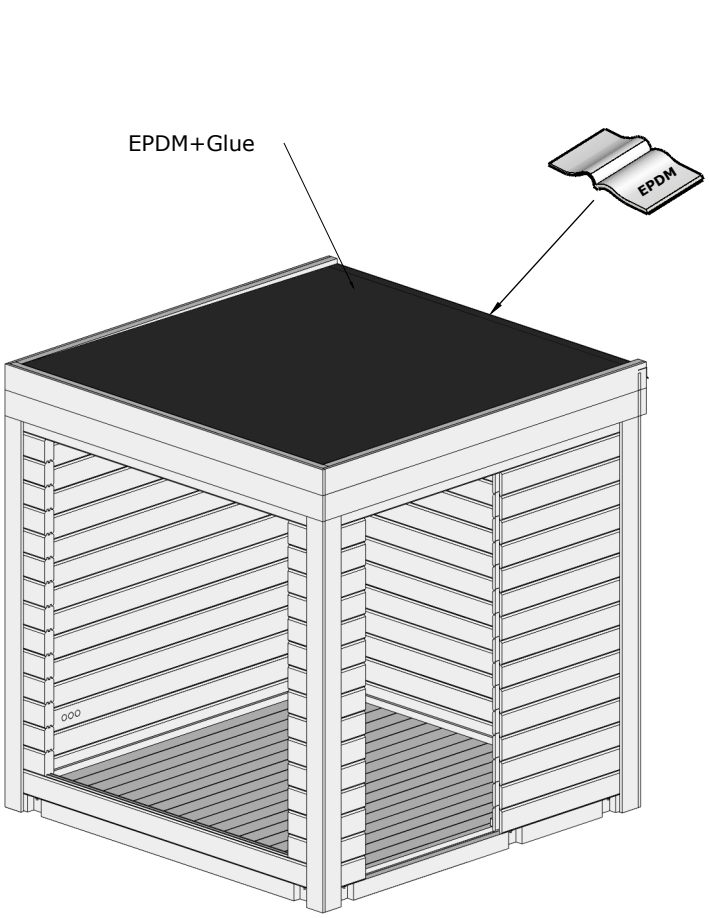
EPDM+Glue
EPDM

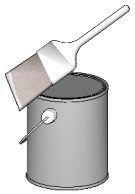


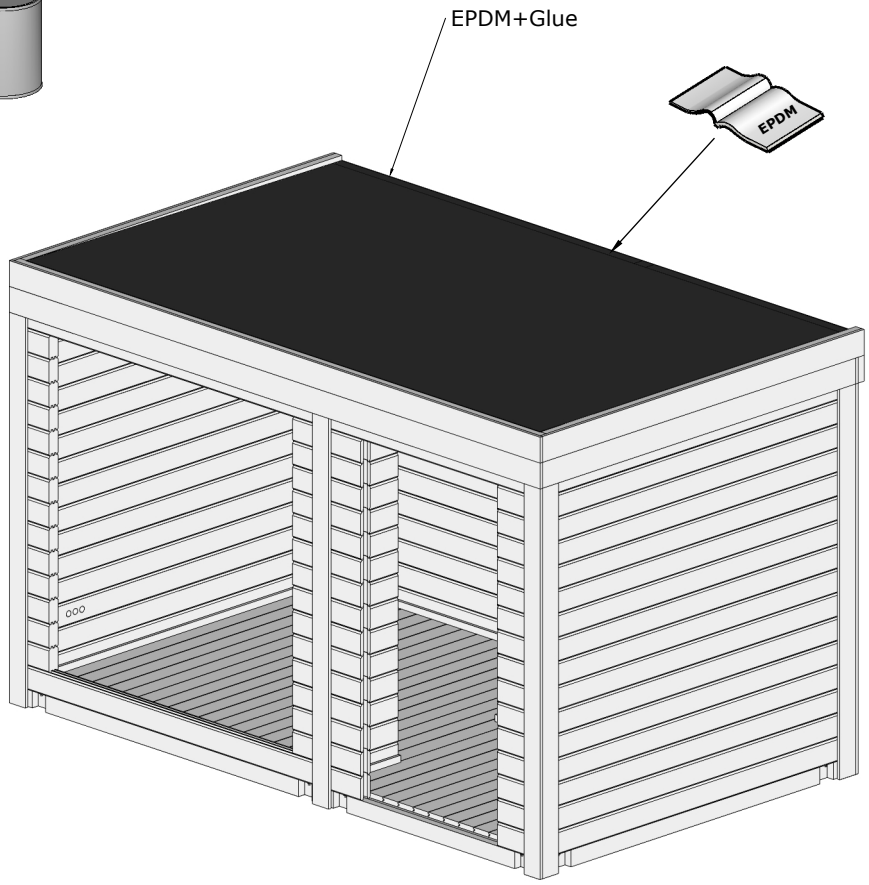

EPDM+Glue
EPDM

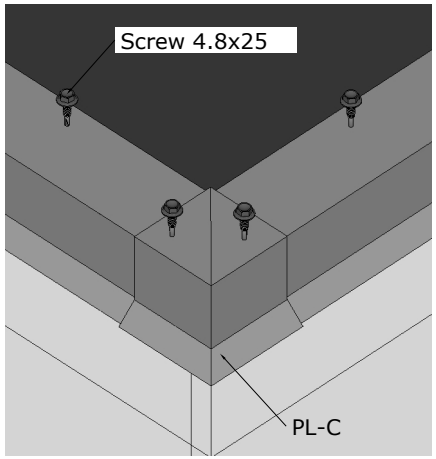

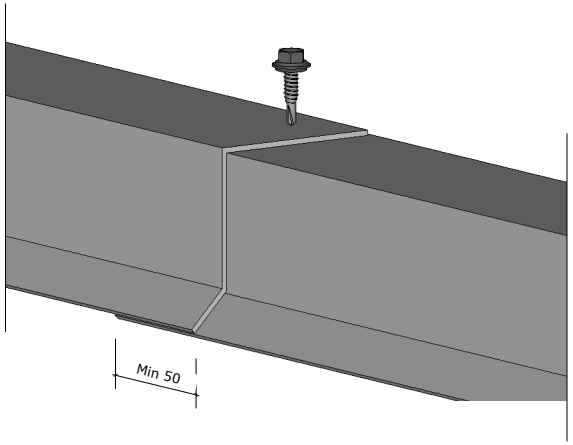


TO01

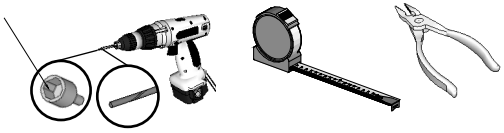


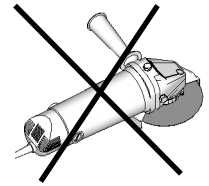




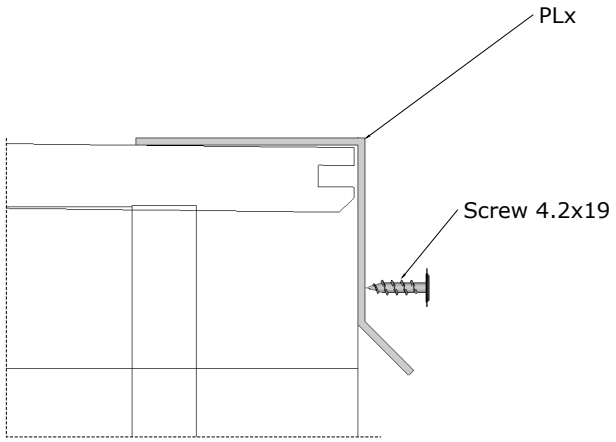


Screw 4.8x25
20 pcs

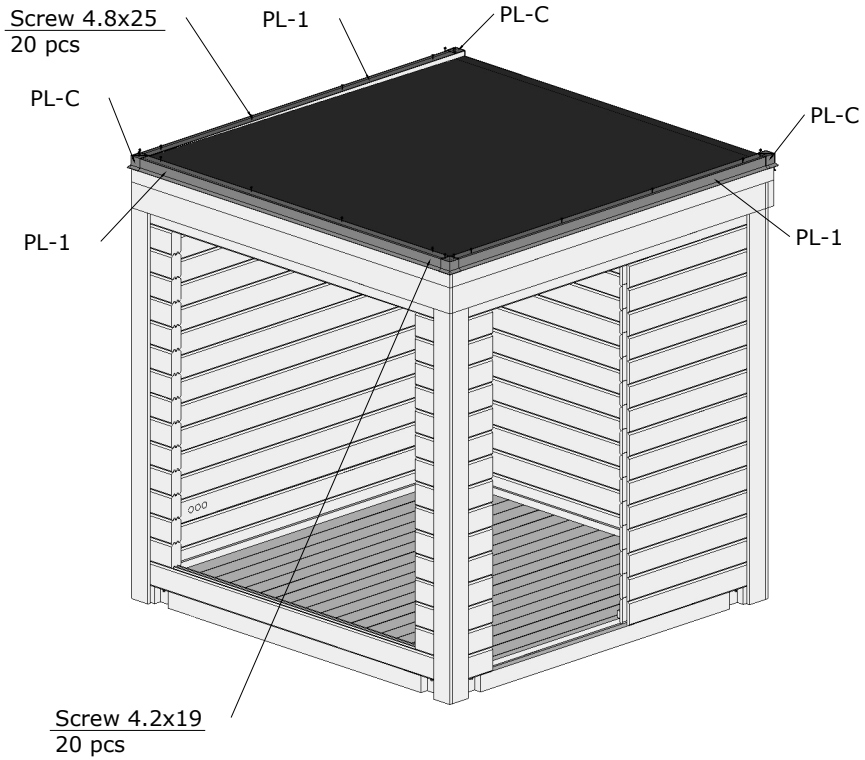


Screw 4.8x25
22 pcs

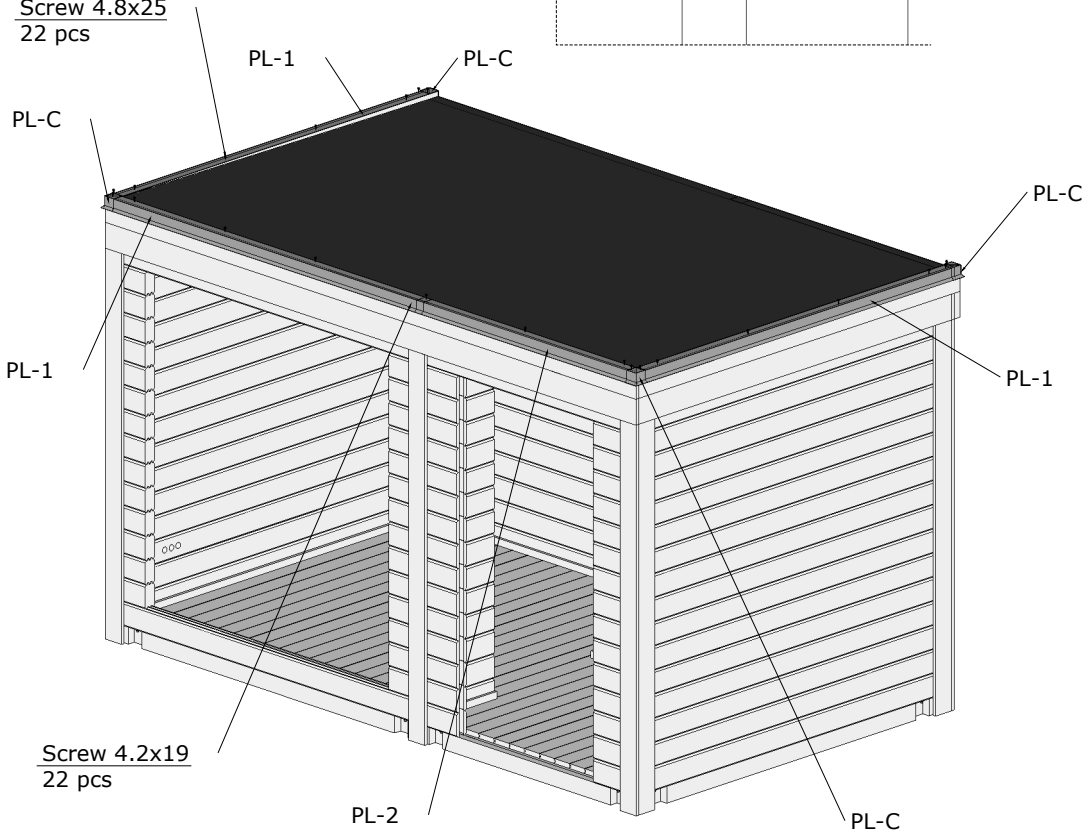

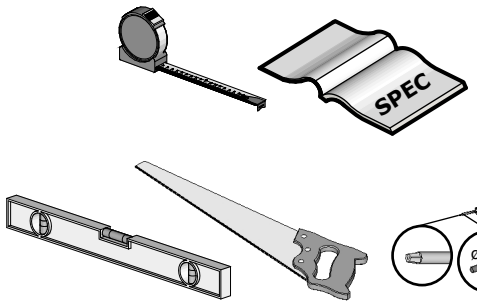

Screw 4.2x19
12 pcs

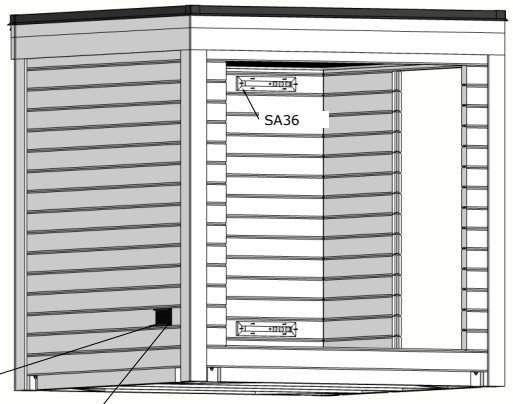



SA38





Screw 3.5x45 C3
18 pcs




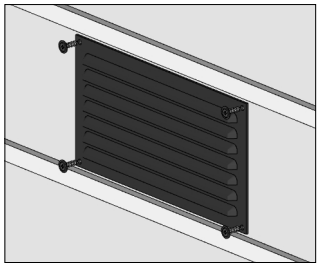


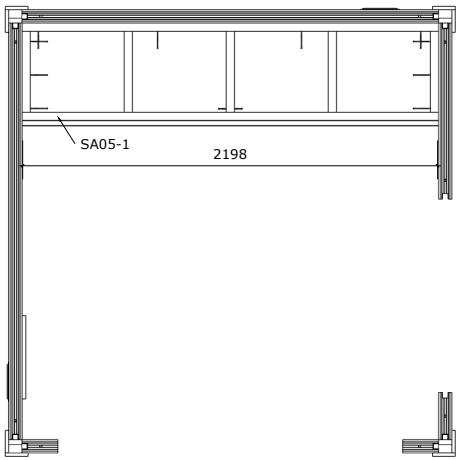

SA05-1
2198

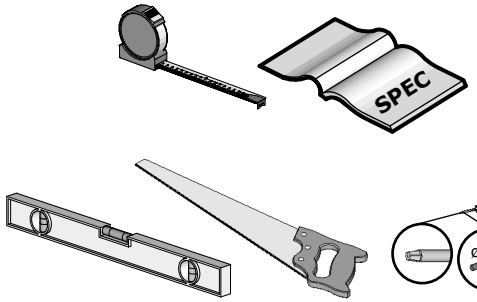

SPEC
ø3

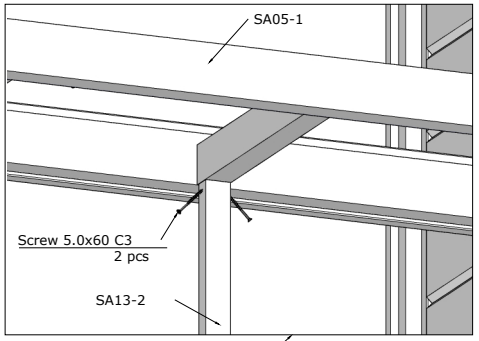

SA05-1
Screw 5.0x60 C3
2 pcs
SA13-2

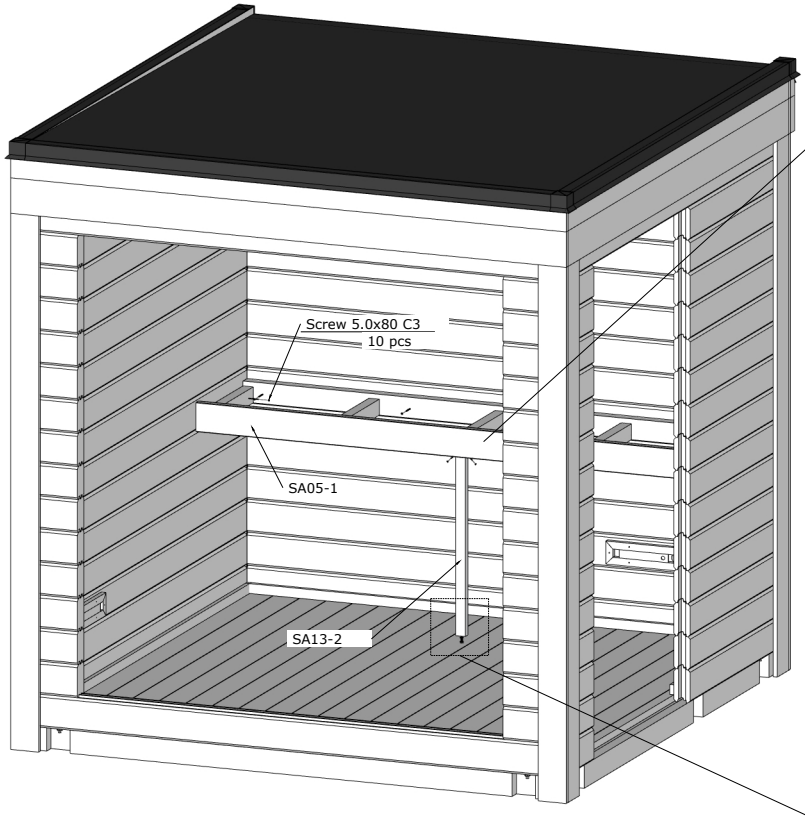

Screw 5.0x80 C3
10 pcs
SA05-1
SA13-2

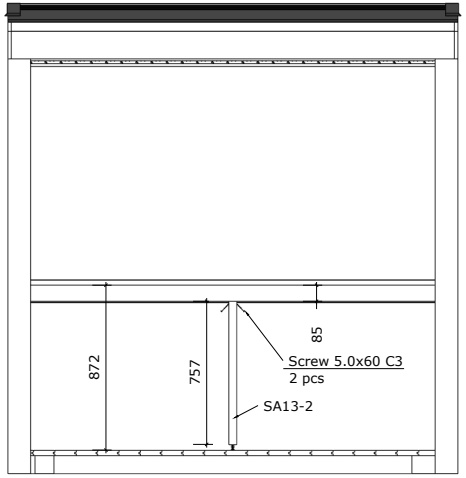

872
757
85
Screw 5.0x60 C3
2 pcs
SA13-2

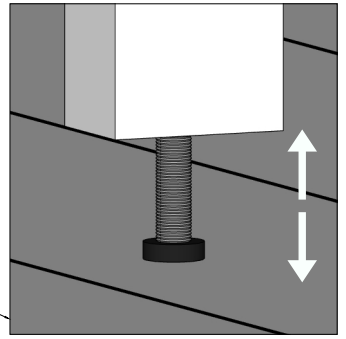


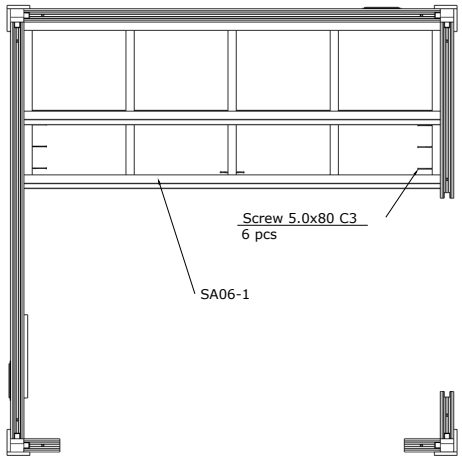

Screw 5.0x80 C3
6 pcs
SA06-1

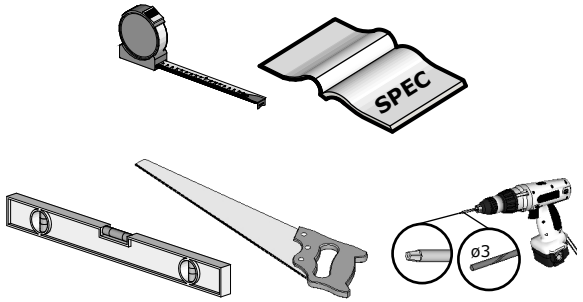

SPEC
ø3

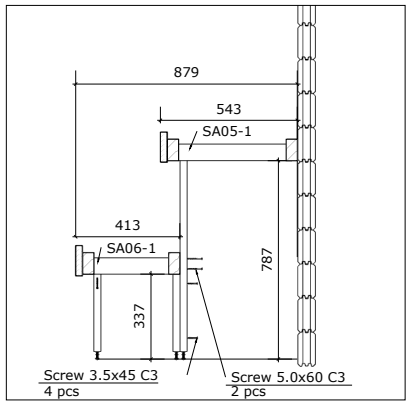

879
543
SA05-1
413
SA06-1
787
337
Screw 3.5x45 C3
4 pcs
Screw 5.0x60 C3
2 pcs

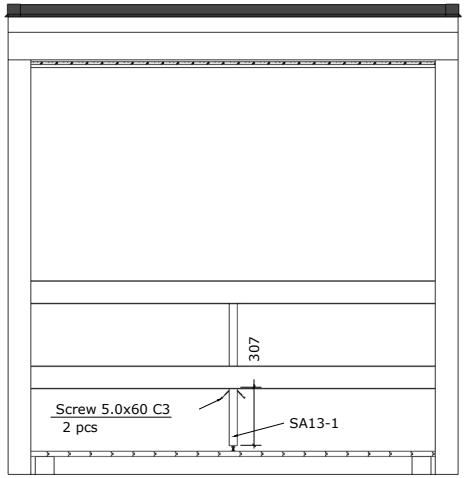

307
Screw 5.0x60 C3
2 pcs
SA13-1

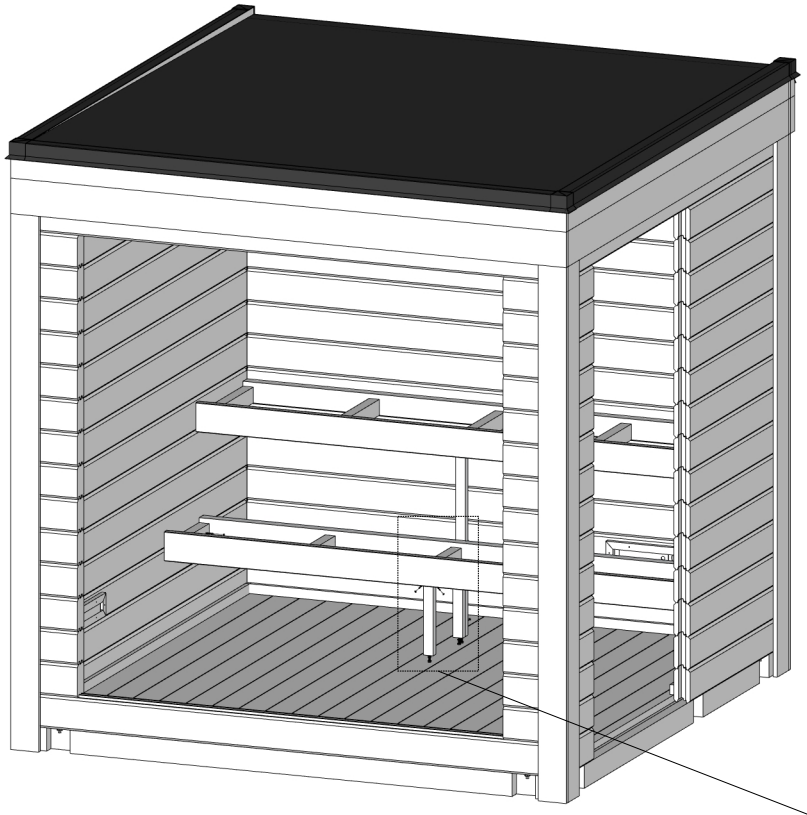


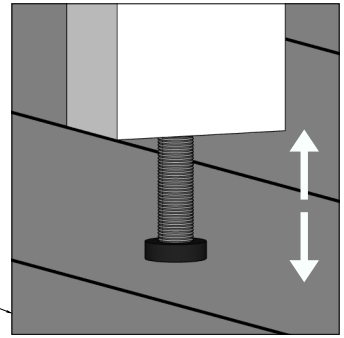

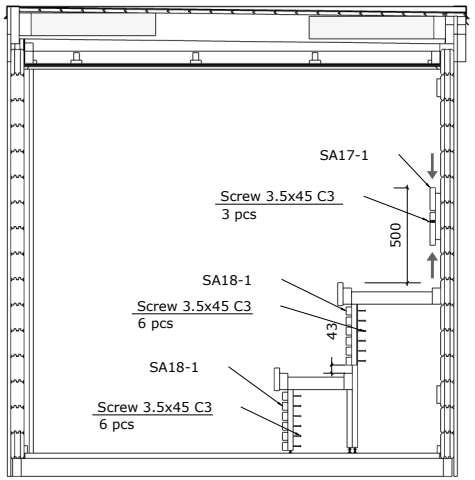

SA17-1
Screw 3.5x45 C3
3 pcs
500
SA18-1
Screw 3.5x45 C3
6 pcs
43
SA18-1
Screw 3.5x45 C3
6 pcs

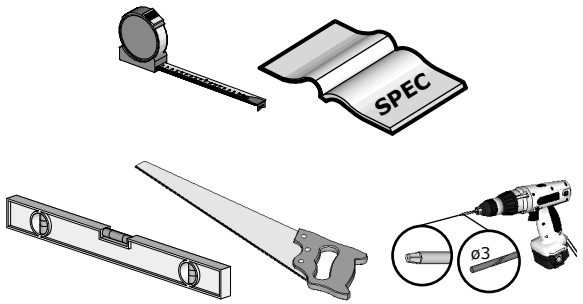
SPEC
ø3

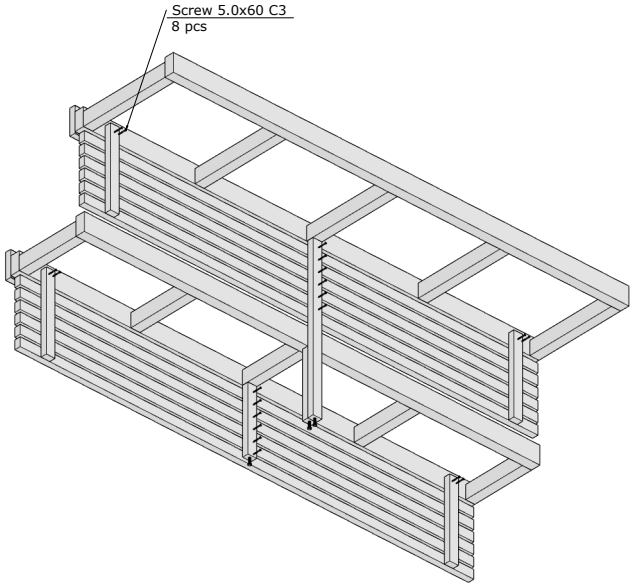

Screw 5.0x60 C3
8 pcs

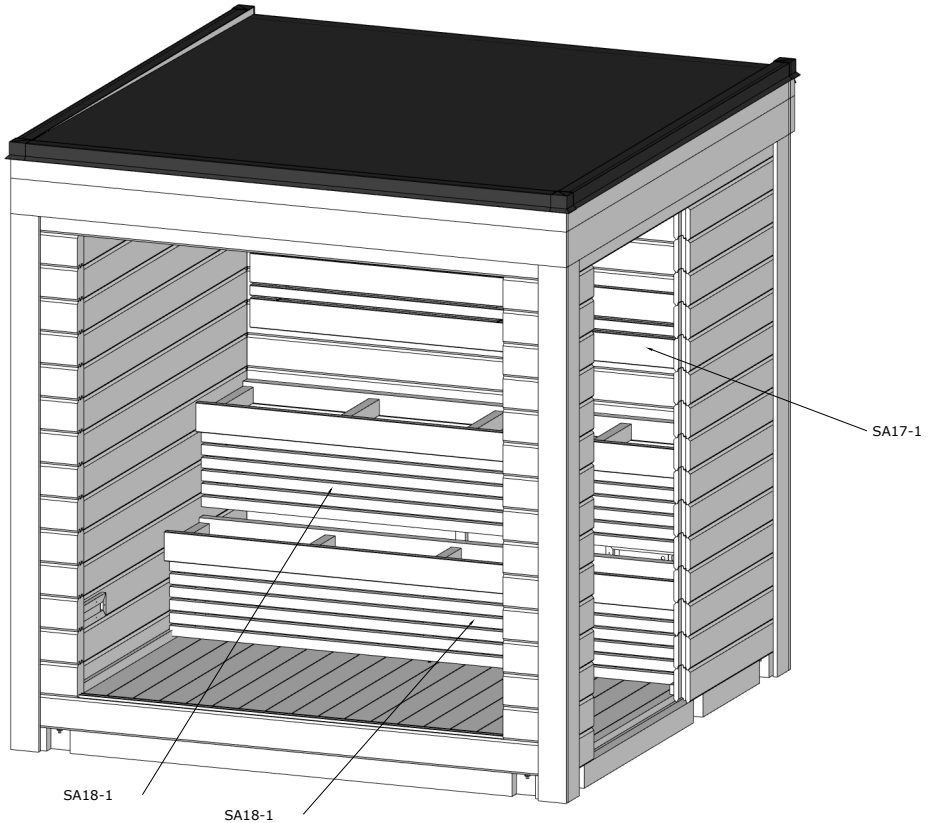

SA17-1
SA18-1
SA18-1

1. SAP

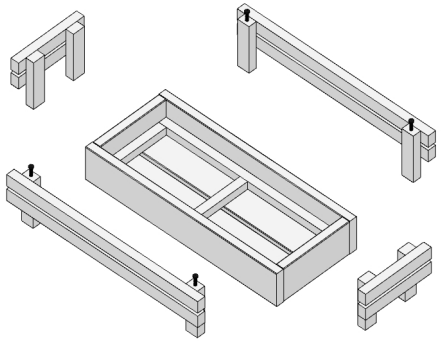


SA05-1 / SA06-1

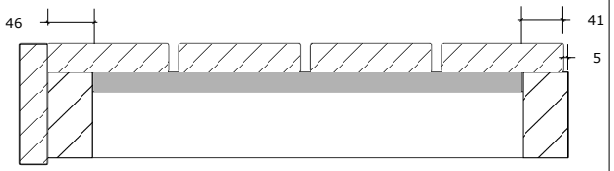


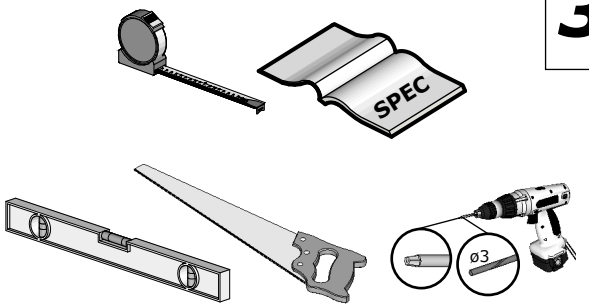



2. SAP

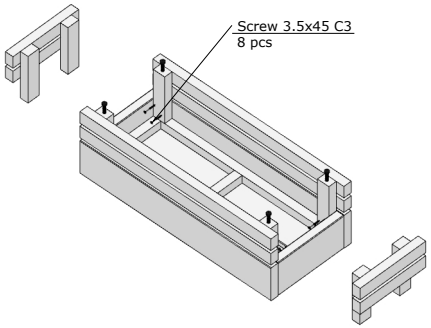



3. SAP

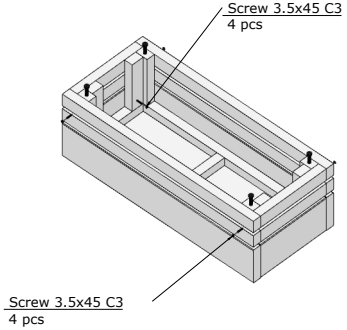


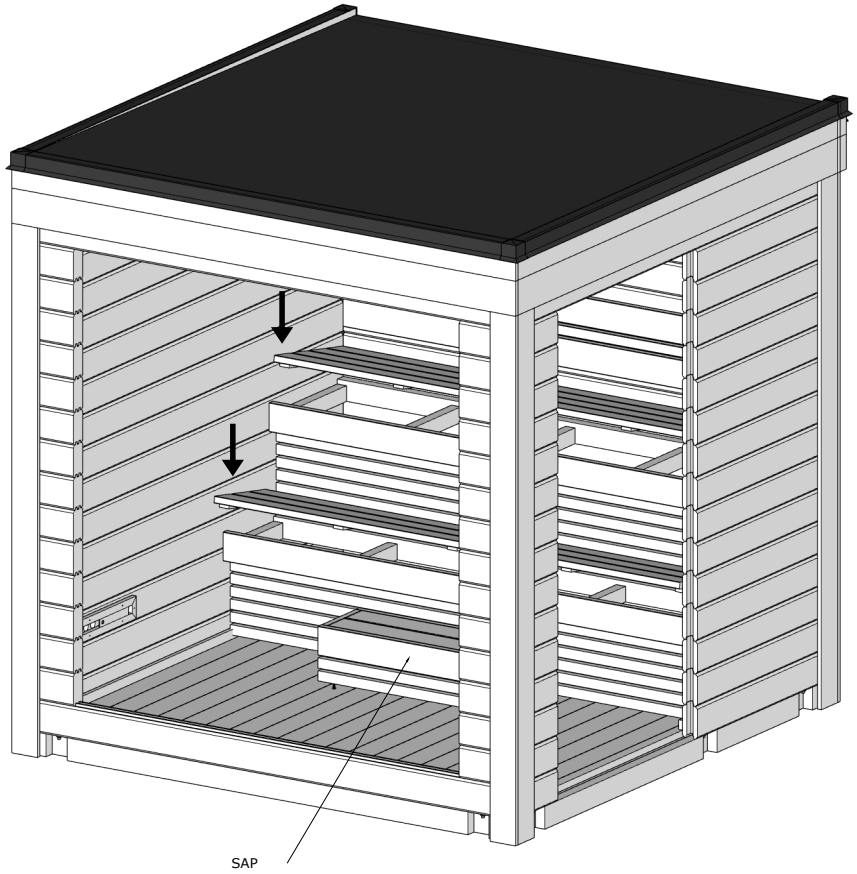


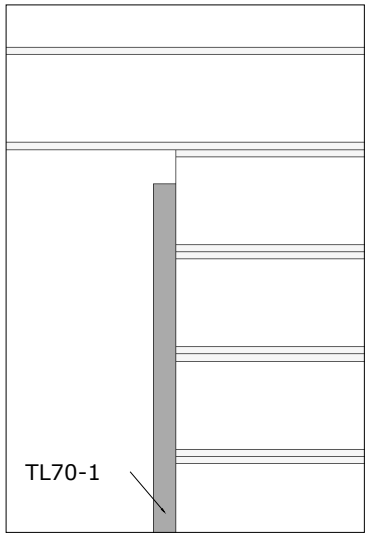

TL70-1

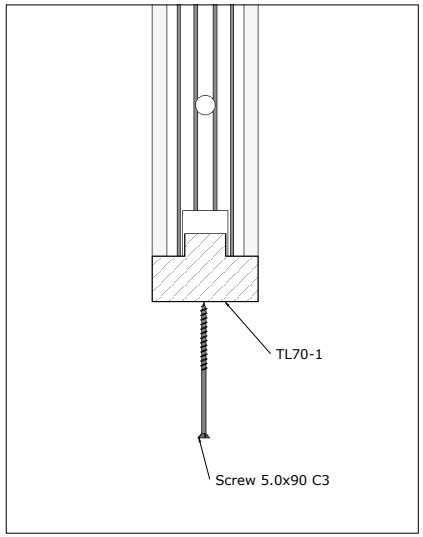

TL70-1
Screw 5.0x90 C3

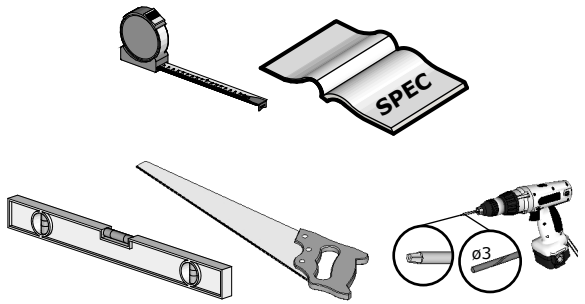

SPEC
ø3

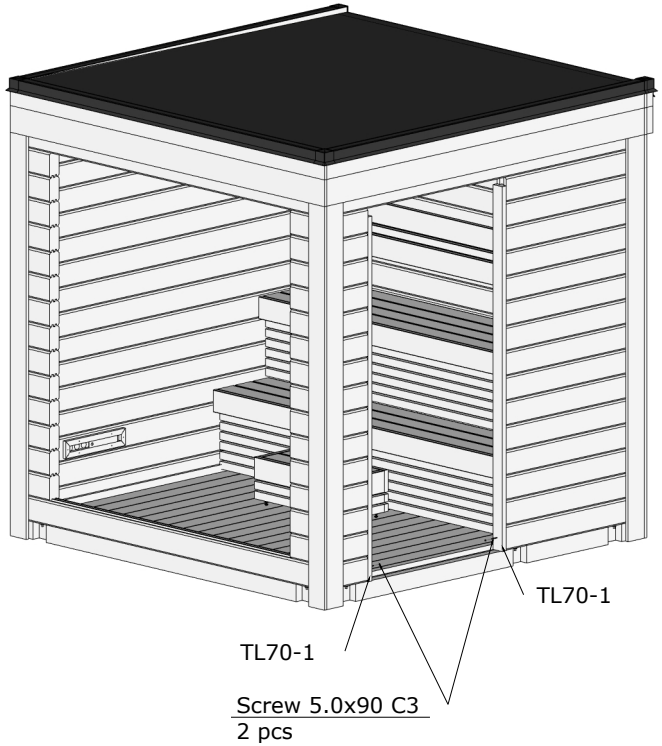
TL70-1
TL70-1
Screw 5.0x90 C3
2 pcs

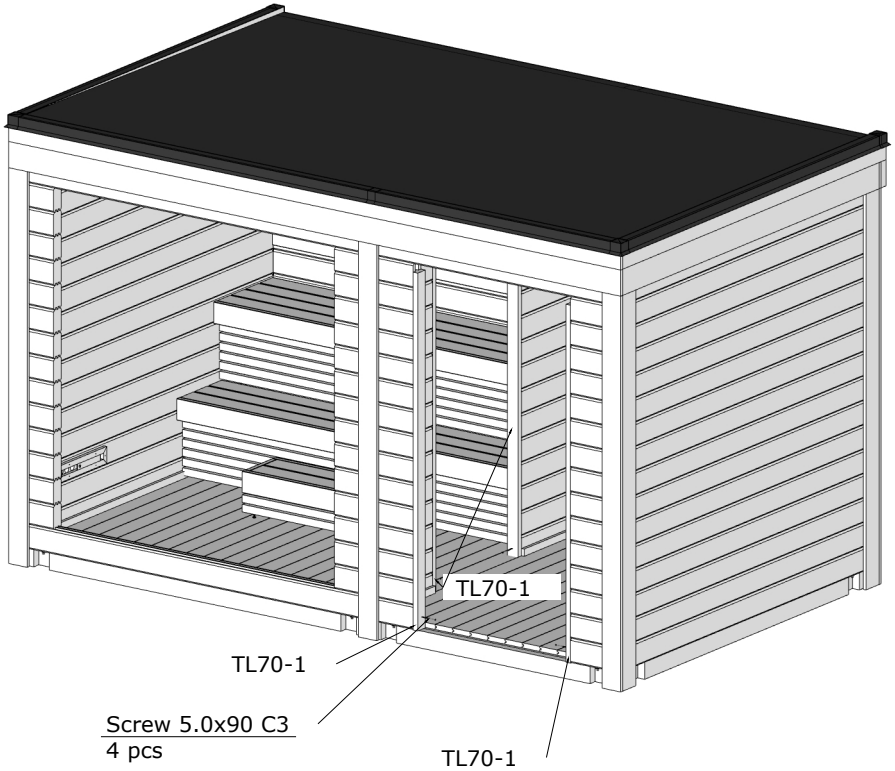

TL70-1
TL70-1
Screw 5.0x90 C3
4 pcs
TL70-1

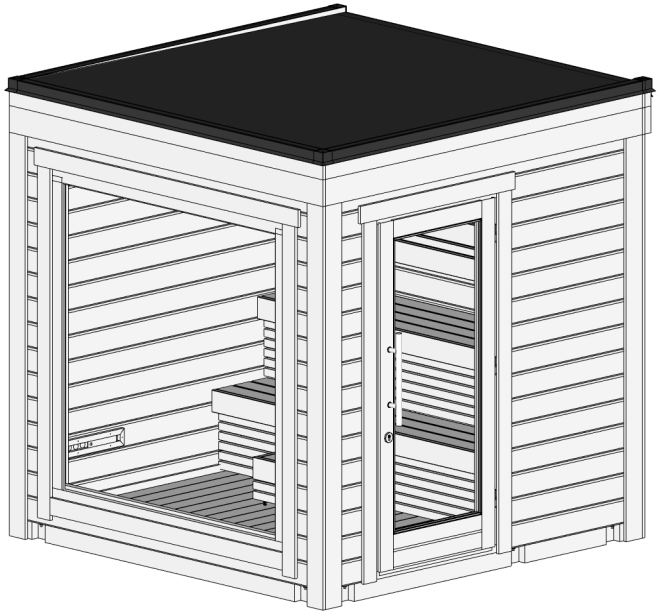


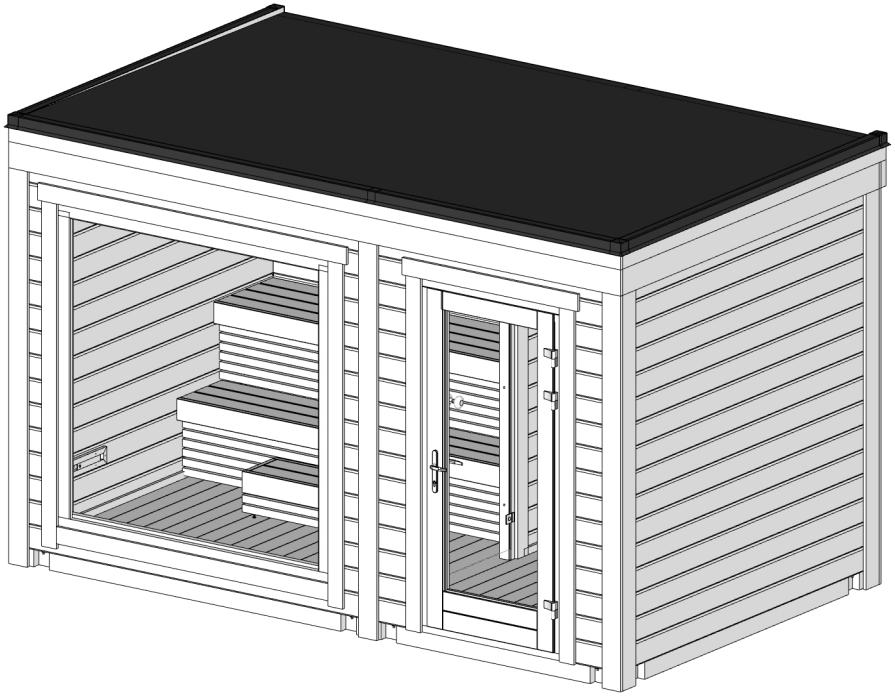

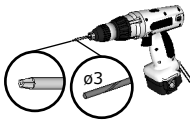

ø3



SPEC

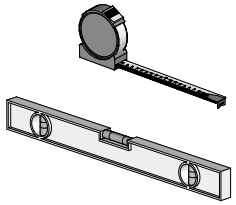


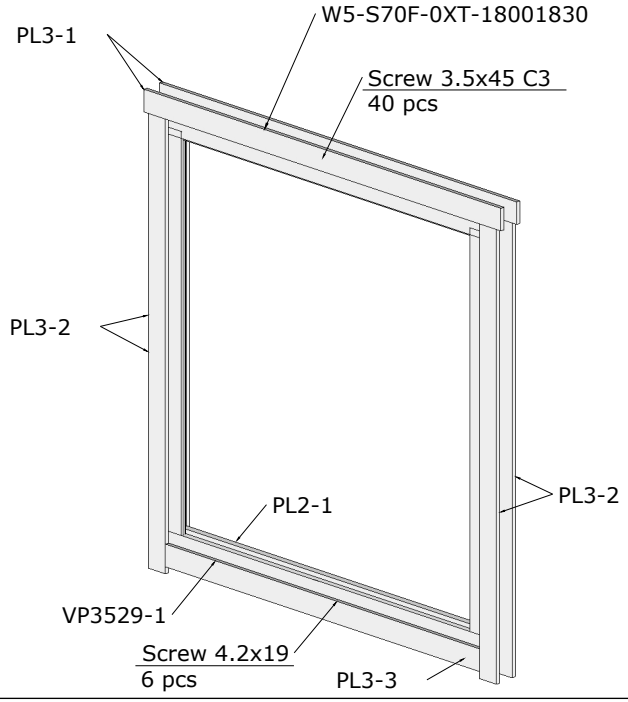

PL3-1
W5-S70F-0XT-18001830
Screw 3.5x45 C3
40 pcs
PL3-2
PL3-2
PL2-1
VP3529-1
Screw 4.2x19
6 pcs
PL3-3



D0-C70R-0XT-09401980
Screw 3.5x45 C3
28 pcs
PL3-5
PL3-4

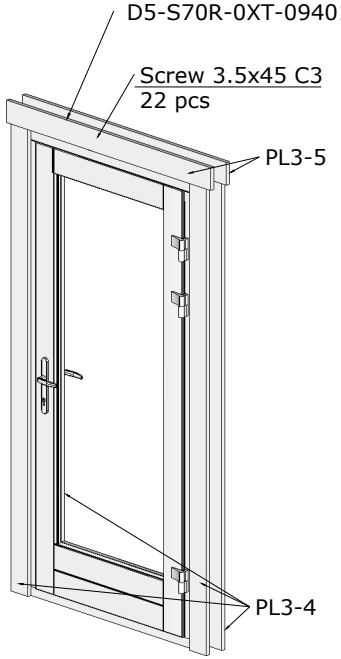

D5-S70R-0XT-09401980
Screw 3.5x45 C3
22 pcs
PL3-5
PL3-4

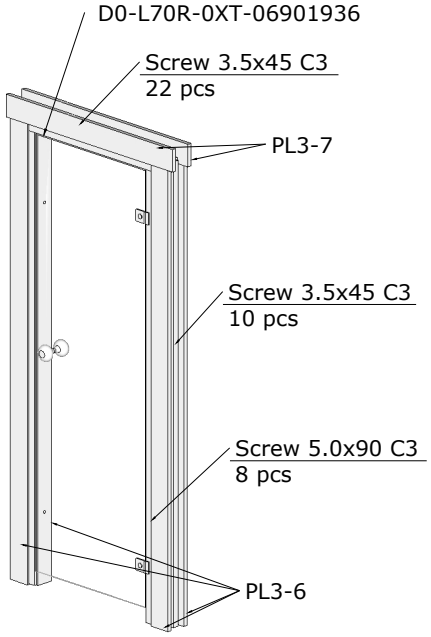

D0-L70R-0XT-06901936
Screw 3.5x45 C3
22 pcs
PL3-7
Screw 3.5x45 C3
10 pcs
Screw 5.0x90 C3
8 pcs
PL3-6

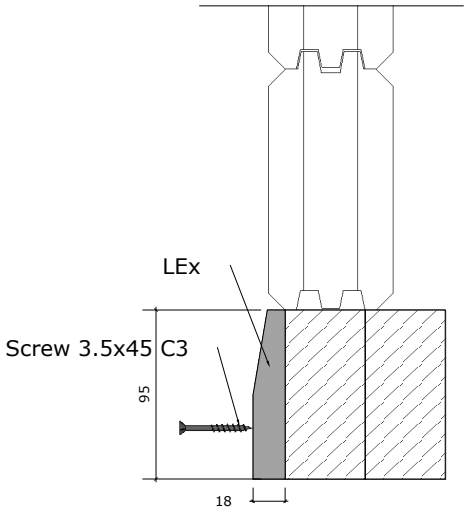
LEx
Screw 3.5x45 C3
95
18

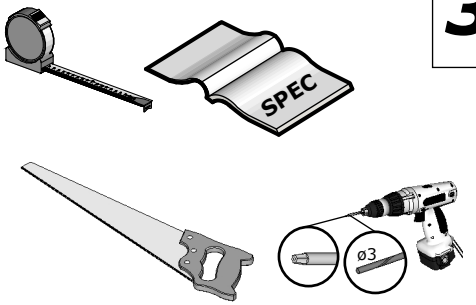

SPEC
ø3

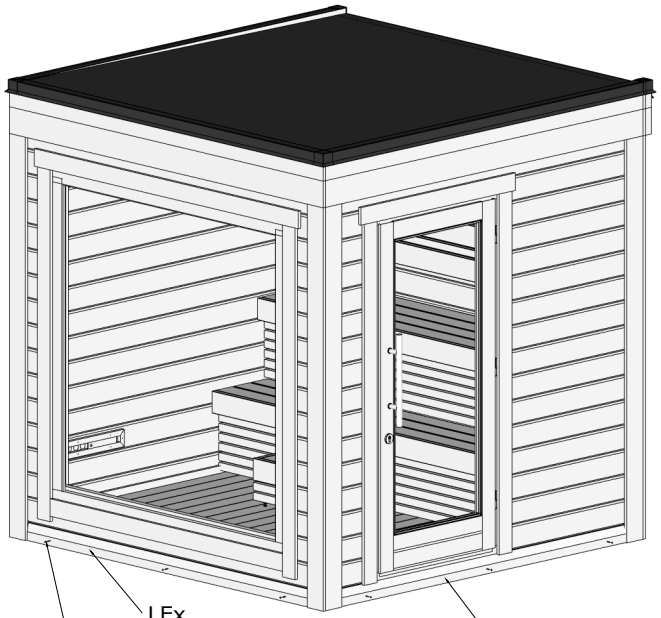
LEx
18x95
LEx
18x95
Screw 3.5x45 C3
12 pcs

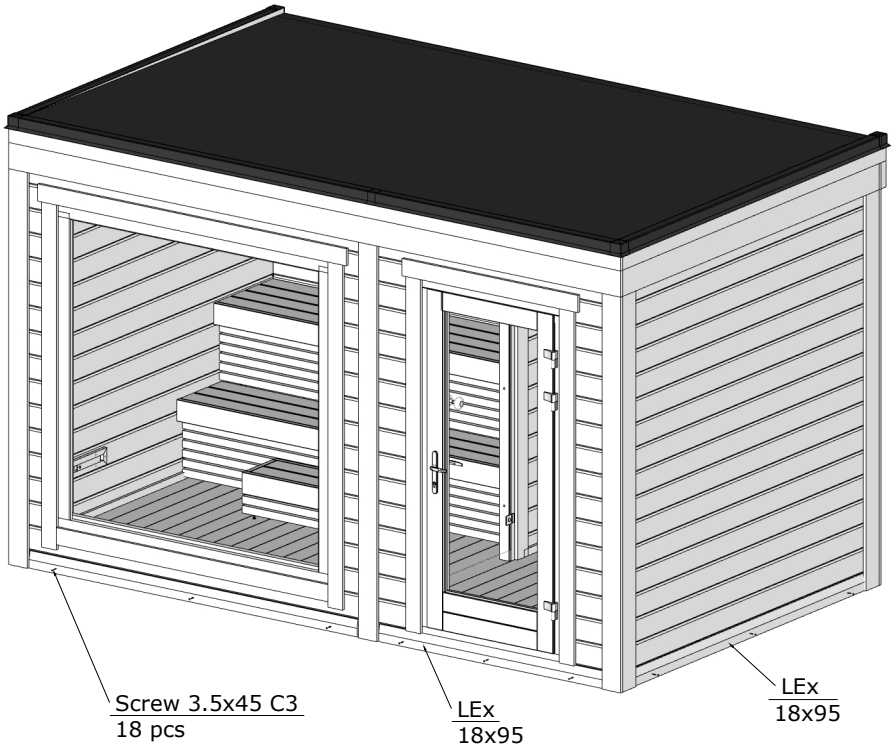

Screw 3.5x45 C3
18 pcs
LEx
18x95
LEx
18x95

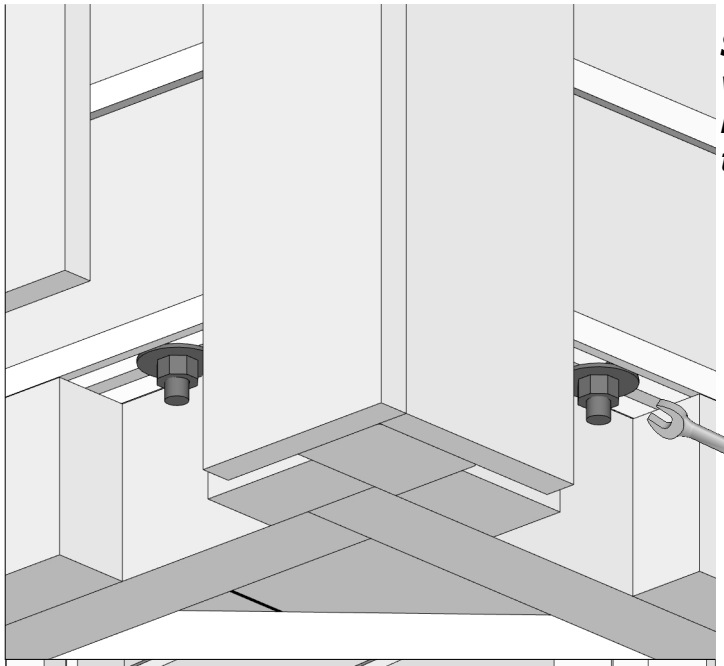


Since this is a sauna with settling walls, the walls must be retightened from time to time by tightening the threaded rods.

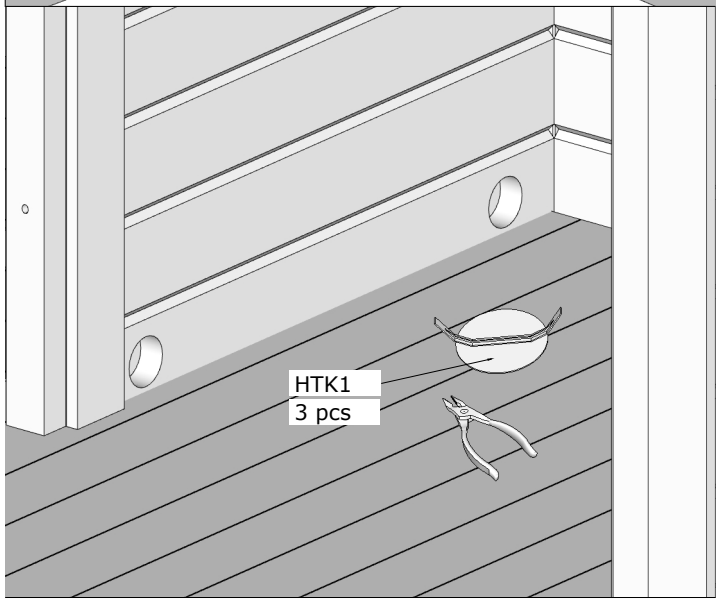

For Sauna Cube L. Cover lid for Wall B.

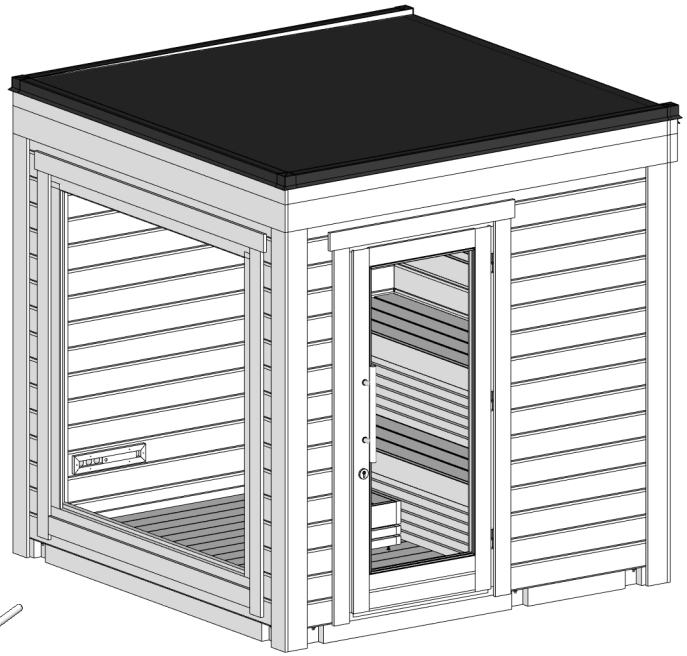

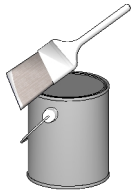

The sauna must be treated with a suitable wood finish as soon as possible after installation to protect the structure against moisture, mold, and wood decay, and to ensure long-term durability. Regular maintenance and re-treatment of all wooden surfaces, both inside and outside, should be carried out as required, typically at least once per year, depending on usage and environmental conditions.

